


REPLACEMENT

HINT:

- Replacement procedure of the LH side is the same as that for the RH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION (See page 60-1)**
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
 3. **REMOVE FRONT DOOR SCUFF PLATE RH (See page 76-22)**
 4. **REMOVE REAR DOOR SCUFF PLATE RH (See page 76-22)**
 5. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page 61-5)**
 6. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (See page 61-5)**
 7. **REMOVE CENTER PILLAR GARNISH LOWER RH (See page 61-5)**
 8. **REMOVE FRONT SEAT OUTER BELT ASSY RH (See page 61-5)**

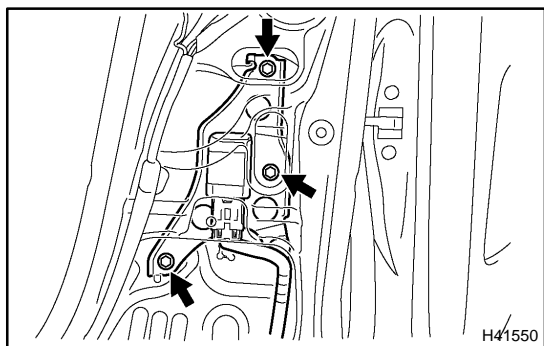

9. **REMOVE SIDE AIR BAG SENSOR ASSY RH**
 - (a) Disconnect the connector from the side airbag sensor assy RH.
 - (b) Remove the 3 bolts and the side airbag sensor assy RH.

10. **INSTALL SIDE AIR BAG SENSOR ASSY RH**

- (a) Check that the ignition switch is off.
 - (b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the side airbag sensor assy RH with the 3 bolts.

Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

NOTICE:

- If the side airbag sensor assy RH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace the side airbag sensor assy RH with a new one.
 - When installing the side airbag sensor assy RH, be careful that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (d) Connect the connector to the side airbag sensor assy RH.
 - (e) Check that there is no looseness in the installation parts of the side airbag sensor assy RH.
 11. **INSPECT SRS WARNING LIGHT (See page 05-1456)**