


# SEAT BELT WARNING SYSTEM (From July, 2003)

## LOCATION

610GF-01


### Combination Meter

Driver Side Seat Belt Warning Lamp

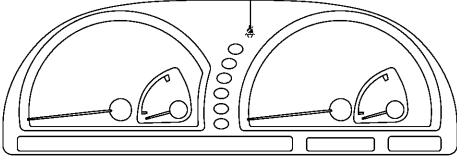

### Clock

Passenger Side Seat Belt Warning Lamp



Instrument Panel J/B

- IG1 Relay
- GAUGE1 Fuse
- AM1 Fuse


Airbag Sensor Assy

Front Seat Inner Belt LH

Occupant Classification ECU

Front Seat Inner Belt RH

### Passenger Seat

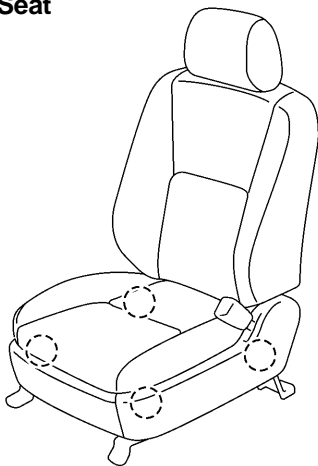

Occupant Classification Sensor Front

Occupant Classification Sensor Rear

