


TERMINALS OF ECU

1. AIRBAG SENSOR ASSY CENTER

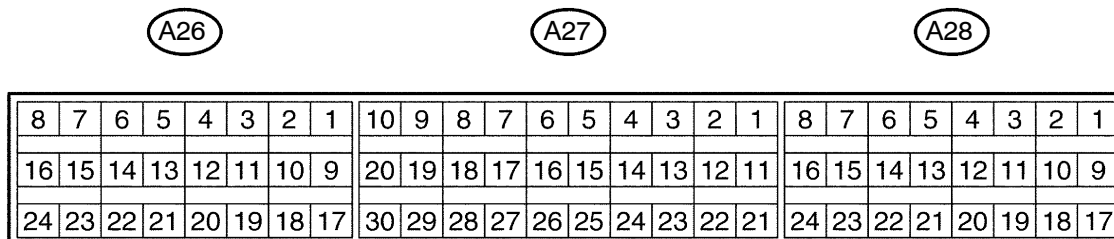

P

H43423

Terminal No.	Terminal Symbol	Destination
A26-1	SFD+	Front seat airbag assy LH (Side squib (D seat side)) (*2) Front seat airbag assy RH (Side squib (D seat side)) (*3)
A26-2	SFD-	Front seat airbag assy LH (Side squib (D seat side)) (*2) Front seat airbag assy RH (Side squib (D seat side)) (*3)
A26-3 (*1)	ICD-	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib) (*2) Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib) (*3)
A26-4 (*1)	ICD+	Curtain shield airbag assy LH (Curtain shield airbag (D seat side) squib) (*2) Curtain shield airbag assy RH (Curtain shield airbag (D seat side) squib) (*3)
A26-5	PD+	Front seat outer belt assy LH (P/T squib (D seat side)) (*2) Front seat outer belt assy RH (P/T squib (D seat side)) (*3)
A26-6	PD-	Front seat outer belt assy LH (P/T squib (D seat side)) (*2) Front seat outer belt assy RH (P/T squib (D seat side)) (*3)
A26-9	DSP+	Seat position airbag sensor
A26-10	DBE+	Front seat inner belt assy LH (*2) Front seat inner belt assy RH (*3)
A26-17	DSP-	Seat position airbag sensor
A26-18	DBE-	Front seat inner belt assy LH (*2) Front seat inner belt assy RH (*3)
A26-19	VUPD	Side airbag sensor assy LH (*2) Side airbag sensor assy RH (*3)
A26-20 (*1)	VUCD	Airbag sensor rear LH (*2) Airbag sensor rear RH (*3)
A26-21	ESD	Side airbag sensor assy LH (*2) Side airbag sensor assy RH (*3)
A26-22 (*1)	ESCD	Airbag sensor rear LH (*2) Airbag sensor rear RH (*3)
A27-1	P2+	Front passenger airbag assy (P squib (Dual stage - 2nd step))
A27-2	P2-	Front passenger airbag assy (P squib (Dual stage - 2nd step))
A27-3	P-	Front passenger airbag assy (P squib)
A27-4	P+	Front passenger airbag assy (P squib)
A27-5	D+	Horn button assy (D squib)

Terminal No.	Terminal Symbol	Destination
A27-6	D-	Horn button assy (D squib)
A27-7	D2-	Horn button assy (D squib (Dual stage - 2nd step))
A27-8	D2+	Horn button assy (D squib (Dual stage - 2nd step))
A27-14	LA	Combination meter assy (SRS warning light)
A27-15	TC	DLC3
A27-16	SIL	DLC3
A27-21	IG2	IG2 Fuse (Power source)
A27-25	E1	Ground
A27-26	E2	Ground
A27-27	-SR	Airbag sensor front RH
A27-28	-SL	Airbag sensor front LH
A27-29	+SR	Airbag sensor front RH
A27-30	+SL	Airbag sensor front LH
A28-3	PP-	Front seat outer belt assy RH (P/T squib (P seat side)) (*2) Front seat outer belt assy LH (P/T squib (P seat side)) (*3)
A28-4	PP+	Front seat outer belt assy RH (P/T squib (P seat side)) (*2) Front seat outer belt assy LH (P/T squib (P seat side)) (*3)
A28-5 (*1)	ICP+	Curtain shield airbag assy RH (Curtain shield airbag (P seat side) squib) (*2) Curtain shield airbag assy LH (Curtain shield airbag (P seat side) squib) (*3)
A28-6 (*1)	ICP-	Curtain shield airbag assy RH (Curtain shield airbag (P seat side) squib) (*2) Curtain shield airbag assy LH (Curtain shield airbag (P seat side) squib) (*3)
A28-7	SFP-	Front seat airbag assy RH (Side squib (P seat side)) (*2) Front seat airbag assy LH (Side squib (P seat side)) (*3)
A28-8	SFP+	Front seat airbag assy RH (Side squib (P seat side)) (*2) Front seat airbag assy LH (Side squib (P seat side)) (*3)
A28-19 (*1)	ESCP	Airbag sensor assy RH (*2) Airbag sensor assy LH (*3)
A28-20	ESP	Side airbag sensor assy RH (*2) Side airbag sensor assy LH (*3)
A28-21 (*1)	VUCP	Airbag sensor assy RH (*2) Airbag sensor assy LH (*3)
A28-22	VUPP	Side airbag sensor assy RH (*2) Side airbag sensor assy LH (*3)

*1: w/ Curtain shield airbag

*2: LHD

*3: RHD