


# MAP DISC CANNOT BE INSERTED


## WIRING DIAGRAM

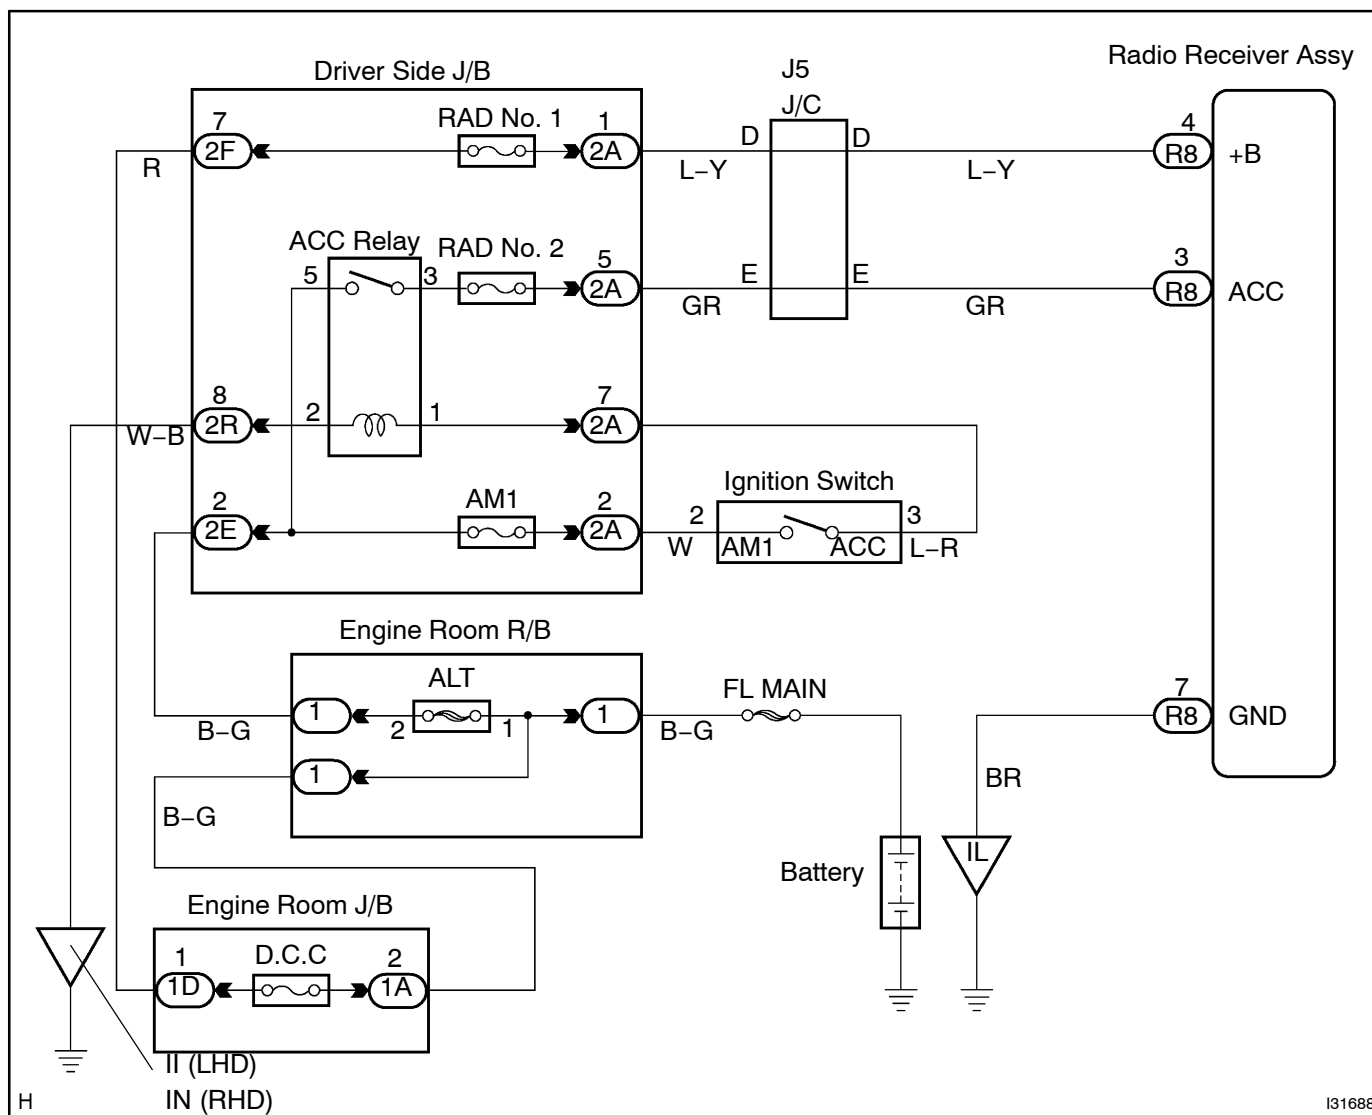

I31688

INSPECTION PROCEDURE

1 INSPECT NAVIGATION ECU(+B, ACC, GND)

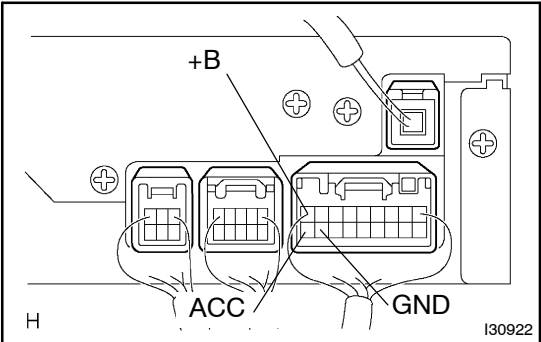

- (a) Remove the navigation ECU with connectors with still connected.
- (b) Check voltage.
  - (1) Measure voltage between terminals +B, ACC and GND of navigation ECU at each conditions, as shown in the chart.

Standard:

| Terminal  | Condition                | Voltage (v) |
|-----------|--------------------------|-------------|
| +B ⇔ GND  | Constant                 | 10 - 14 V   |
| ACC ⇔ GND | Turn ignition switch ACC | 10 - 14 V   |

- (c) Check continuity.
  - (1) Check that the continuity exists between terminal GND of navigation ECU and body ground.

Standard: Continuity exists.

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE NAVIGATION ECU