



ADJUSTABLE PEDAL RELAY INSPECTION

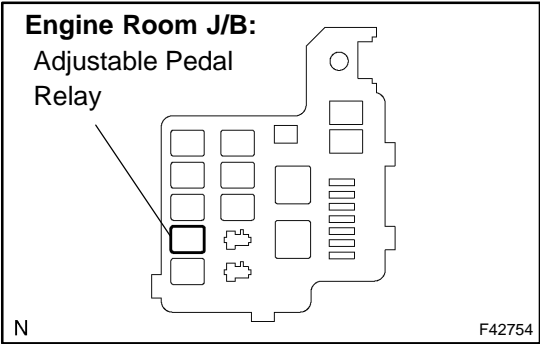

- 1. REMOVE ADJUSTABLE PEDAL RELAY**
(a) Remove the adjustable pedal relay from the engine room J/B.

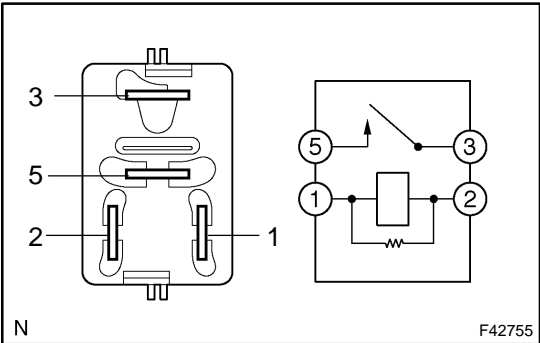

2. INSPECT ADJUSTABLE PEDAL RELAY

| Condition | Tester condition | Specified condition |
|------------------------------------|------------------|---------------------|
| Constant | 1 – 2 | Continuity |
| | 3 – 5 | No continuity |
| Apply +B between terminals 1 and 2 | 3 – 5 | continuity |

- 3. INSTALL ADJUSTABLE PEDAL RELAY**
(a) Install the adjustable pedal relay to the engine room J/B.