


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **REMOVE FRONT RH SEAT ASSY** (See page 72-15)

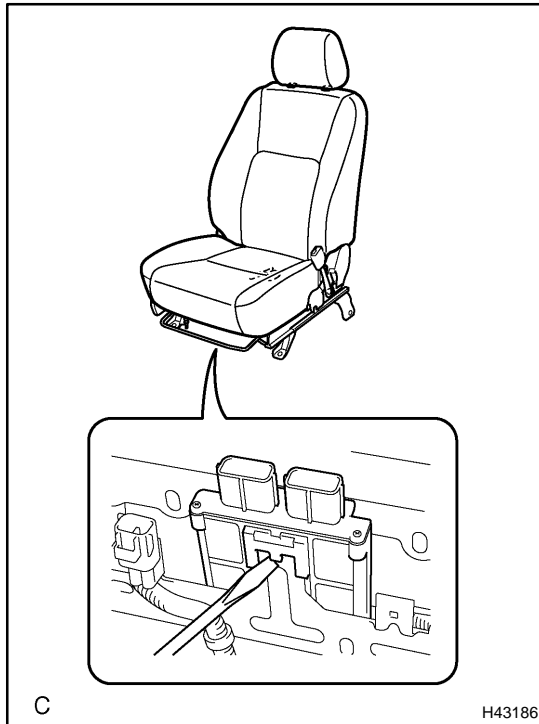

4. REMOVE OCCUPANT CLASSIFICATION ECU

- (a) Disconnect the connectors from the occupant classification ECU.
- (b) Using a screwdriver, remove the occupant classification ECU.

5. INSTALL OCCUPANT CLASSIFICATION ECU

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the occupant classification ECU.
- (d) Connect the connectors to the occupant classification ECU.

NOTICE:

- If the occupant classification ECU has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the occupant classification ECU with a new one.
 - When installing the occupant classification ECU, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
6. **INSTALL FRONT RH SEAT ASSY** (See page 72-15)
 7. **OCCUPANT CLASSIFICATION ECU INITIALIZATION** (See page 05-1452)
 8. **INSPECT SRS WARNING LIGHT** (See page 05-1456)