

MAP DISC CANNOT BE EJECTED

INSPECTION PROCEDURE

1 CHECK RADIO AND NAVIGATION ASSY

- (a) Turn the ignition switch to the ACC position.
- (b) Keep pressing the "MAP" eject switch for 5 seconds and check if the disc is ejected by forced ejection.


Standard: The disc is ejected.

NG

**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1914)**

OK

2 CHECK THE MAP DISC

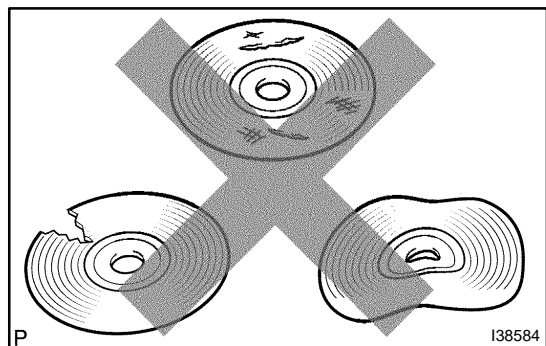

- (a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

NORMAL OPERATION