


FRONT NO.1 SPEAKER ASSY REPLACEMENT

6709J-01

HINT:


COMPONENTS: [See page 67-1](#)

1. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY
([See page 75-8](#))
2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH
([See page 75-8](#))
3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL PLUG LH
([See page 75-8](#))
4. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH
([See page 75-8](#))

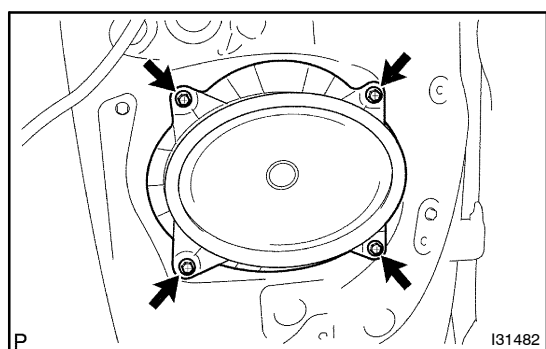

5. REMOVE FRONT NO.1 SPEAKER ASSY

- (a) Disconnect the connector.
- (b) Remove the 4 screws and front No.1 speaker assy.

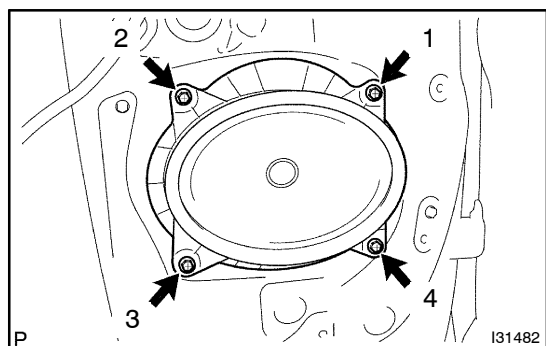

6. INSTALL FRONT NO.1 SPEAKER ASSY

- (a) Install the front No.1 speaker assy with the 4 screws.

NOTICE:

Install them in the order shown in the illustration.

- (b) Connect the connector.