


## Connector Joining Wire Harness and Wire Harness

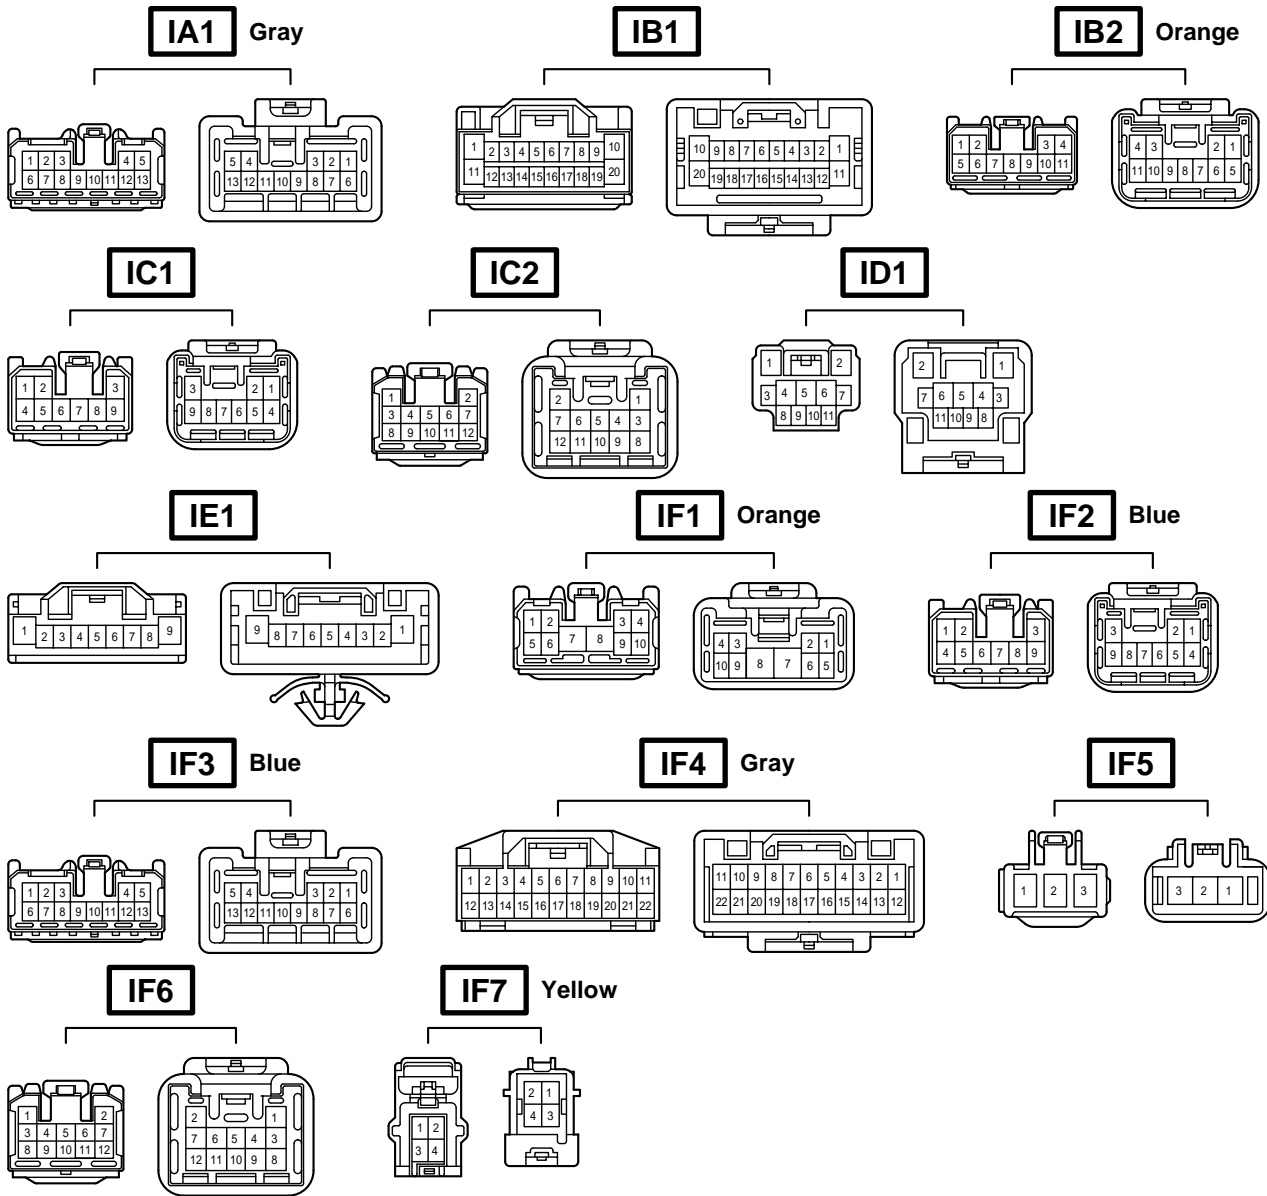

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Floor Wire (Left Kick Panel)
IB1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IC2	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID1	Engine Room Main Wire and Floor Wire (Left Side of Driver Side J/B)
IE1	Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar)
IF1	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF2	
IF3	
IF4	
IF5	
IF6	
IF7	