


## Connector Joining Wire Harness and Wire Harness

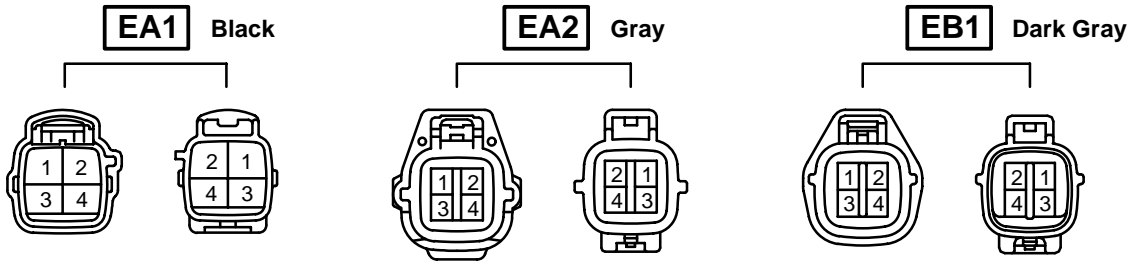

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Radiator Side Support LH)
EA2	
EB1	Engine Wire and Sensor Wire (Left Bank of Cylinder Head)