


NO SOUND CAN BE HEARD FROM THE SPEAKERS (AUDIO IS MUTE)

INSPECTION PROCEDURE

1 CHECK AUDIO SETTINGS

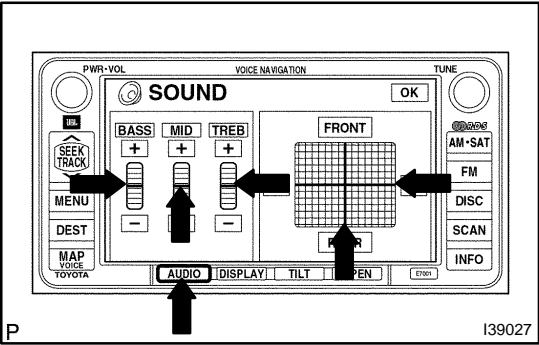

- (a) Enter the sound adjustment screen by pressing the "SOUND" switch on the AUDIO display.
- (b) Set volume, fader, and balance to the initial values and check that sound is normal.

Standard: Audio returns to normal.

HINT:
Sound quality adjustment items vary depending on the type of the amplifier.

OK END

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1914)