


FOG LAMP ASSY LH

REPLACEMENT

650C7-01

1. REMOVE ENGINE UNDER COVER LH
(See [page 76-2](#))

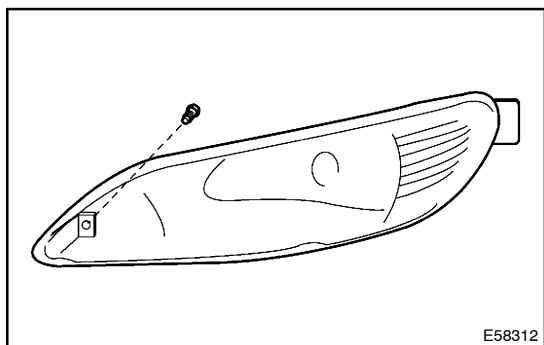

2. REMOVE FOG LAMP ASSY LH

- (a) Detach clip and pull out the fog light assy LH forward.