


NAVIGATION ECU REPLACEMENT

6709E-01

HINT:


COMPONENTS: [See page 67-1](#)

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE SPARE WHEEL COVER ASSY
3. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSY RH
4. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1
([See page 76-5](#))
5. REMOVE REAR FLOOR FINISH PLATE
([See page 76-5](#))
6. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER LH
([See page 76-5](#))

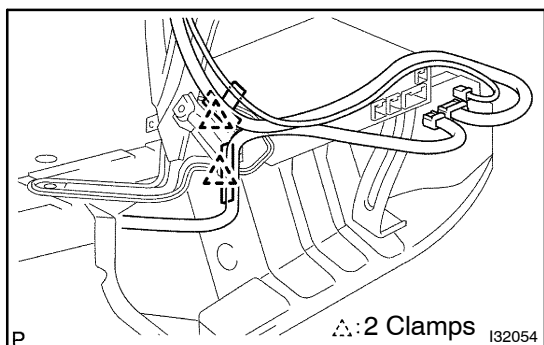


7. REMOVE NAVIGATION ECU

- (a) Disconnect the connectors and remove the 2 clamps.

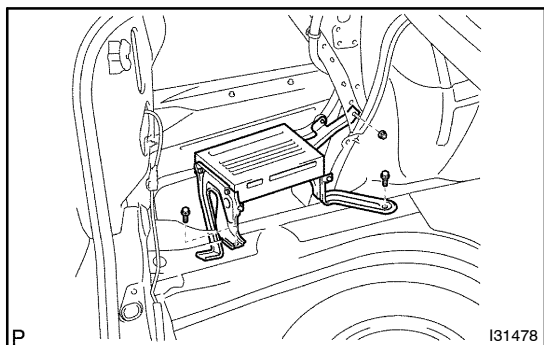


- (b) Remove the nut and 2 bolts, then remove the navigation ECU.

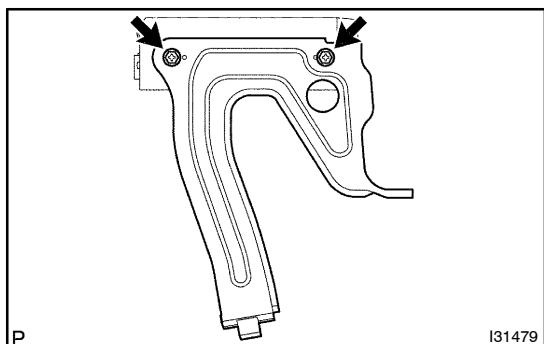

8. REMOVE DISC PLAYER BRACKET

- (a) Remove the 2 screws and disc player bracket.

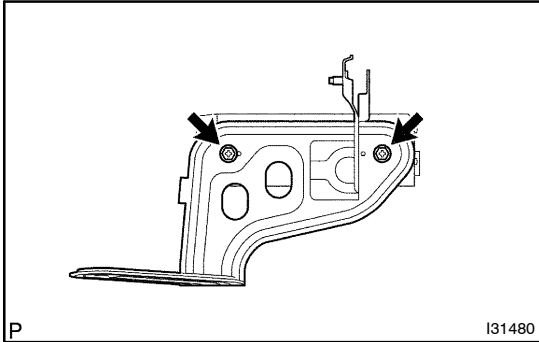**9. REMOVE DISC PLAYER BRACKET NO.2**

- (a) Remove the 2 screws and disc player bracket No.2.