


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD : 1MZ-FE]

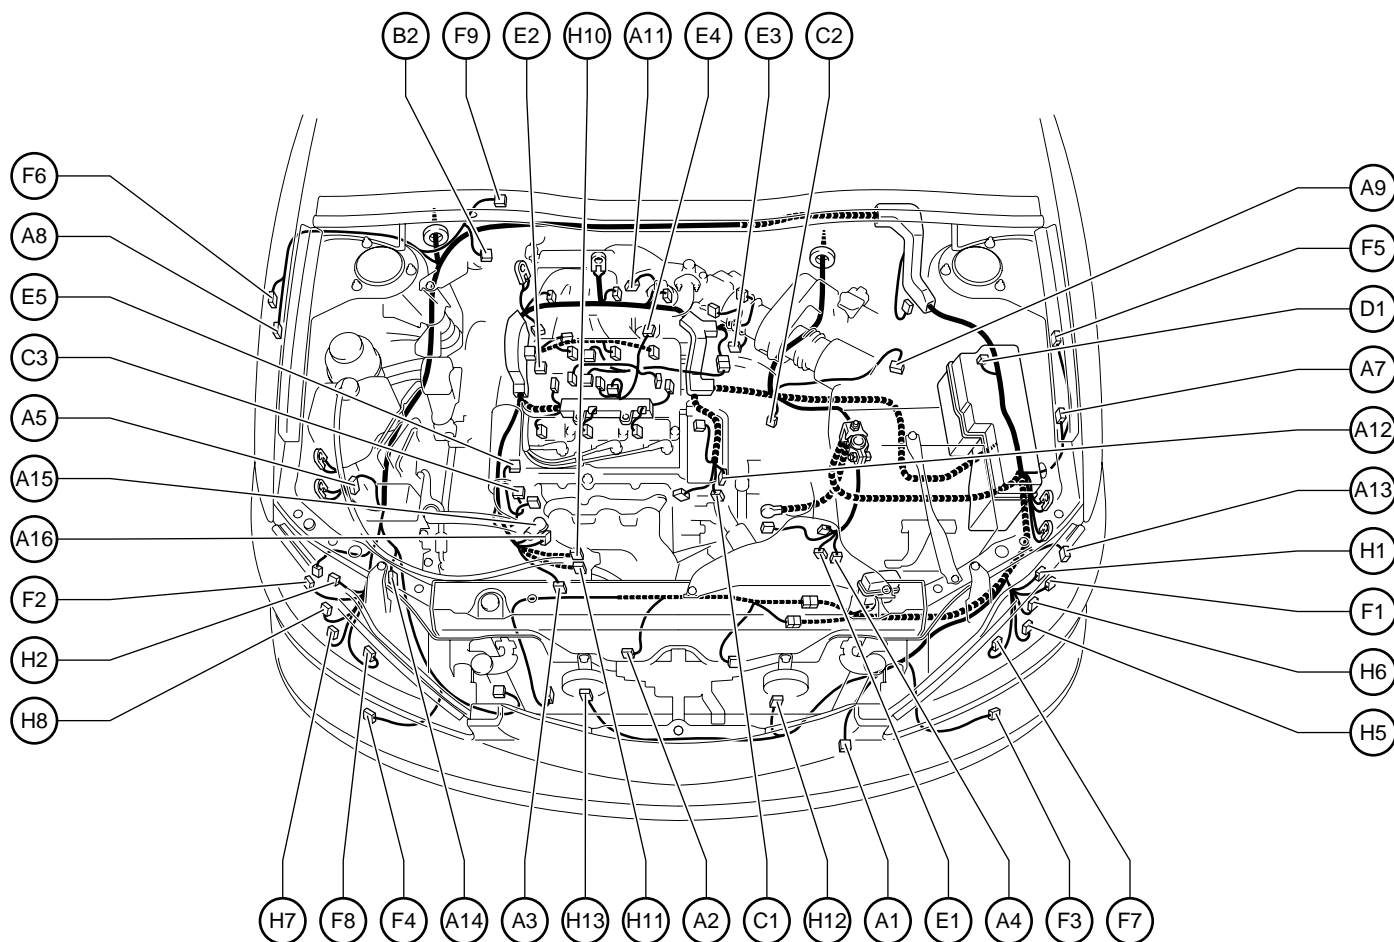

A 1 A/C Ambient Temp. Sensor
 A 2 A/C Condenser Fan Motor
 A 3 A/C Lock Sensor
 A/C Magnetic Clutch
 A 4 A/T Indicator Light SW
 Back-Up Light SW
 Neutral Start SW
 A 5 ABS & BA & TRC & VSC Actuator
 A 7 ABS Speed Sensor Front LH
 A 8 ABS Speed Sensor Front RH
 A 9 Air Flow Meter
 A 11 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
 A 12 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
 A 13 Airbag Sensor Front LH
 A 14 Airbag Sensor Front RH
 A 15 Alternator
 A 16 Alternator

B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor
 C 2 Counter Gear Speed Sensor
 C 3 Crankshaft Position Sensor

D 1 Diode (A/C No.1)

E 1 ECT Solenoid
 E 2 EFI Water Temp. Sensor
 E 3 EGR Gas Temp. Sensor
 E 4 EGR Valve Position Sensor
 E 5 Engine Oil Level Sensor

F 1 Front Clearance Light LH
 F 2 Front Clearance Light RH
 F 3 Front Fog Light LH
 F 4 Front Fog Light RH
 F 5 Front Side Turn Signal Light LH
 F 6 Front Side Turn Signal Light RH
 F 7 Front Turn Signal Light LH
 F 8 Front Turn Signal Light RH
 F 9 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 5 Headlight LH (High)
 H 6 Headlight LH (Low)
 H 7 Headlight RH (High)
 H 8 Headlight RH (Low)
 H 10 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H 11 Heated Oxygen Sensor (Bank 2 Sensor 2)
 H 12 Horn (High)
 H 13 Horn (Low)