


CRANKSHAFT POSITION SENSOR (2AZ-FE)(From July, 2003)

REPLACEMENT

1809T-03


HINT:

A bolt without torque specification is a standard bolt (see page 03-2).

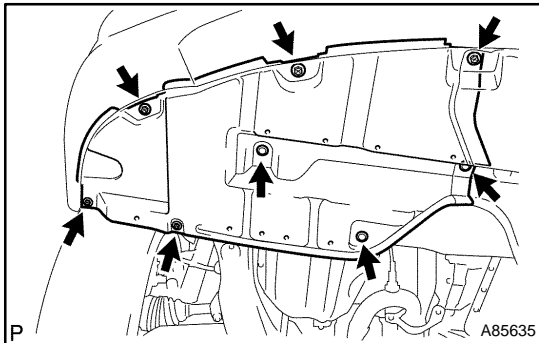


1. REMOVE ENGINE UNDER COVER RH

- (a) Remove the 5 screws, 3 clips and the under cover.

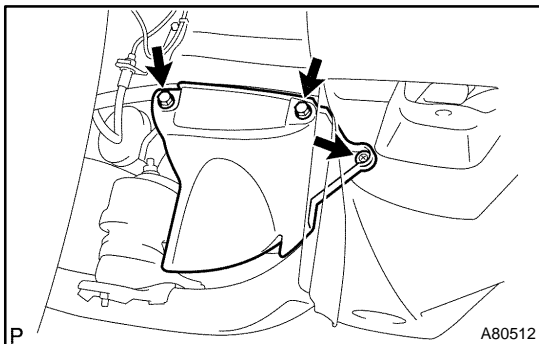

2. REMOVE FRONT FENDER APRON SEAL RH

- (a) Remove the clip, 2 bolts and apron seal.

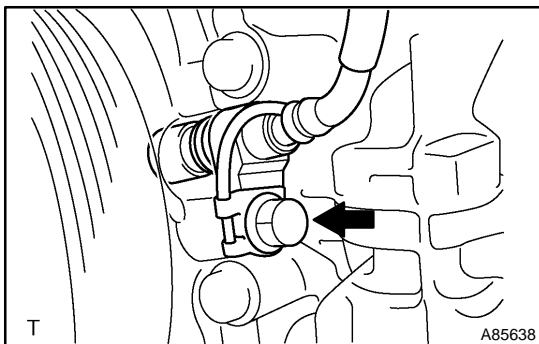

3. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the sensor connector.
(b) Remove the bolt, clamp and sensor.

4. INSTALL CRANKSHAFT POSITION SENSOR

Torque: 9.0 N·m (92 kgf·cm, 80 in.·lbf)

5. INSTALL FRONT FENDER APRON SEAL RH

6. INSTALL ENGINE UNDER COVER RH