


STEERING PAD SWITCH RH REPLACEMENT

671DY-01


HINT:

- COMPONENTS: (SEE PAGE 67-1).
 - Installation is in the reverse order of removal.
1. PRECAUTION (SEE PAGE 60-1)
 2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
 3. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PUB. NO. RM915E, PAGE 50-6)
 4. REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PUB. NO. RM915E, PAGE 50-6)
 5. REMOVE HORN BUTTON ASSY (SEE PAGE 60-19)

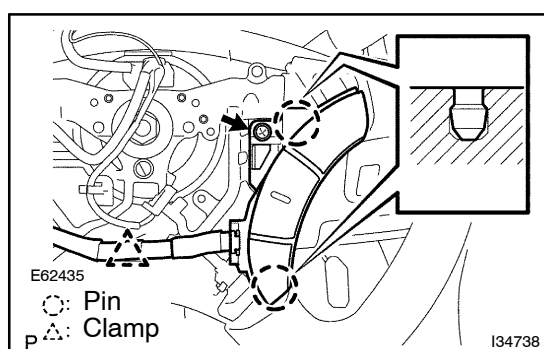


6. REMOVE STEERING PAD SWITCH RH


- (a) Remove the screw.
- (b) Remove the clamp.
- (c) Disengage the 2 pins and release the steering pad switch RH from the steering wheel.

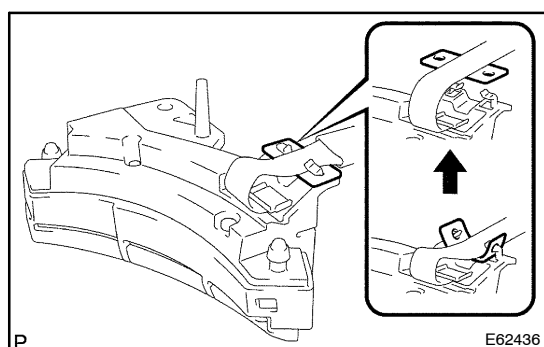

- (d) Release the tab of steering pad switch cable from the steering pad switch RH as shown in the illustration.

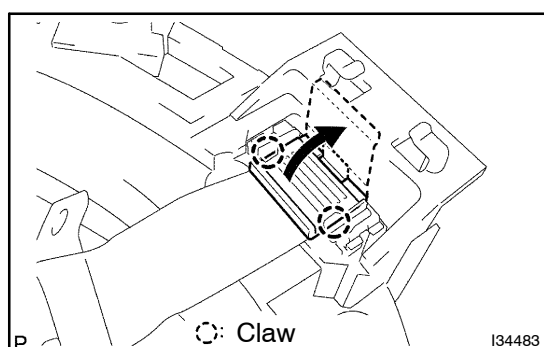

- (e) Disengage the 2 claws as shown in the illustration and open the latch on the top of the connector.

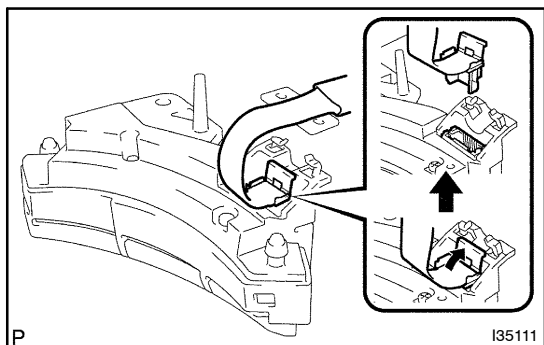

- (f) Pull out the connector while pinching the latch with fingers and disconnect the steering pad switch cable from the steering pad switch RH.

7. INSTALL HORN BUTTON ASSY (SEE PAGE 60-19)
8. CONNECT BATTERY NEGATIVE TERMINAL
9. INSPECT SRS WARNING LIGHT (SEE PAGE 60-19)