



FRONT BODY PILLAR LOWER GUSSET (ASSY) REPLACEMENT

1. REMOVE FRONT BODY PILLAR LOWER GUSSET

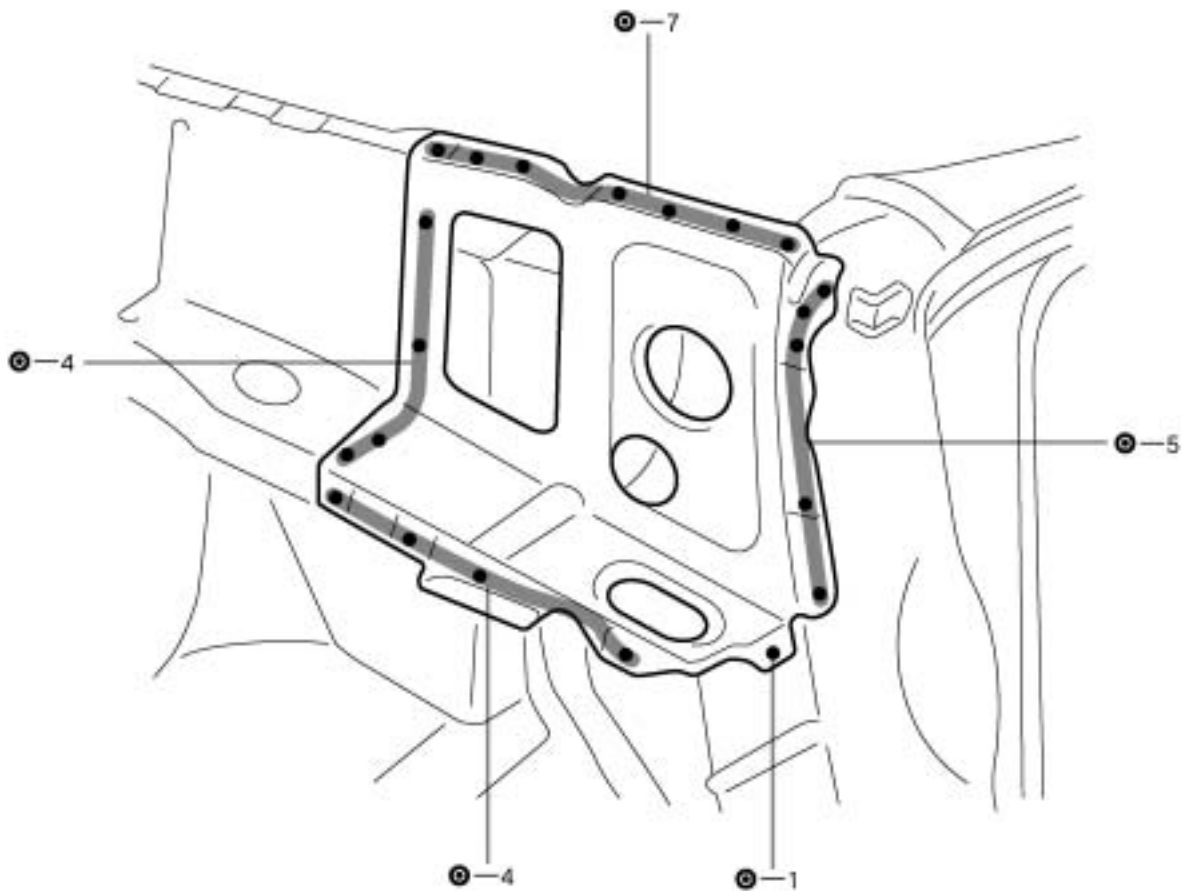

2. INSTALL FRONT BODY PILLAR LOWER GUSSET

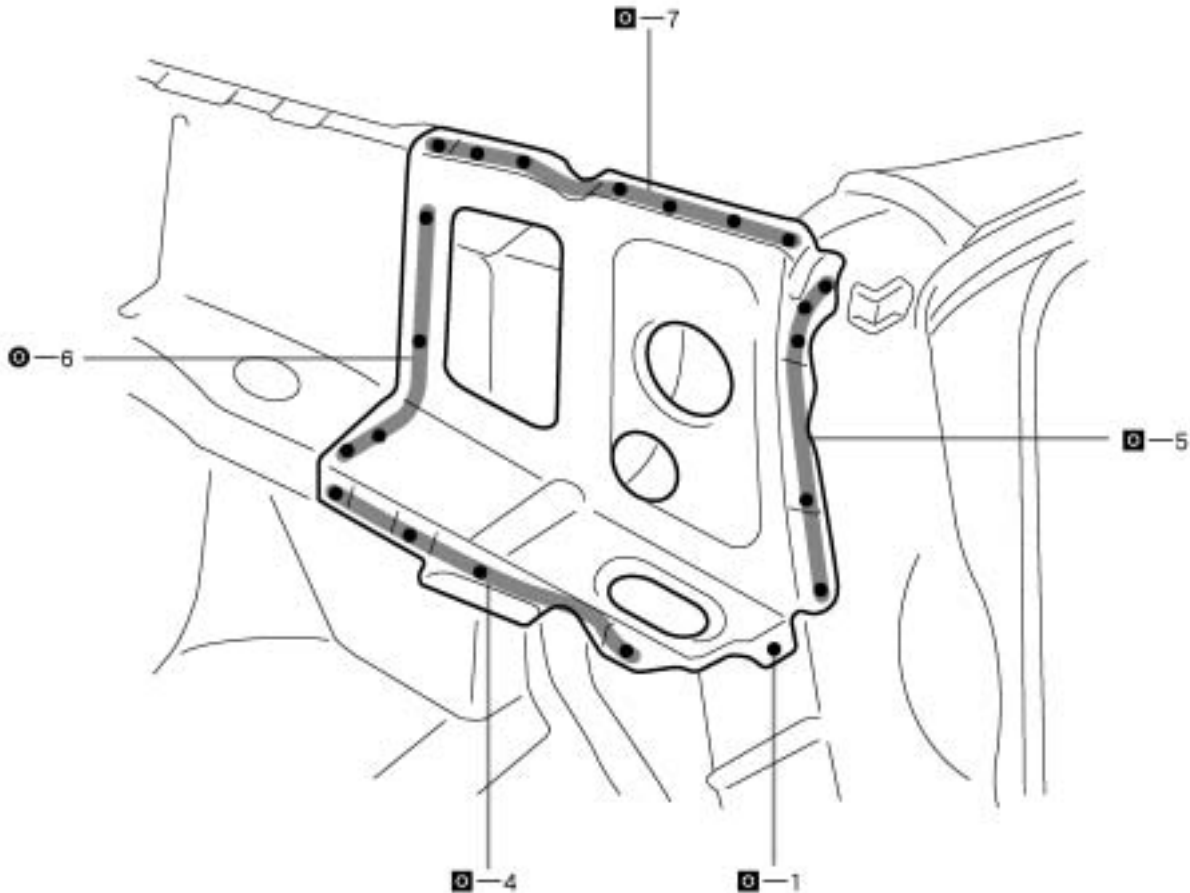

F12920A

3. APPLYING ANTI-RUST AGENT

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.