


FLOOR SHIFT PARKING LOCK CABLE ASSY (ATM)


REPLACEMENT

40113-03


1. PRECAUTION (SEE PAGE 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL
3. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 50-9) or (SEE PAGE 50-21)
4. REMOVE STEERING WHEEL COVER LOWER NO.3 (W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL) (SEE PAGE 50-9) or (SEE PAGE 50-21)
5. REMOVE CONNECTOR COVER (W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL) (SEE PAGE 50-9) or (SEE PAGE 50-21)
6. REMOVE STEERING WHEEL COVER LOWER NO.3 (3 SPOKE STEERING WHEEL ASSY) (SEE PAGE 50-9) or (SEE PAGE 50-21)
7. PLACE FRONT WHEELS FACING STRAIGHT AHEAD (SEE PAGE 50-9) or (SEE PAGE 50-21)
8. REMOVE HORN BUTTON ASSY (SEE PAGE 60-25)
9. REMOVE STEERING WHEEL ASSY (SEE PAGE 50-9) or (SEE PAGE 50-21)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
10. REMOVE INSTRUMENT CLUSTER FINISH PANEL (SEE PAGE 71-16)
11. REMOVE STEERING COLUMN COVER UPR (SEE PAGE 50-9) or (SEE PAGE 50-21)
12. REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 71-16)
13. REMOVE COWL SIDE TRIM SUB-ASSY LH (SEE PAGE 71-16)
14. REMOVE INSTRUMENT PANEL COIN BOX SUB-ASSY (SEE PAGE 71-16)
15. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL LH (SEE PAGE 71-16)
16. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH (SEE PAGE 71-16)
17. REMOVE CONSOLE BOX CARPET (SEE PAGE 71-16)
18. REMOVE RR CONSOLE BOX (SEE PAGE 71-16)
19. REMOVE FRONT ASH RECEPTACLE ASSY (W/ ASHTRAY) (SEE PAGE 71-16)
20. REMOVE CONSOLE BOX FRONT (SEE PAGE 71-16)
21. REMOVE AIR DUCT REAR NO.2 (SEE PAGE 71-16)
22. REMOVE AIR DUCT REAR NO.1 (SEE PAGE 71-16)
23. REMOVE CONSOLE BOX DUCT NO.1 (SEE PAGE 71-16)

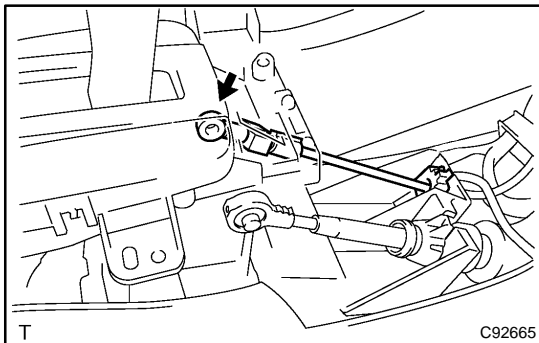


24. REMOVE FLOOR SHIFT PARKING LOCK CABLE ASSY
 - (a) Disconnect the parking lock cable end from the lever pin of the floor shift assembly.

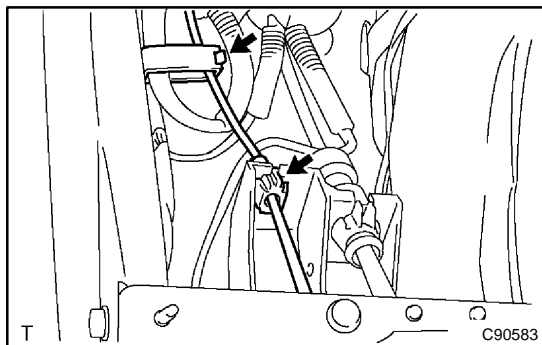


- (b) Using a screwdriver, disconnect the parking lock cable from the floor shift assembly and clamp.

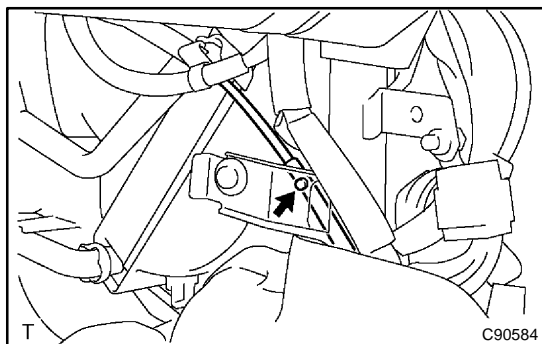

- (c) Disconnect the cable clamp.
(d) Turn the ignition switch to ACC or ON position.

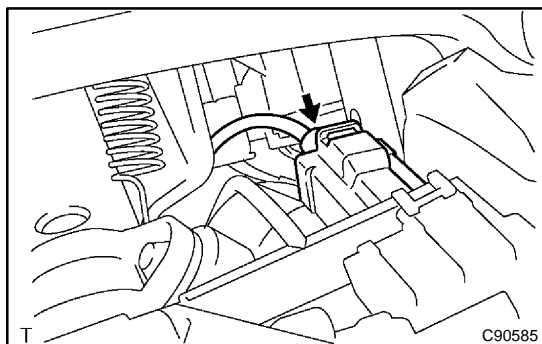


- (e) Using a screwdriver, remove the cable from the upper bracket.

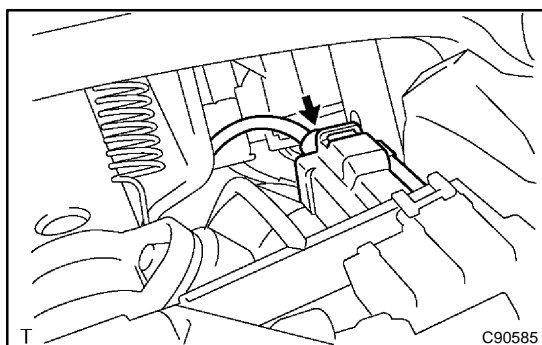


25. INSTALL FLOOR SHIFT PARKING LOCK CABLE ASSY


- (a) Turn the ignition switch to ACC or ON.
(b) Connect the cable to the upper bracket.

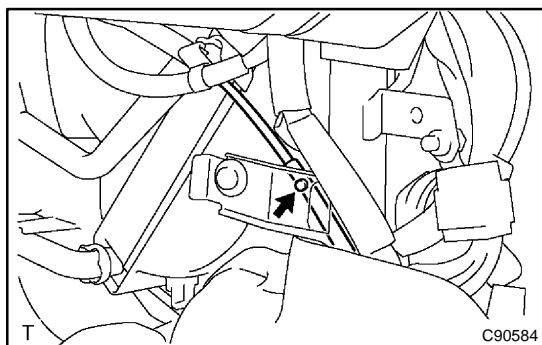

- (c) Connect the cable clamp.

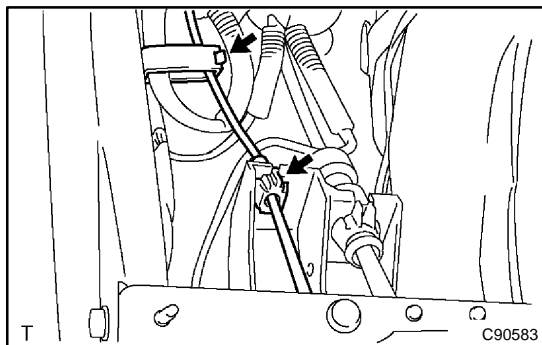

- (d) Insert the slide cap into the through hole and install.

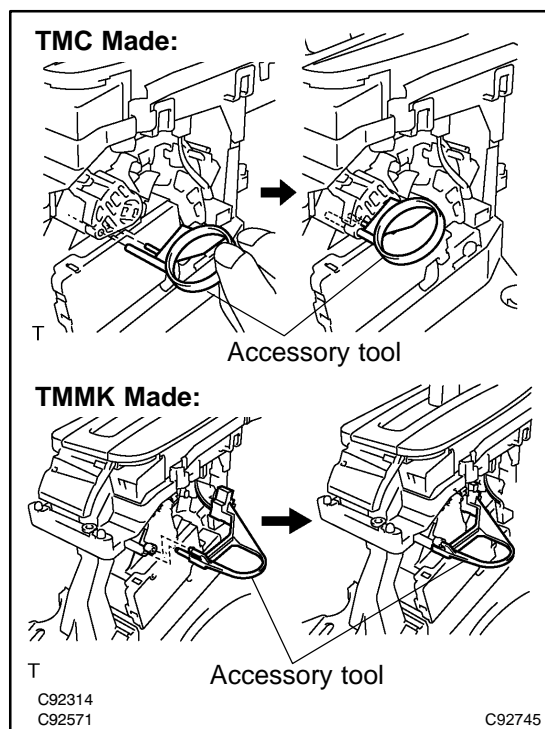


- (e) Set the accessory tool.
- (1) Shift the shift lever to P position and turn the ignition switch to LOCK position. (TMC made)
 - (2) Shift the shift lever to N position and turn the ignition switch to ACC position. (TMMK made)
 - (3) Set the accessory tool to the shift lock control unit assy.


Accessory tool parts No.:

TMC Made: 33693-33010


TMMK Made: 33693-06010

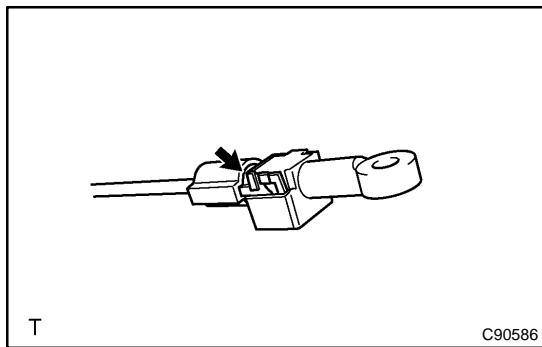

- (f) Using a screwdriver, unlock the claw of the lock key of automatic adjustment part.

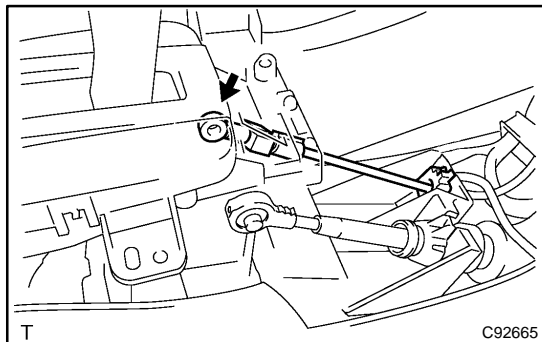

- (g) Insert the lever pin into the hole in the floor shift parking lock cable.

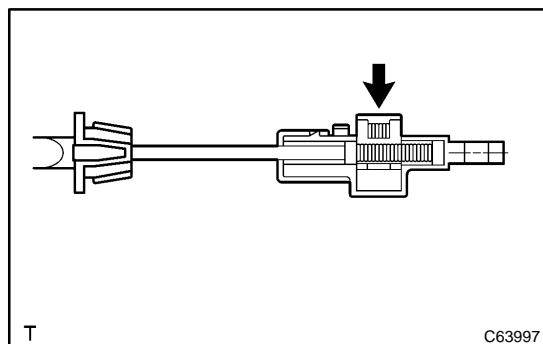

(h) Lock the lock key.

HINT:

- At this time, the shift lever should be in P position and the ignition key should be set to LOCK position. (TMC Made)
- At this time, the shift lever should be in N position and the ignition key should be set to ACC position. (TMMK Made)

(i) Remove the accessory tool.

Accessory tool parts No.:

TMC Made: 33693-33010

TMMK Made: 33693-06010

26. CHECK KEY INTERLOCK OPERATION (SEE PAGE 71-16)
27. INSTALL CONSOLE BOX DUCT NO.1 (SEE PAGE 71-16)
28. INSTALL AIR DUCT REAR NO.1 (SEE PAGE 71-16)
29. INSTALL AIR DUCT REAR NO.2 (SEE PAGE 71-16)
30. INSTALL CONSOLE BOX FRONT (SEE PAGE 71-16)
31. INSTALL FRONT ASH RECEPTACLE ASSY (W/ ASHTRAY) (SEE PAGE 71-16)
32. INSTALL RR CONSOLE BOX (SEE PAGE 71-16)
33. INSTALL CONSOLE BOX CARPET (SEE PAGE 71-16)
34. INSTALL INSTRUMENT PNL INSERT SUB-ASSY LWR LH (SEE PAGE 71-16)
35. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL LH (SEE PAGE 71-16)
36. INSTALL INSTRUMENT PANEL COIN BOX SUB-ASSY (SEE PAGE 71-16)
37. INSTALL COWL SIDE TRIM SUB-ASSY LH (SEE PAGE 71-16)
38. INSTALL FRONT DOOR SCUFF PLATE LH (SEE PAGE 71-16)
39. INSTALL STEERING COLUMN COVER UPR (SEE PAGE 50-9) or (SEE PAGE 50-21)
40. INSTALL INSTRUMENT CLUSTER FINISH PANEL
41. INSTALL STEERING WHEEL ASSY (SEE PAGE 50-9) or (SEE PAGE 50-21)
42. INSPECT STEERING WHEEL CENTER POINT (SEE PAGE 50-9) or (SEE PAGE 50-21)
43. INSTALL HORN BUTTON ASSY (SEE PAGE 60-25)
44. INSTALL STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 50-9) or (SEE PAGE 50-21)
45. INSTALL STEERING WHEEL COVER LOWER NO.3 (W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL) (SEE PAGE 50-9) or (SEE PAGE 50-21)
46. INSTALL CONNECTOR COVER (W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL) (SEE PAGE 50-9) or (SEE PAGE 50-21)
47. INSTALL STEERING WHEEL COVER LOWER NO.3 (3 SPOKE STEERING WHEEL ASSY) (SEE PAGE 50-9) or (SEE PAGE 50-21)
48. CONNECT BATTERY NEGATIVE TERMINAL
49. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1467)