


FLOOR SHIFT SHIFT LEVER ASSY REPLACEMENT

4104U-06

1. REMOVE SHIFT LEVER KNOB SUB-ASSY
 2. REMOVE RR CONSOLE BOX
 3. REMOVE CONSOLE BOX FRONT (SEE PAGE 71-16)
 4. REMOVE AIR DUCT REAR NO.1 (SEE PAGE 55-34)
 5. REMOVE AIR DUCT REAR NO.2 (SEE PAGE 55-34)
 6. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT
 - (a) Remove the clip and separate the top of the select cable from the shift lever assy.
 - (b) Turn the lock and separate the select cable from the shift lever retainer.
 7. DISCONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT
 - (a) Separate the top of the shift cable from the shift lever assy.
 - (b) Turn the lock and separate the shift cable from the shift lever retainer.
 8. REMOVE FLOOR SHIFT SHIFT LEVER ASSY
 - (a) Remove the 4 bolts and shift lever assy.
 9. INSTALL FLOOR SHIFT SHIFT LEVER ASSY
 - (a) Install the shift lever assy with the 4 bolts.
- Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)**

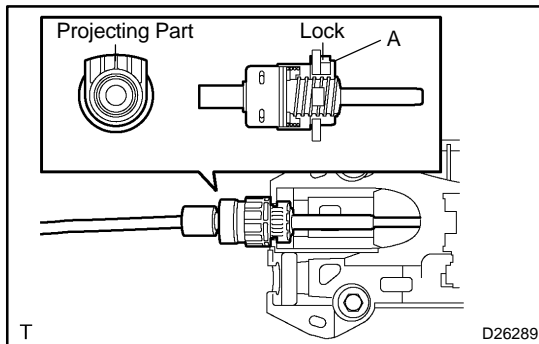


10. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT

- (a) Connect the shift cable to the shift lever retainer.

NOTICE:

- The projecting part of the cable outer should face upward when the shift cable is installed.
 - Make sure that after installation the cable outer lock is projecting from A shown in the illustration.
- (b) Install the top of the shift cable to the shift lever assy.

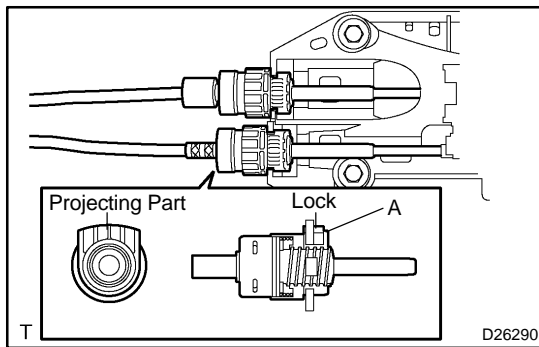


11. CONNECT FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

- (a) Connect the select cable to the shift lever retainer.

NOTICE:

- The projecting part of the cable outer should face upward when the select cable is installed.
- Make sure that after installation the cable outer lock is projecting from A shown in the illustration.

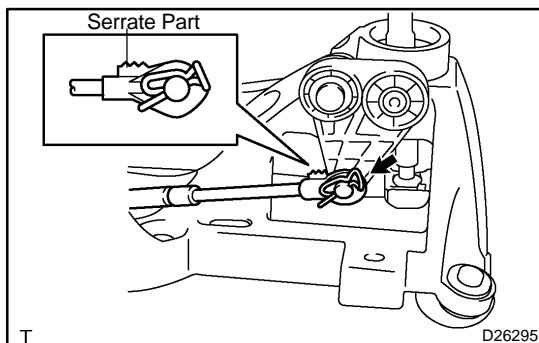

- (b) Connect the top of the select cable to the shift lever assy and install the clip.

NOTICE:

- The serrate part of the select cable point should face upward when the select cable point is connected.
- the clip should be inserted to the direction shown in the illustration.

12. INSTALL AIR DUCT REAR NO.2 (SEE PAGE [55-34](#))
13. INSTALL AIR DUCT REAR NO.1 (SEE PAGE [55-34](#))
14. REMOVE CONSOLE BOX FRONT (SEE PAGE [71-16](#))
15. REMOVE RR CONSOLE BOX
16. REMOVE SHIFT LEVER KNOB SUB-ASSY