

HOW TO PROCEED WITH TROUBLESHOOTING

The hand-held tester can be used at steps 3, 4, 6, and 9.

1	Vehicle Brought to Workshop
----------	------------------------------------

NEXT

2	Customer Problem Analysis (SEE PAGE 05-1114)
----------	---

NEXT

3	Connect the OBD II scan tool or hand-held tester to DLC3
----------	---

NEXT

4	Check and Clear DTC and Freeze Frame Data (SEE PAGE 05-1144)
----------	---

NEXT

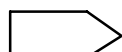
5	Visual Inspection
----------	--------------------------

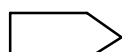
NEXT

6	Setting the Check Mode Diagnosis (SEE PAGE 05-1146)
----------	--

NEXT

7	Problem Symptom Confirmation (SEE PAGE 05-1115)
----------	--

	Symptom does not occur: Go to step 8
---	---

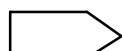
	Symptom occurs: Go to step 9
---	-------------------------------------

8	Symptom Simulation (SEE PAGE 01-22)
----------	--

NEXT

9	DTC Check (SEE PAGE 05-1144)
----------	---

	DTC is not output: Go to step 10
---	---

	DTC is output: Go to step 18
---	-------------------------------------

10	Basic Inspection (SEE PAGE 40-2, 40-7 and 40-64)
----	--

NG	Go to step 20
----	---------------

OK

11	Mechanical System Test (SEE PAGE 05-1118)
----	---

NG	Go to step 17
----	---------------

OK

12	Hydraulic Test (SEE PAGE 05-1120)
----	-----------------------------------

NG	Go to step 17
----	---------------

OK

13	Manual Shifting Test (SEE PAGE 05-1122)
----	---

NG	Go to step 15
----	---------------

OK

14	Problem Symptoms Table Chapter 1 (SEE PAGE 05-1134)
----	---

NG	Go to step 19
----	---------------

OK

15	Problem Symptoms Table Chapter 2 (SEE PAGE 05-1134)
----	---

NG

16	Part Inspection
----	-----------------

	Go to step 20
--	---------------

17	DTC Chart (SEE PAGE 05-1152)
----	------------------------------

NEXT

18	Circuit Inspection
----	--------------------

NEXT

19	Repair or Replace
----	-------------------

NEXT

20	Confirmation Test
----	-------------------

NEXT

End