


INSPECTION

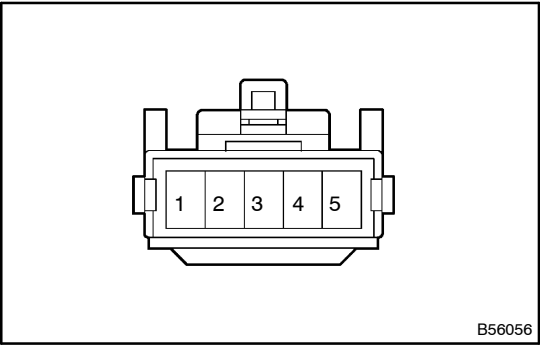

1. INSPECT SLIDE ROOF MOTOR SWITCH

(a) Inspect the slide roof motor switch continuity.

Standard:

Terminal No.	Switch position	Specified condition
2 ⇔ 4	CLOSE/UP	Continuity
2 ⇔ 3	OPEN/DOWN	Continuity

If the continuity is not as specified, replace the switch.