


# OVERHAUL

## HINT:

Installation is the reverse order of the removal. But, the installation is indicated only when it has a point.

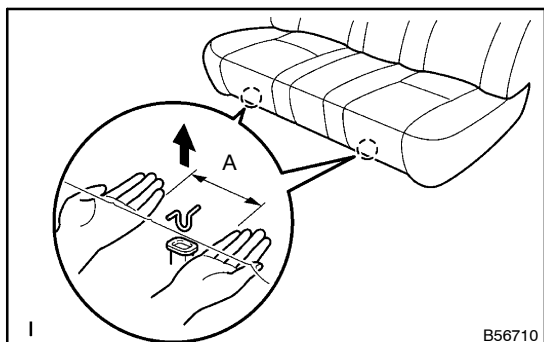

### 1. REMOVE REAR SEAT CUSHION ASSY

- (a) Holding up the front end of the cushion assembly, disengage the clips and pull out the rear seat cushion assembly forward to remove it.

**A: 100 mm (3.94 in.)**

### NOTICE:

**The cushion frame will be deformed unless holding the clips around the roots.**


### 2. REMOVE REAR SEAT HEADREST ASSY CENTER

### 3. REMOVE REAR SEAT HEADREST ASSY

### 4. REMOVE REAR SEAT BACK ASSY RH

- (a) Tilting the seat forward, remove the 2 clips that are engaged with the floor.  
 (b) Remove the 2 bolts and the rear seat back assembly.  
 (c) Employ the same manner described above to the other side.

### 5. REMOVE REAR SEAT BACK ASSY LH

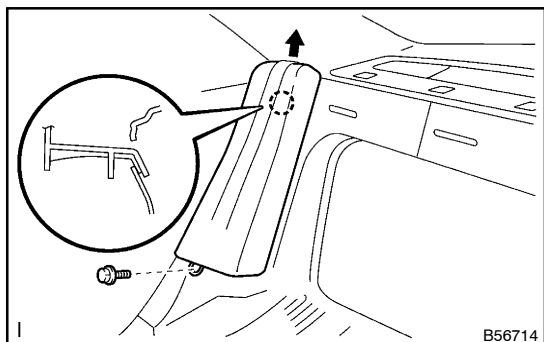

### 6. REMOVE REAR SIDE SEAT BACK ASSY RH

- (a) Remove the bolt and pull it out in the illustrated direction to remove the side seat back assembly.  
 (b) Employ the same manner described above to the other side.

### 7. REMOVE REAR SIDE SEAT BACK ASSY LH


### 8. REMOVE REAR SEAT BACK HINGE COVER

### 9. REMOVE REAR SEAT ARMREST ASSY CENTER

- (a) Remove bolt and the rear seat armrest assembly center.


### 10. REMOVE REAR SEAT SHOULDER BELT GUIDE CENTER

### 11. REMOVE REAR SEAT BACK LOCK CONTROL BEZEL

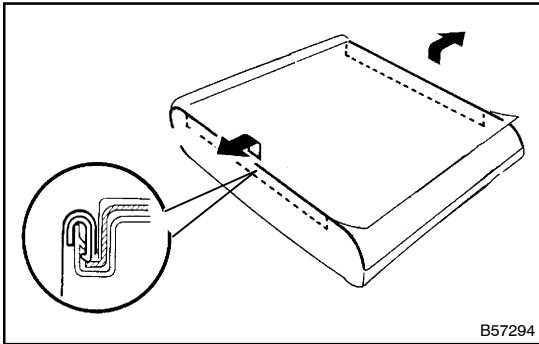

## 12. REMOVE SEPARATE TYPE REAR SEAT BACK COVER

- (a) Disengage the back cover side, and then turn up the rear seat back carpet.
- (b) Remove rear seat back lock release button

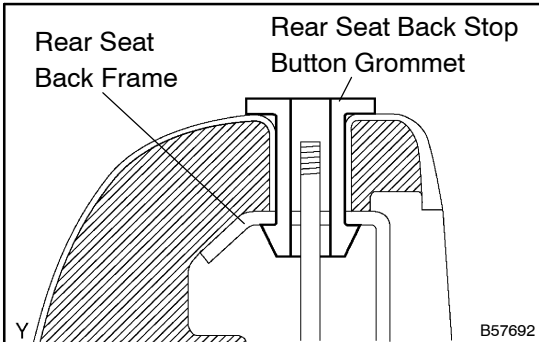

- (c) Remove rear seat back stop button grommet
- (d) Remove the hog rings, and hold up the seat back frame to remove the 2 headrest supports
- (e) Remove the rear seat back cover together with the seat back pad.
- (f) Remove the hog rings, and then take away the rear seat cover assembly from the rear seat back pad.


## 13. REMOVE SEPARATE TYPE REAR SEAT BACK COVER

## 14. REMOVE REAR SEAT BACK LOCK ASSY RH

- (a) Remove the 2 bolts and the rear seat back lock assembly RH.
- (b) Employ the same manner described above to the other side.

## 15. REMOVE REAR SEAT BACK LOCK ASSY LH

## 16. REMOVE BENCH TYPE REAR SEAT CUSHION COVER

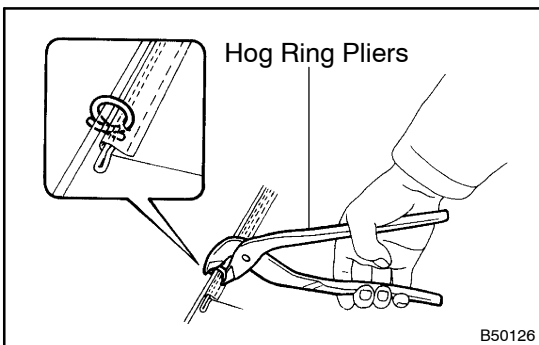


## 17. INSTALL BENCH TYPE REAR SEAT CUSHION COVER

- (a) Using hog ring pliers, install new hog rings.

### NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, take care to prevent wrinkles as little as possible.

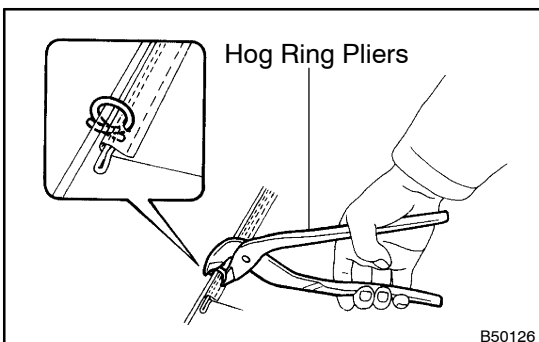

## 18. INSTALL SEPARATE TYPE REAR SEAT BACK COVER

- (a) Using hog ring pliers, install new hog rings.

### NOTICE:

- Be careful not to damage the cover.
- When installing the hog rings, take care to prevent wrinkles as little as possible.

**19. INSTALL SEPARATE TYPE REAR SEAT BACK COVER**

- (a) Using hog ring pliers, install new hog rings.

**NOTICE:**

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as little as possible.**

- (b) Using hog ring pliers, install new hog rings.

**20. INSTALL REAR SEAT BACK HINGE SUB-ASSY CENTER**

- (a) Install the rear seat back hinge center with the 2 bolts.

**Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)**

**21. INSTALL REAR SEAT BACK HINGE SUB-ASSY RH**

- (a) Install the 2 rear seat back hinge with the 2 bolts.

**Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)**

**22. INSTALL REAR SIDE SEAT BACK ASSY LH**

- (a) Install the rear side seat back assembly with the 2 bolts.

**Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)**

- (b) Employ the same manner described above to the other side.

**23. INSTALL REAR SIDE SEAT BACK ASSY RH**

- (a) Install the rear side seat back assembly with the 2 bolts.

**Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)**

**24. INSTALL REAR SEAT BACK ASSY RH**

- (a) Install the rear seat back assembly with the 2 bolts.

**Torque: 18 N·m (183 kgf·cm, 13 ft·lbf)**

- (b) Employ the same manner described above to the other side.

**25. INSTALL REAR SEAT BACK ASSY LH**