


## Position of Parts in Instrument Panel

[LHD]

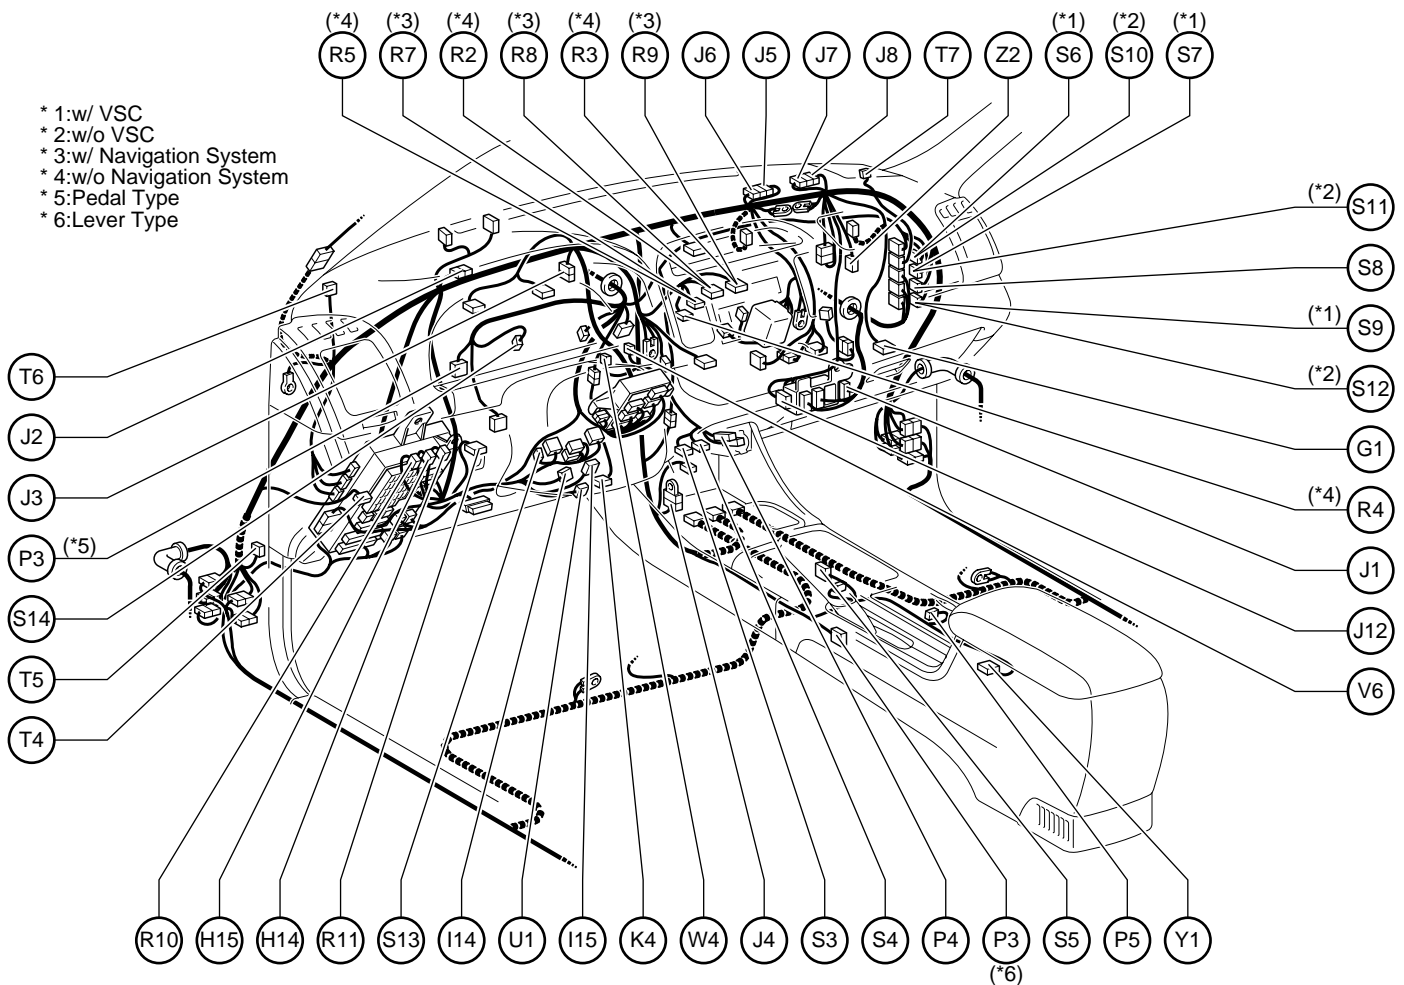

G 1 Glove Box Light and SW

H14 Headlight Beam Level Control SW  
H15 Headlight Cleaner SW

I 14 Ignition Key Cylinder Light  
Transponder Key Amplifier  
I 15 Ignition SW

J 1 Junction Connector  
J 2 Junction Connector  
J 3 Junction Connector  
J 4 Junction Connector  
J 5 Junction Connector  
J 6 Junction Connector  
J 7 Junction Connector  
J 8 Junction Connector  
J 12 Junction Connector

K 4 Kick Down SW

P 3 Parking Brake SW  
P 4 Power Outlet (Front)  
P 5 Power Outlet (Rear)

R 2 Radio and Player  
R 3 Radio and Player  
R 4 Radio and Player  
R 5 Radio and Player  
R 7 Radio and Player with Display  
R 8 Radio and Player with Display

R 9 Radio and Player with Display  
R10 Rear Fog Light SW  
R11 Rheostat

S 3 Seat Heater SW LH  
S 4 Seat Heater SW RH  
S 5 Shift Lock Control ECU  
S 6 Skid Control ECU  
S 7 Skid Control ECU  
S 8 Skid Control ECU  
S 9 Skid Control ECU  
S10 Skid Control ECU  
S11 Skid Control ECU  
S12 Skid Control ECU  
S13 Steering Sensor  
S14 Stop Light SW

T 4 TRC OFF SW  
T 5 Turn Signal Flasher Relay  
T 6 Tweeter LH  
T 7 Tweeter RH

U 1 Unlock Warning SW

V 6 VSC Warning Buzzer

W 4 Wiper Relay

Y 1 Yaw Rate Sensor

Z 2 Option Connector (TVSS ECU)