


FRONT FLOOR FOOTREST REPLACEMENT

760BT-06

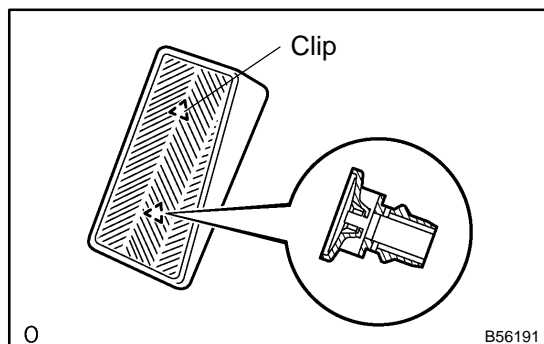

1. REMOVE FRONT FLOOR FOOTREST

- (a) Holding the floor mat, disengage the clips from the upper with a screwdriver to remove the front floor footrest.

HINT:

Tape the screwdriver tip before use.

NOTICE:

Warm the inside of the vehicle well before removal.

- (b) Disengage the foot rest clips, and then remove the 2 clips from the front floor footrest.

2. INSTALL FRONT FLOOR FOOTREST

- (a) Install the footrest clips by engaging the claws with the front floor footrest.
- (b) Before installation, check that the part to be engaged with the clips of front floor footrest is not damaged.

NOTICE:

If it is damaged, replace it with a new one.