


REPLACEMENT

HINT:


COMPONENTS: [See page 60-55](#)

1. **PRECAUTION** [\(See page 60-1\)](#)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** [\(See page 60-1\)](#)
3. **REMOVE ENGINE UNDER COVER RH**

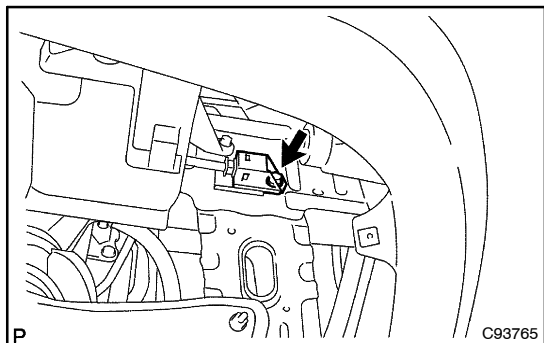

4. REMOVE AIR BAG FRONT RH SENSOR

- (a) Remove the bolt and airbag front RH sensor.

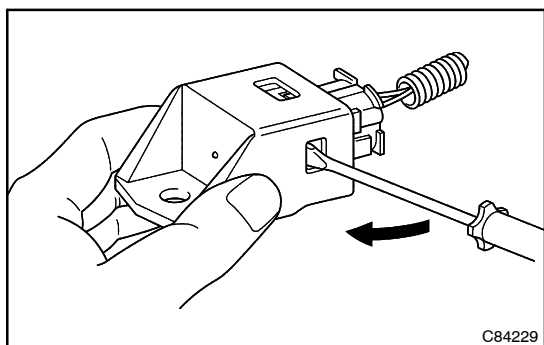

- (b) Disconnect the connector from the airbag front RH sensor.

HINT:

Insert a screwdriver in any of the three opening sections of the sensor and slide the sensor to disconnect it from the connector.

5. INSPECT AIR BAG FRONT RH SENSOR

[\(See page 60-9\)](#)

6. INSTALL AIR BAG FRONT RH SENSOR

- (a) Check that the ignition switch is run OFF.
- (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Install the airbag front RH sensor with the bolt.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (d) Connect the connector to the airbag front RH sensor.
- (e) Check that no play is identified.

7. INSPECT SRS WARNING LIGHT [\(See page 05-758\)](#)