

REPAIR


HINT:

- COMPONENTS: [SEE PAGE 65-1](#).
 - Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - If the area where the headlamp unit LH is installed is broken, the repairs listed below can be performed inexpensively through the use of a repair use bracket. This may only be done if the headlamp assy LH itself is not damaged.
1. **REMOVE FRONT BUMPER ASSY** ([SEE PAGE 76-2](#))
 2. **REMOVE HEADLAMP ASSY LH** ([SEE PAGE 65-2](#))

3. INSTALL HEADLAMP PROTECTOR RETAINER UPPER LH

HINT:


- If the installation area of the headlamp assy LH is damaged, use the supply bracket for low-cost repair.
- Ensure that the headlamp assy LH is not damaged.

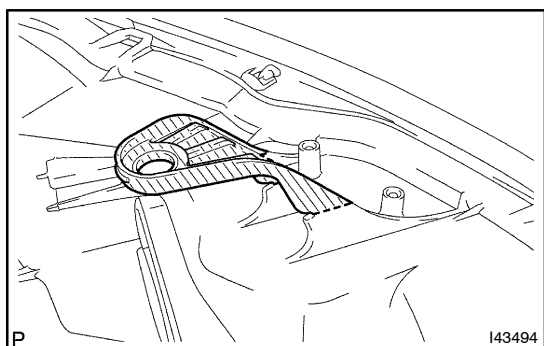

- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlamp protector retainer UPPER LH against the bosses and gradually file away until installation is possible.

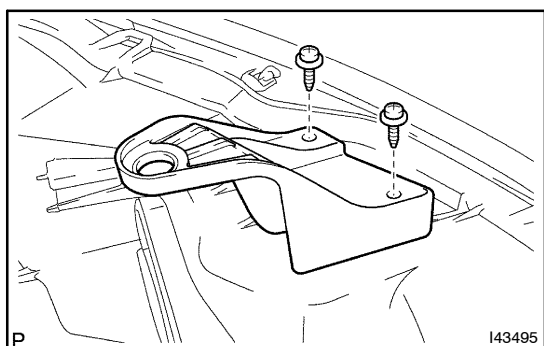

- (b) Install the headlamp protector retainer UPPER LH with the 2 screws.

4. **VEHICLE PREPARATION FOR HEADLAMP AIM ADJUSTMENT** ([SEE PAGE 65-5](#))
5. **PREPARATION FOR HEADLAMP AIMING (Using a screen)** ([SEE PAGE 65-5](#))
6. **HEADLAMP AIMING INSPECTION** ([SEE PAGE 65-5](#))
7. **HEADLAMP AIMING ADJUSTMENT** ([SEE PAGE 65-5](#))

- 8. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65-12)
- 9. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65-12)
- 10. FOG LAMP AIMING INSPECTION (SEE PAGE 65-12)
- 11. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65-12)