


## Position of Parts in Seat

**[LHD : w/o Power Seat]**

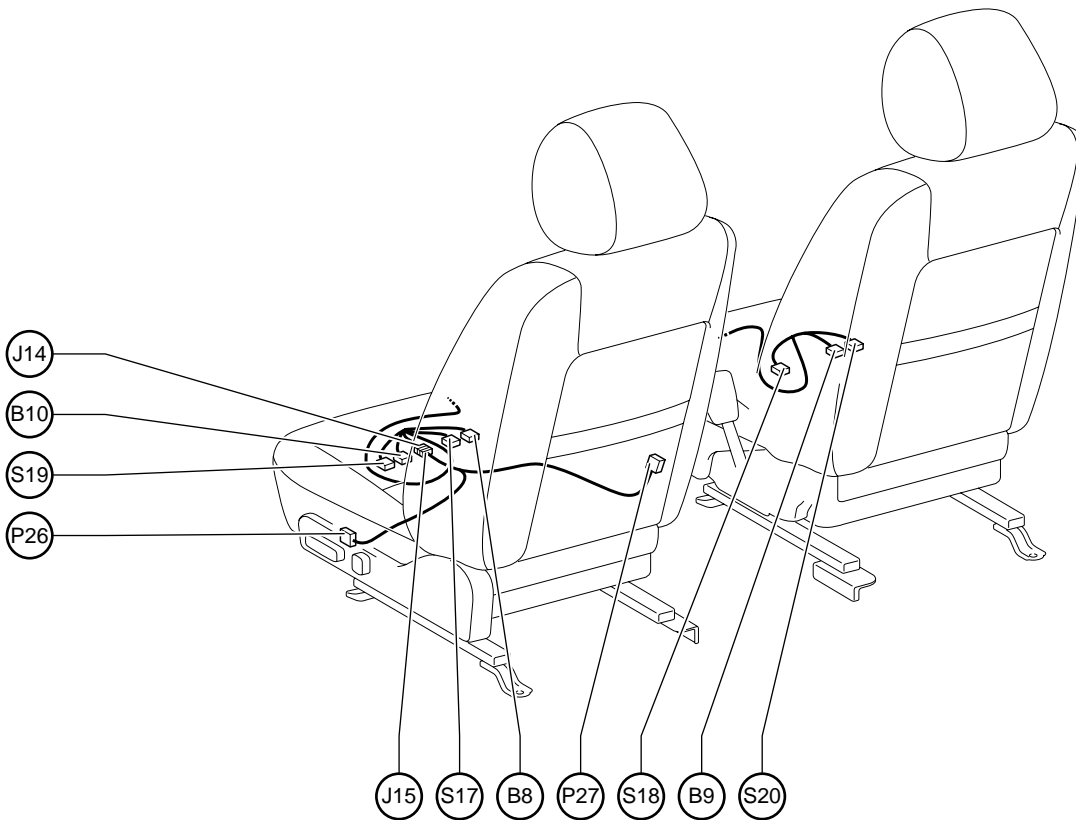

B 8 Buckle SW LH  
 B 9 Buckle SW RH  
     Occupant Detection Sensor  
 B10 Buckle SW LH  
     Seat Position Airbag Sensor

J 14 Junction Connector  
 J 15 Junction Connector

P26 Power Seat Control SW  
     (Driver's Seat Lumbar Support Control)  
 P27 Power Seat Motor  
     (Driver's Seat Lumbar Support Control)

S17 Seat Heater LH  
 S18 Seat Heater RH  
 S19 Side Airbag Squib LH  
 S20 Side Airbag Squib RH