

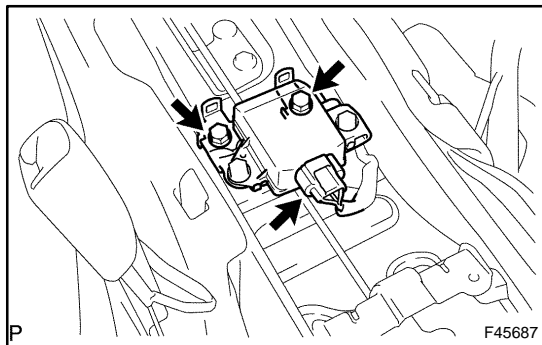
YAWRATE SENSOR REPLACEMENT

320D6-07

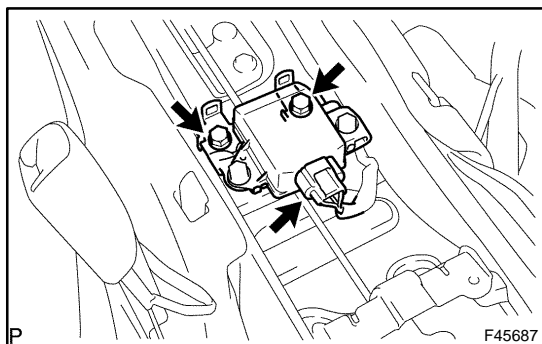
NOTICE:

Do not separate the sensor from the bracket.

1. REMOVE CONSOLE PANEL UPPER REAR (See page 71-16)
2. REMOVE RR CONSOLE BOX (See page 71-16)

**3. REMOVE YAWRATE SENSOR**

- (a) Disconnect the yawrate sensor connector.
- (b) Remove the 2 bolts and yawrate sensor.

**4. INSTALL YAWRATE SENSOR**

- (a) Install the yawrate sensor with the 2 bolts.
Torque: 12.5 N·m (127 kgf·cm, 9 ft·lbf)
- (b) Connect the yawrate sensor connector.

5. INSTALL RR CONSOLE BOX (See page 71-16)
6. INSTALL CONSOLE PANEL UPPER REAR (See page 71-16)
7. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (See page 05-987)