


Connector Joining Wire Harness and Wire Harness

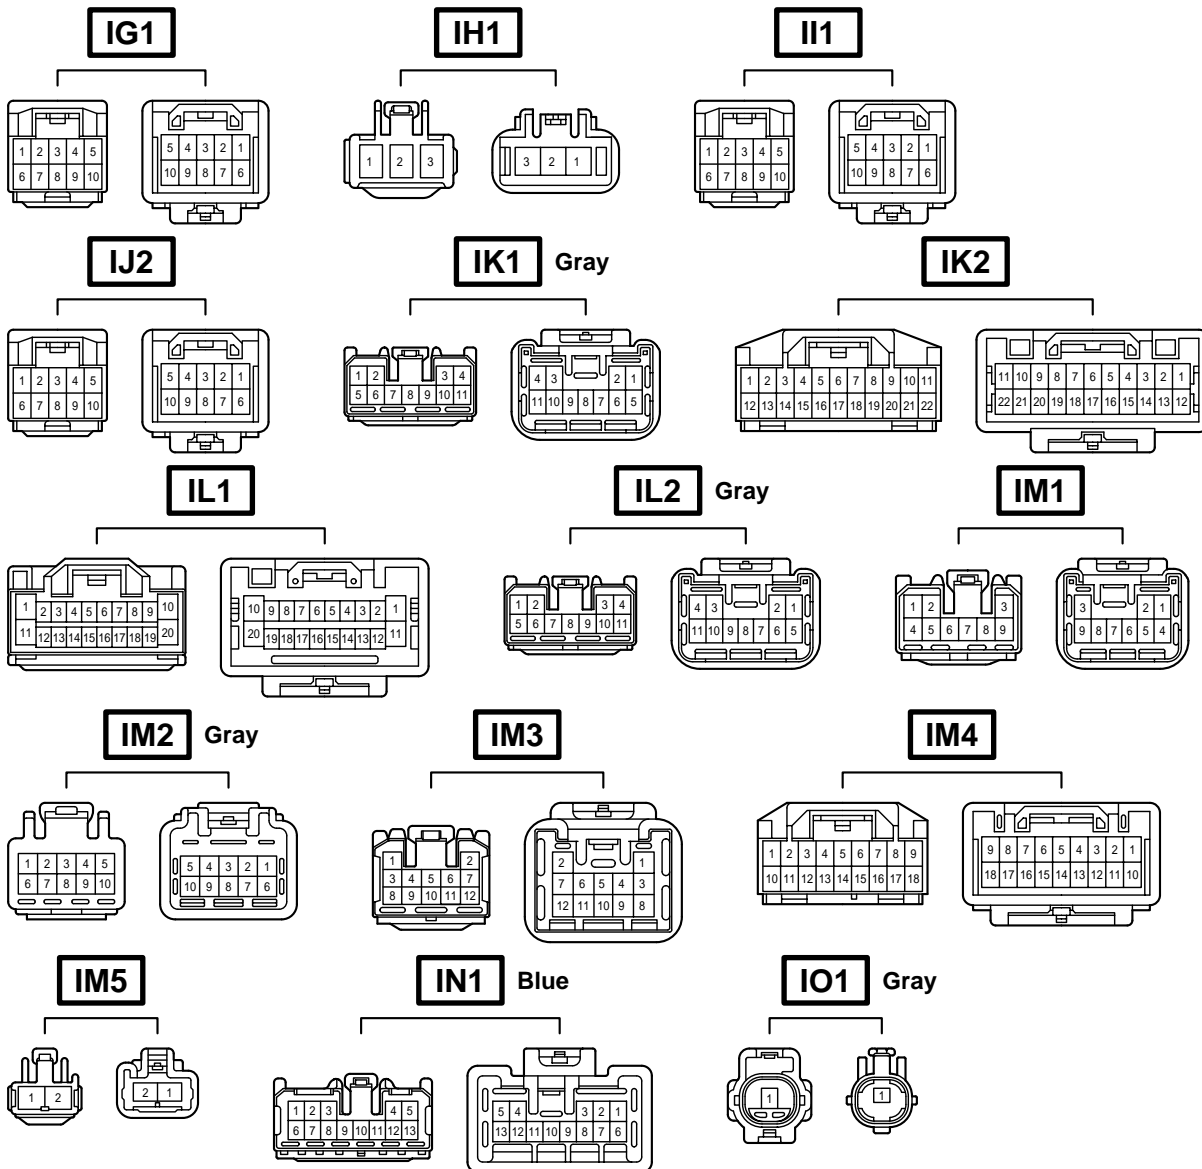

Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Engine Room Main Wire (Left Side of Steering Column Tube)
IH1	Instrument Panel Wire and Instrument Panel No.3 Wire (Behind the Glove Box)
II1	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement LH)
IJ2	Instrument Panel Wire and Cowl No.2 Wire (Behind the Glove Box)
IK1	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IK2	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM1	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM2	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM3	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM4	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IM5	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IN1	Front Door RH Wire and Floor Wire (Right Kick Panel)
IO1	Floor Wire and Floor No.2 Wire (Under the Front Passenger's Seat)