


ABS WARNING LIGHT CIRCUIT (REMAINS ON)

CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the ABS warning light while at the same time prohibiting ABS control. At this time, the ECU records a DTC in memory.

Connect terminals Tc and CG of the DLC3 to make the ABS warning light blink and output the DTC.

WIRING DIAGRAM

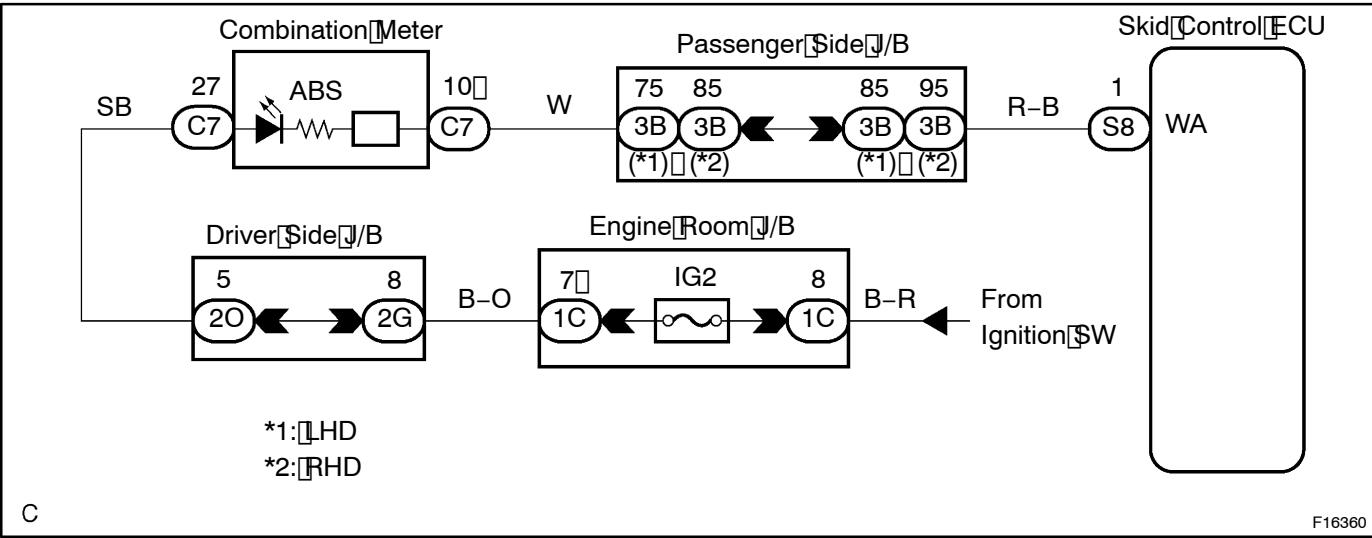

INSPECTION PROCEDURE

1

RECONFIRM DTC(See page05-511)

| | |
|---|------------------|
| A | Normal Code |
| B | Malfunction Code |

B

REPAIR CIRCUIT INDICATED BY OUTPUT CODE

A

2

CHECK HARNESS AND CONNECTOR(DLC3 - SKID CONTROL ECU ASSY)(See page01-31)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY