

# PARKING BRAKE CABLE ASSY NO.1


## REPLACEMENT

3305A-01

HINT:


COMPONENTS: [See page 71-7](#) and [33-3](#)

1. REMOVE FRONT DOOR SCUFF PLATE LH(PEDAL TYPE PARKING BRAKE)  
([See page 71-10](#))
2. REMOVE COWL SIDE TRIM SUB-ASSY LH(PEDAL TYPE PARKING BRAKE)  
([See page 71-10](#))
3. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER(PEDAL TYPE PARKING BRAKE)  
([See page 71-10](#))
4. REMOVE CONSOLE PANEL UPPER REAR  
([See page 71-10](#))
5. REMOVE CONSOLE BOX CARPET  
([See page 71-10](#))
6. ☐ REMOVE RR CONSOLE BOX([See page 71-10](#))
7. REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY  
([See page 71-10](#))
8. REMOVE CONSOLE PANEL UPPER  
([See page 71-10](#))
9. REMOVE CONSOLE BOX FRONT  
([See page 71-10](#))
10. REMOVE AIR DUCT REAR NO.1  
([See page 71-10](#))
11. REMOVE AIR DUCT REAR NO.2  
([See page 71-10](#))
12. REMOVE CONSOLE BOX DUCT NO.1  
([See page 71-10](#))
13. ☐ REMOVE SHIFT LEVER SHAFT HOUSING ASSY([See page 71-10](#))
14. REMOVE YAWRATE SENSOR(W/ VSC)  
([See page 32-53](#))

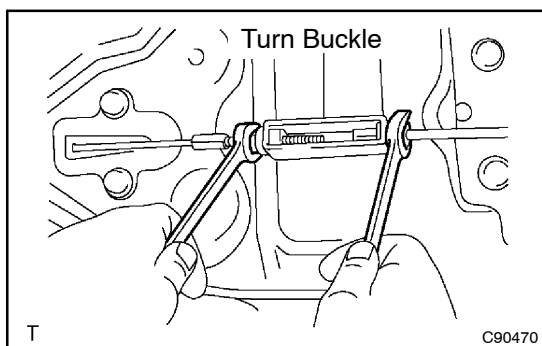



### 15. REMOVE PARKING BRAKE CABLE ASSY NO.1(PEDAL TYPE PARKING BRAKE)

- (a) Loosen the turn buckle, disconnect the parking brake cable assy No.1 from the parking brake cable assy No.4.
- (b) Remove the 2 bolts and console box mounting bracket No.2.

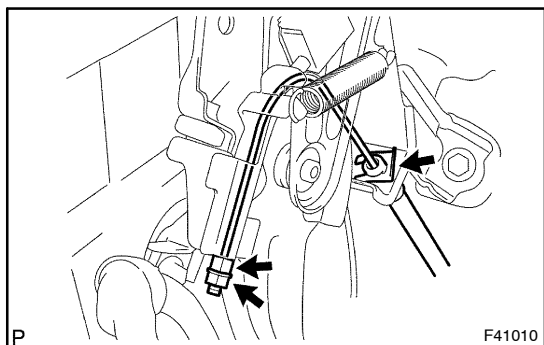


- (c) Remove the lock nut, adjusting nut, clip and disconnect the parking brake cable assy No.1 from the parking brake control pedal assy.

- (d) Remove the 2 nuts, 2 bolts, clip and parking brake cable assy No.1.

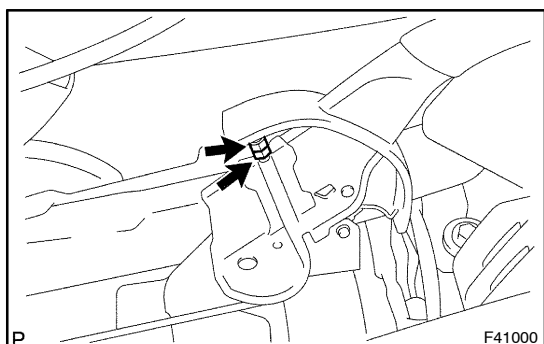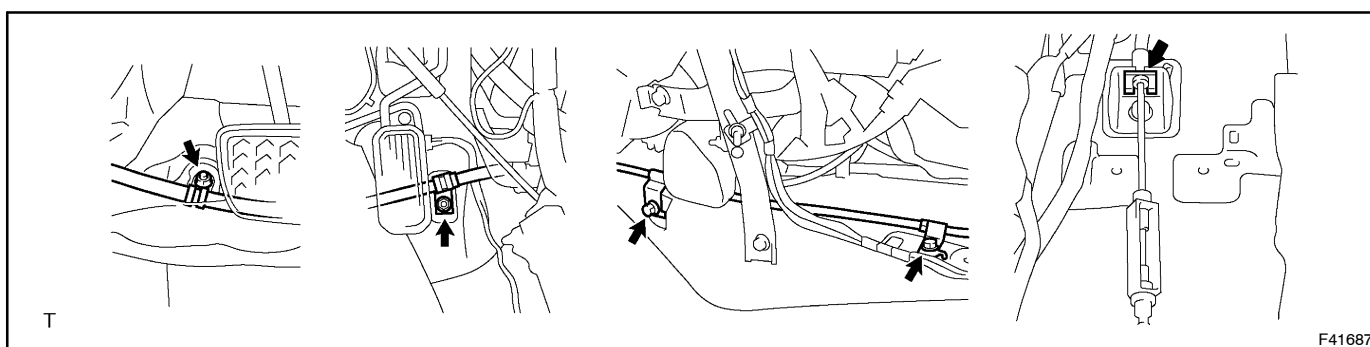

## 16. REMOVE PARKING BRAKE CABLE ASSY NO.1(LEVER TYPE PARKING BRAKE)



- (a) Remove the lock nut and adjusting nut from the parking brake cable assy No.1.
- (b) Remove the 2 bolts and console box mounting bracket No.2.

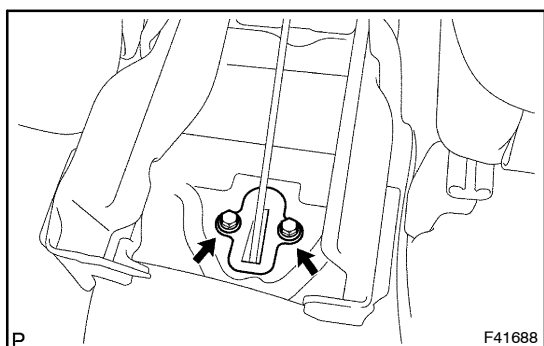

- (c) Remove the 2 bolts and separate the parking brake cable No.1 from the parking brake equalizer.

## 17. INSTALL PARKING BRAKE CABLE ASSY NO.1(PEDAL TYPE PARKING BRAKE)

- (a) Install the parking brake cable assy No.1 with the 2 nuts, 2 bolts and clip.

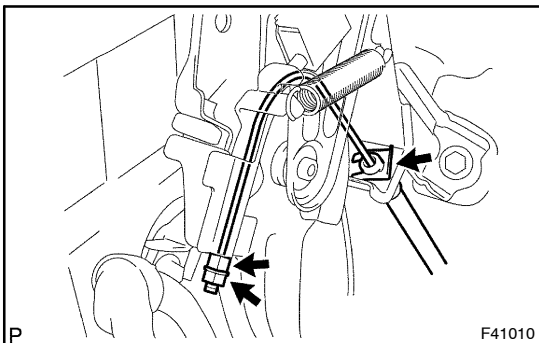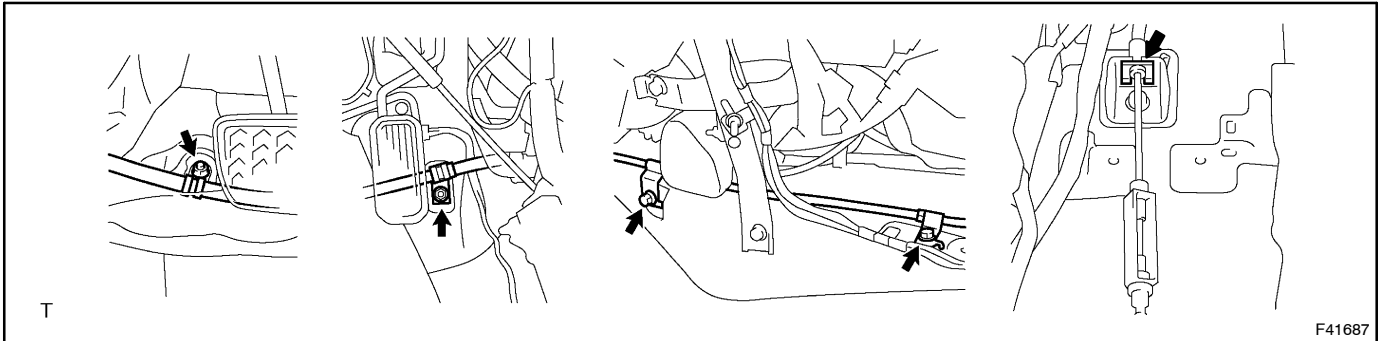


- (b) Install the parking brake cable assy No.1 with the clip, adjusting nut and lock nut to the parking brake control pedal assy.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**


- (c) Install the console box mounting bracket No.2 with the 2 bolts.

**Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)**

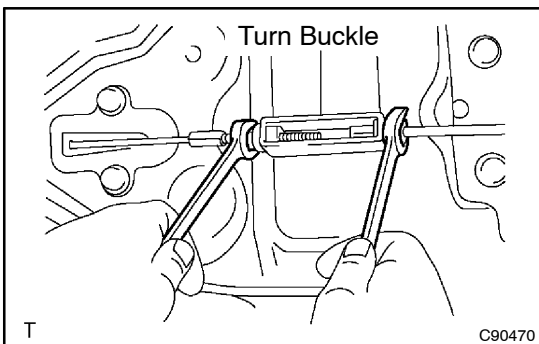

- (d) Tighten the turn buckle, connect the parking brake cable assy No.1 to the parking brake cable assy No.4.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

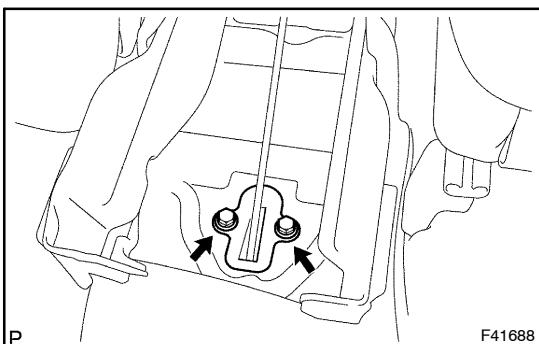


## 18. INSTALL PARKING BRAKE CABLE ASSY NO.1(LEVER TYPE PARKING BRAKE)

- (a) Install the parking brake cable assy No.1 with the 2 bolts to the parking brake equalizer.

**Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)**

- (b) Install the console box mounting bracket No.2 with the 2 bolts.

**Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)**

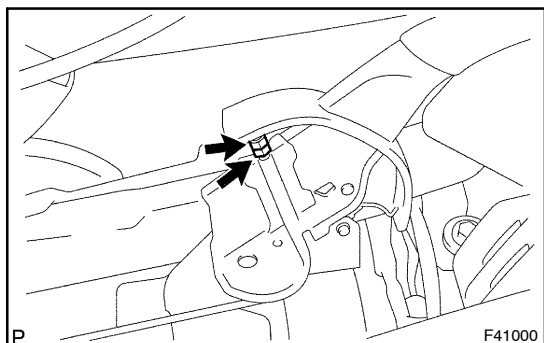

- (c) Install the parking brake cable Assy No. 1 with the adjusting nut and lock nut to the parking brake lever Assy.  
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

19. INSTALL YAWRATE SENSOR(W/ VSC)  
(See page 32-53)
20. INSTALL SHIFT LEVER SHAFT HOUSING ASSY (See page 71-10)
21. INSTALL CONSOLE BOX DUCT NO.1  
(See page 71-10)
22. INSTALL AIR DUCT REAR NO.2  
(See page 71-10)
23. INSTALL AIR DUCT REAR NO.1  
(See page 71-10)
24. INSTALL CONSOLE BOX FRONT  
(See page 71-10)
25. INSTALL CONSOLE PANEL UPPER  
(See page 71-10)
26. INSTALL INSTRUMENT PANEL ASH RECEPTACLE ASSY  
(See page 71-10)
27. INSTALL RR CONSOLE BOX (See page 71-10)
28. INSTALL CONSOLE BOX CARPET  
(See page 71-10)
29. INSTALL CONSOLE PANEL UPPER REAR  
(See page 71-10)
30. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER (PEDAL TYPE PARKING BRAKE)  
(See page 71-10)
31. INSTALL COWL SIDE TRIM SUB-ASSY LH (PEDAL TYPE PARKING BRAKE)  
(See page 71-10)
32. INSTALL FRONT DOOR SCUFF PLATE LH (PEDAL TYPE PARKING BRAKE)  
(See page 71-10)
33. INSPECT AND ADJUST PARKING BRAKE PEDAL TRAVEL (PEDAL TYPE PARKING BRAKE) (See page 33-2)
34. INSPECT AND ADJUST PARKING BRAKE LEVER TRAVEL (LEVER TYPE PARKING BRAKE)  
(See page 33-2)
35. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (W/ VSC) (See page 05-511)