


HOOD ADJUSTMENT

7509G-01


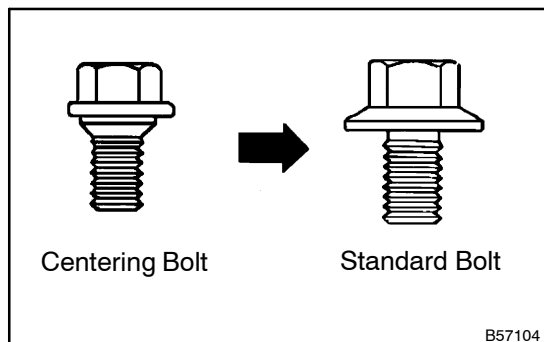


HINT:

Since the centering bolt is used as a hood hinge set bolt and hood lock set bolt, the hood and hood lock can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.


1. INSPECT HOOD SUB-ASSY

- (a) Check that the clearance is within the standard value.

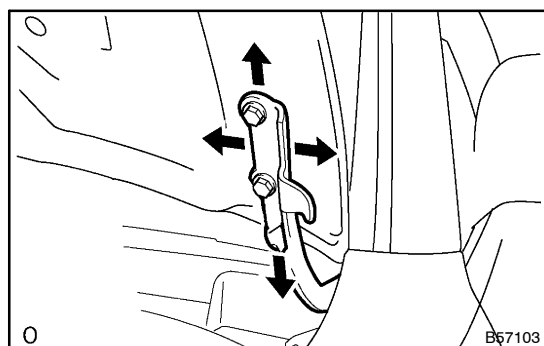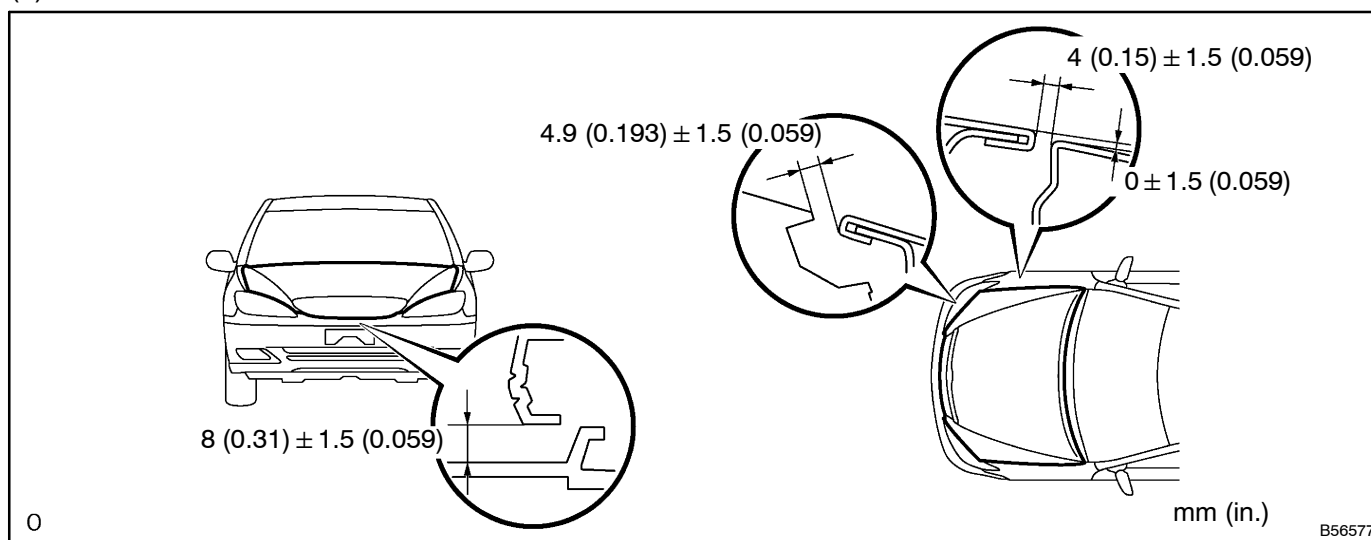


2. ADJUST HOOD SUB-ASSY

- (a) Adjust the hood by loosening the hood side hinge bolts.
Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)

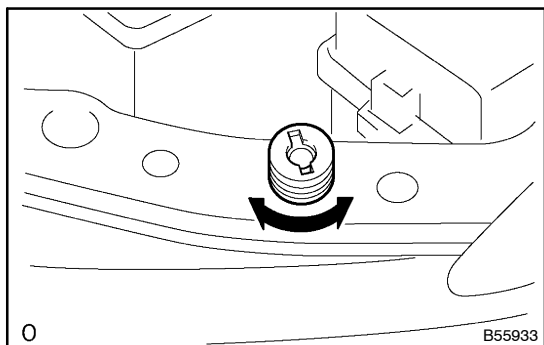

(b) Adjust the hood by turning the cushions.

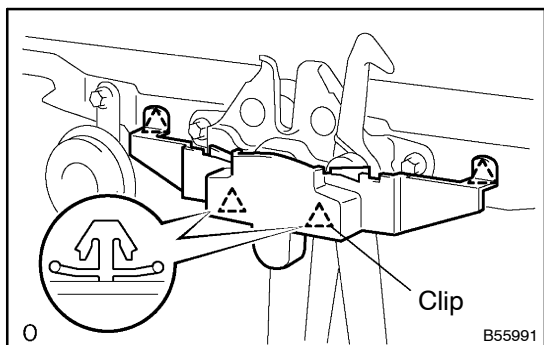


(c) Using a screwdriver, remove the hood lock release lever cover.

HINT:

Tape the screwdriver tip before use.

NOTICE:

Removing the protector damages the clips inside the protector, and therefore the use of a new protector is necessary on installation.

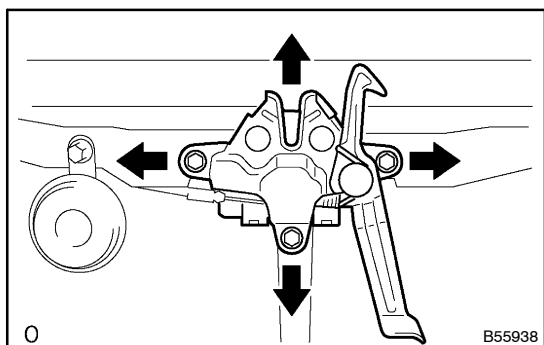

(d) Adjust the lock by loosening the bolts.