

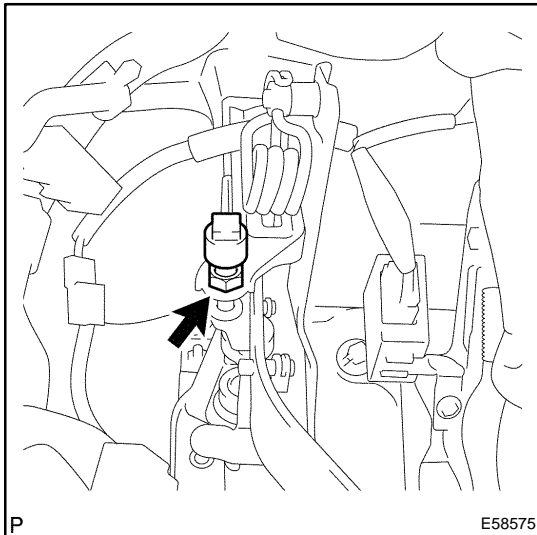
CLUTCH SWITCH ASSY REPLACEMENT

8201K-03

HINT:

Installation is in the reverse order of removal.

1. **REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 71-16)**
2. **REMOVE COWL SIDE TRIM SUB-ASSY LH (SEE PAGE 71-16)**
3. **REMOVE INSTRUMENT PANEL SUB-ASSY UPPER (SEE PAGE 71-16)**
4. **REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH (SEE PAGE 71-16)**

**5. REMOVE CLUTCH SWITCH ASSY**

- (a) Disconnect the connector.
- (b) Loosen the nut and remove the clutch switch assy.