


ADJUSTMENT

1. PUT VEHICLE THESE CONDITIONS

- (a) Tire inflation pressure is the specified value. (See page 28-1)
- (b) Start the engine.

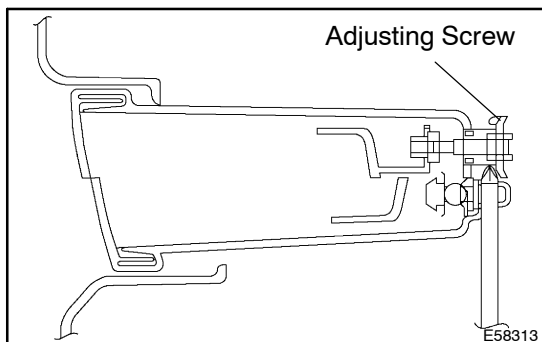

2. ADJUST FOG LIGHT AIM

- (a) The fog light aim can be adjusted by turning the aiming screw in the vertical direction.

HINT:

The optical aim moves upward when turning a screwdriver clockwise, while it moves downward when turning a screwdriver counterclockwise.