

FLOOR SHIFT PARKING LOCK CABLE ASSY

400GH-01

REPLACEMENT


1. PRECAUTION
2. DISCONNECT BATTERY NEGATIVE TERMINAL
3. REMOVE STEERING WHEEL COVER LOWER NO.2
(See [page 50-4](#))
4. REMOVE STEERING WHEEL COVER LOWER NO.3(W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
(See [page 50-4](#))
5. REMOVE CONNECTOR COVER(W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
(See [page 50-4](#))
6. REMOVE STEERING WHEEL COVER LOWER NO.3(3 SPOKE STEERING WHEEL ASSY)
(See [page 50-4](#))
7. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
8. REMOVE HORN BUTTON ASSY
(See [page 50-6](#))
9. REMOVE STEERING WHEEL ASSY
(See [page 50-6](#))
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
10. REMOVE INSTRUMENT CLUSTER FINISH PANEL
(See [page 71-10](#))
11. REMOVE STEERING COLUMN COVER
(See [page 50-6](#))
12. REMOVE FRONT DOOR SCUFF PLATE LH
(See [page 71-10](#))
13. REMOVE COWL SIDE TRIM SUB-ASSY LH
(See [page 71-10](#))
14. REMOVE INSTRUMENT PANEL COIN BOX SUB-ASSY
(See [page 71-10](#))
15. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER
(See [page 71-10](#))
16. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH
(See [page 71-10](#))
17. REMOVE CONSOLE PANEL UPPER REAR
(See [page 71-10](#))
18. REMOVE CONSOLE BOX CARPET
19. □ REMOVE RR CONSOLE BOX(See [page 71-10](#))
20. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY(W/O ASHTRAY)
(See [page 71-10](#))
21. REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY(W/ ASHTRAY)
(See [page 71-10](#))
22. REMOVE CONSOLE PANEL UPPER
(See [page 71-10](#))
23. REMOVE CONSOLE BOX FRONT
(See [page 71-10](#))
24. REMOVE AIR DUCT REAR NO.2
(See [page 55-21](#))

25. REMOVE AIR DUCT REAR NO.1


(See page 55-21)

26. REMOVE CONSOLE BOX DUCT NO.1


(See page 55-21)

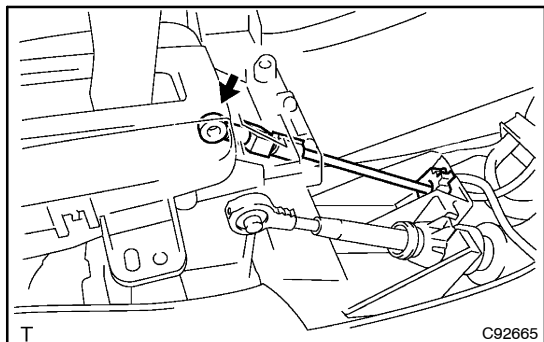**27. REMOVE FLOOR SHIFT PARKING LOCK CABLE ASSY**


- (a) Disconnect the parking lock cable end from the lever pin of the floor shift assembly.

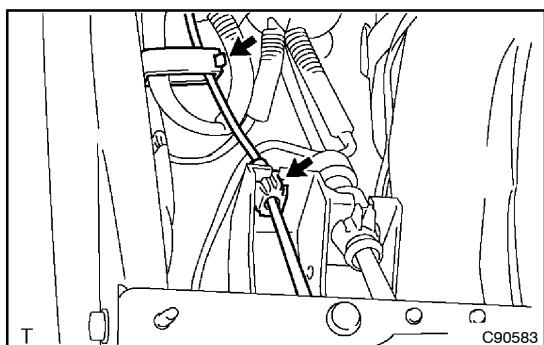


- (b) Using a screwdriver, disconnect the parking lock cable from the floor shift assembly and clamp.

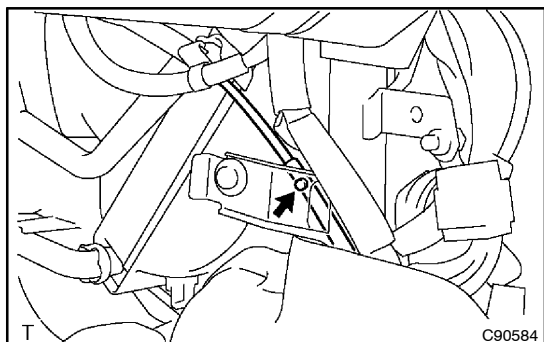

- (c) Disconnect the cable clamp.
 (d) Turn the ignition switch to ACC or ON.

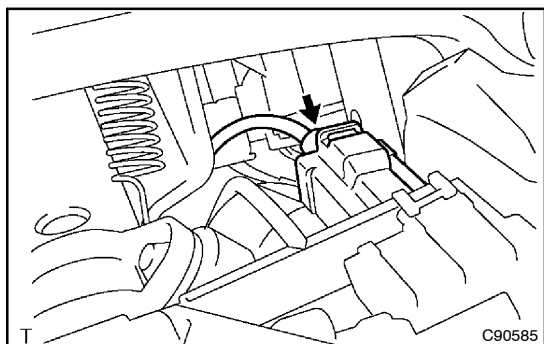


- (e) Using a screwdriver, remove the cable from the upper bracket.

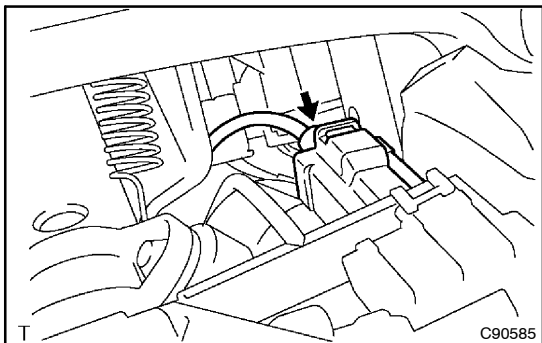


28. INSTALL FLOOR SHIFT PARKING LOCK CABLE ASSY


- (a) Turn the ignition switch to ACC or ON.
- (b) Connect the cable to the upper bracket.

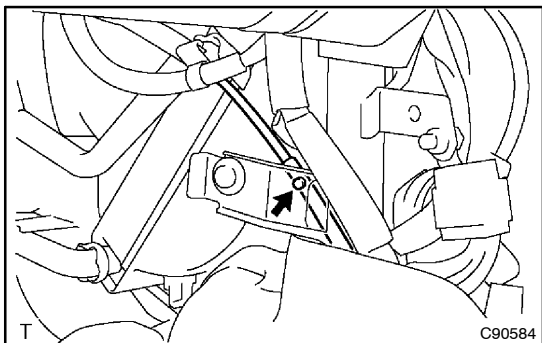

- (c) Connect the cable clamp.

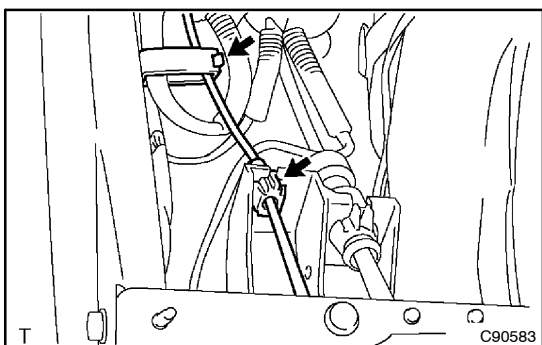


- (d) Insert the slide cap into the through hole and install.

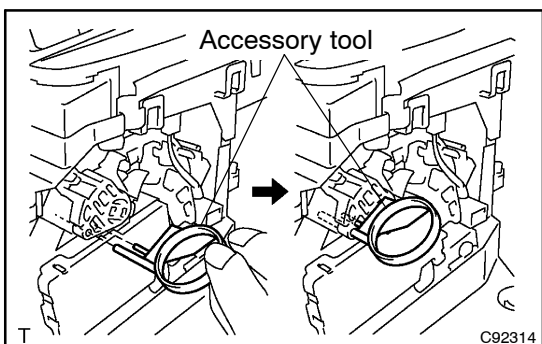


- (e) Set the accessory tool.
 - (1) Shift the shift lever to P position and turn the ignition switch to LOCK.
 - (2) Set the accessory tool to the shift lock control unit assy.


Accessory tool parts No.: 33693-33010

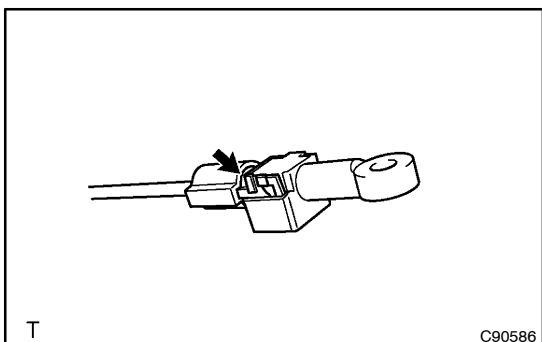

- (f) Using a screwdriver, unlock the claw of the lock key of automatic adjustment part.

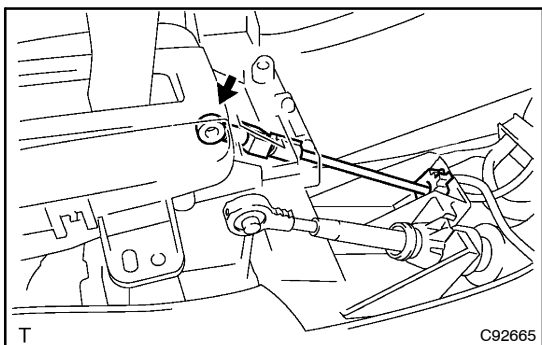

(g) Insert the lever pin into the hole in the floor shift parking lock cable.

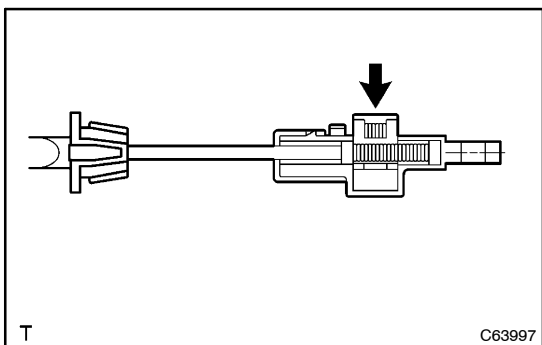

(h) Lock the lock key.

HINT:

At this time, the shift lever should be in P position and the ignition key should be set to LOCK.

(i) Remove the accessory tool.

Accessory tool parts No.: 33693-33010

29. CHECK KEY INTERLOCK OPERATION (See page 40-44)

30. INSTALL CONSOLE BOX DUCT NO.1

31. INSTALL AIR DUCT REAR NO.1

32. INSTALL AIR DUCT REAR NO.2

33. INSTALL CONSOLE BOX FRONT

34. INSTALL CONSOLE PANEL UPPER

35. INSTRUMENT PANEL CUP HOLDER TRAY (W/O ASHTRAY)

36. INSTRUMENT PANEL ASH RECEPTACLE ASSY (W/ ASHTRAY)

37. INSTALL RR CONSOLE BOX

38. INSTALL CONSOLE BOX CARPET

39. INSTALL CONSOLE PANEL UPPER REAR

40. INSTALL INSTRUMENT PNL INSERT SUB-ASSY LWR LH

41. INSTALL INSTRUMENT PANEL SUB-ASSY UPPER

42. INSTALL INSTRUMENT PANEL COIN BOX SUB-ASSY

43. INSTALL COWL SIDE TRIM SUB-ASSY LH

44. INSTALL FRONT DOOR SCUFF PLATE LH

- 45. □ INSTALL STEERING COLUMN COVER
(See page 50-6)
- 46. □ INSTALL INSTRUMENT CLUSTER FINISH PANEL
- 47. □ INSTALL STEERING WHEEL ASSY
(See page 50-6)
- 48. □ INSPECT STEERING WHEEL CENTER POINT
- 49. □ INSTALL HORN BUTTON ASSY
(See page 50-6)
- 50. □ INSTALL STEERING WHEEL COVER LOWER NO.2
(See page 50-4)
- 51. INSTALL STEERING WHEEL COVER LOWER NO.3(W/O STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
(See page 50-4)
- 52. INSTALL CONNECTOR COVER(W/ STEERING PAD SWITCH 4 SPOKE STEERING WHEEL)
(See page 50-4)
- 53. INSTALL STEERING WHEEL COVER LOWER NO.3(3 SPOKE STEERING WHEEL ASSY)
(See page 50-4)
- 54. CONNECT BATTERY NEGATIVE TERMINAL
- 55. □ INSPECT SRS WARNING LIGHT(See page 05-758)