


REPLACEMENT

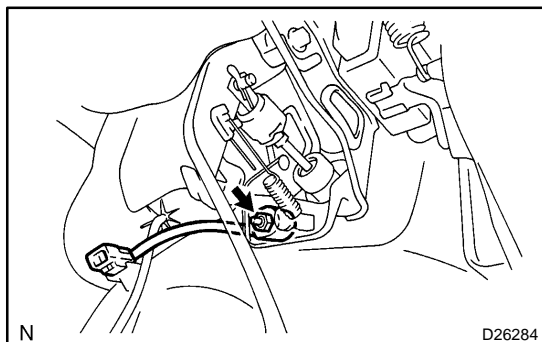

1. REMOVE CLUTCH START SWITCH ASSY

- (a) Disconnect the clutch start switch assy connector.
- (b) Remove the nut and clutch start switch assy from the clutch pedal support.

2. INSTALL CLUTCH START SWITCH ASSY

- (a) Install the clutch start switch assy with the nut.
Torque: 16 N·m (160 kgf·cm, 12 ft·lbf)
- (b) Connect the clutch start switch assy connector.

3. INSPECT CLUTCH START SWITCH ASSY (SEE PAGE 42-19)