


THERMOSTAT(1AZ-FE)

REPLACEMENT

1609N-01


1. DRAIN COOLANT(See page 16-6)

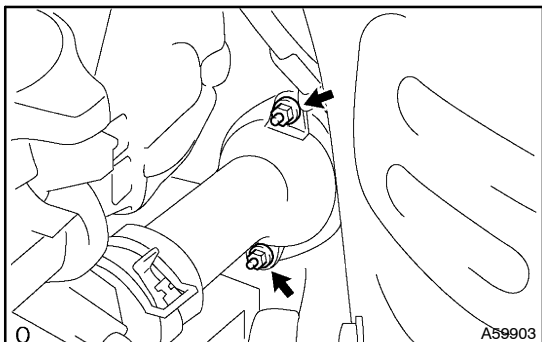

2. REMOVE WATER INLET

- (a) Remove 2 nuts, and disconnect the water inlet from the cylinder block.

3. REMOVE THERMOSTAT

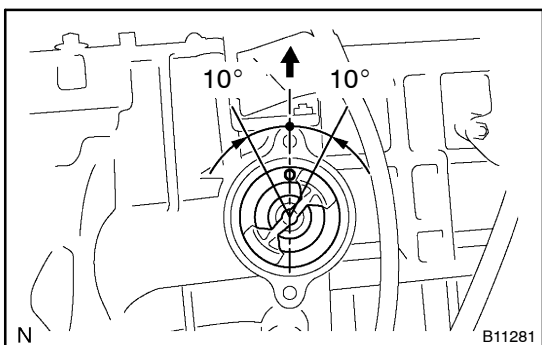

4. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
 (b) Install the thermostat with the jiggle valve upward.

HINT:

The jiggle valve may be set within 10° on either side of the prescribed position.

5. INSTALL WATER INLET

- (a) Install the water inlet with 2 nuts.
Torque: 9.0 N·m (92 kgf·cm, 80 in.·lb)

6. ADD COOLANT(See page 16-6)

7. INSPECT/CHECK ENGINE COOLANT LEAK(See page 16-1)