


REPLACEMENT


HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

1. **REMOVE LUGGAGE COMPARTMENT FLOOR MAT**
2. **REMOVE SPARE WHEEL COVER ASSY**
3. **REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSY RH**
4. **REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1**
- (a) Remove the 2 bolts and luggage compartment trim hooks.

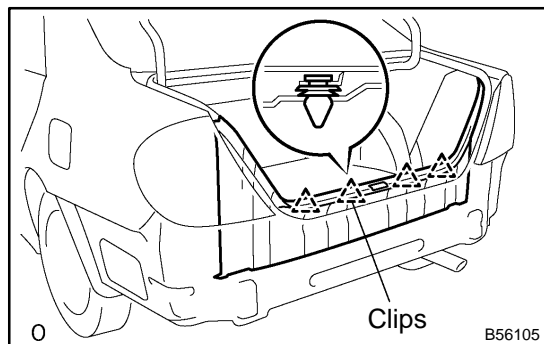

5. **REMOVE REAR FLOOR FINISH PLATE**
 - (a) Disengage the clips and remove the rear floor finish plate.
6. **REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER RH**
 - (a) Using a clip remover, remove the 2 clips and luggage compartment trim cover inner.
7. **REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER LH**

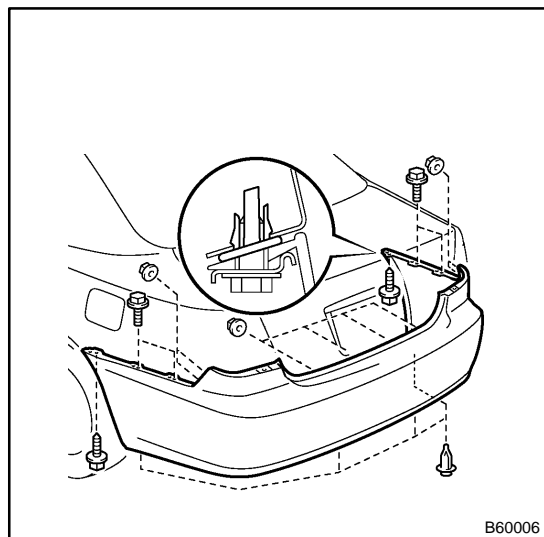

8. **REMOVE REAR BUMPER COVER**
 - (a) Remove the 8 nuts, 4 bolts. (Inside)
 - (b) Remove the 2 screws, 4 clips and rear bumper cover. (outside)
 - (c) Disengage the rear bumper seal bracket and remove the rear bumper cover.

9. **REMOVE REAR BUMPER SIDE RETAINER RH**
 - (a) Remove the clip and rear bumper side retainer. (Only TMC made)
 - (b) Remove the rivet and rear bumper side retainer. (Only TMMK made)
10. **REMOVE REAR BUMPER SIDE RETAINER LH**
11. **REMOVE REAR BUMPER RETAINER UPPER RH**
 - (a) Remove the 3 clips and rear bumper retainer upper. (Only TMC made)
 - (b) Remove the 4 rivets and rear bumper retainer upper. (Only TMMK made)
12. **REMOVE REAR BUMPER RETAINER UPPER LH**
13. **REMOVE REAR BUMPER ENERGY ABSORBER**
14. **REMOVE REAR BUMPER REINFORCEMENT SUB-ASSY**
 - (a) Remove the 6 nuts and rear bumper reinforcement.
15. **INSTALL REAR BUMPER REINFORCEMENT SUB-ASSY**
 - (a) Install the front bumper reinforcement with 6 nuts.

Torque: 34 N·m (347 kgf·cm, 25 ft·lbf)