

DTC	B1188/56	SHORT IN P SQUIB (2ND STEP) CIRCUIT (TO B+)
------------	-----------------	--

CIRCUIT DESCRIPTION

The P squib (2nd step) circuit consists of the airbag sensor assy center and instr pnl pass l/door airbag assy. It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B1188/56 is recorded when a B+ short is detected in the P squib (2nd step) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B1188/56	<ul style="list-style-type: none"> Short circuit in P squib (2nd step) wire harness (to B+) P squib (2nd step) malfunction Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> Instr pnl pass l/door airbag assy (P squib, 2nd step) Airbag sensor assy center Instrument panel wire

WIRING DIAGRAM

See page 05-948.

INSPECTION PROCEDURE

1	CHECK P SQUIB CIRCUIT (AIRBAG SENSOR ASSY CENTER - INSTR PNL PASS L/DOOR AIRBAG ASSY)
----------	--

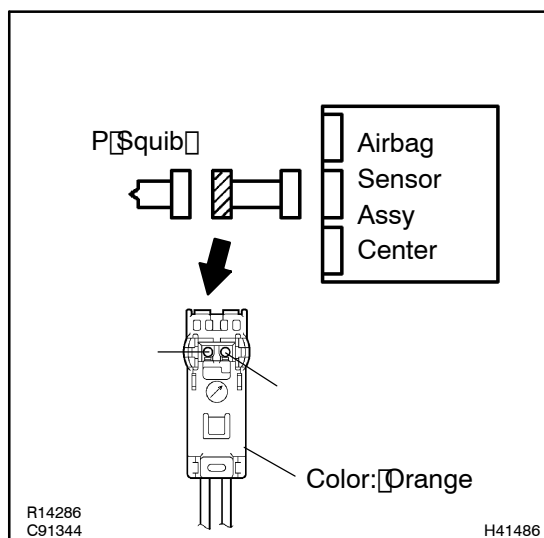

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the connectors between the airbag sensor assy center and the instr pnl pass l/door airbag assy.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON.
- For the orange connector (on the instr pnl pass l/door airbag assy side) between the airbag sensor assy center and the instr pnl pass l/door airbag assy, measure the voltage between P2+ and body ground.

OK:

Voltage: Below 1 V


NG

REPAIR OR REPLACE WIRE HARNESS (AIRBAG SENSOR ASSY CENTER - INSTR PNL PASS L/DOOR AIRBAG ASSY)

OK

2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

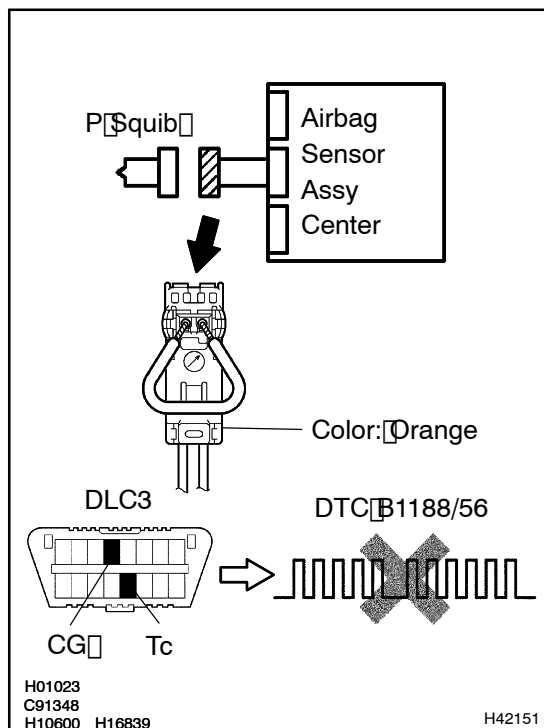

- Turn the ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect P2+ and P2- of the orange connector (on the Instr pnl pass/door airbag assy side) between the airbag sensor assy center and the Instr pnl pass/door airbag assy.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-758).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-758).


OK:**DTC B1188/56 is not output.****HINT:**

Codes other than code B1188/56 may be output at this time, but they are not relevant to this check.

NG**REPLACE AIR BAG SENSOR ASSY CENTER****OK**

3 CHECK P-SQUIB

SST 09843-18040

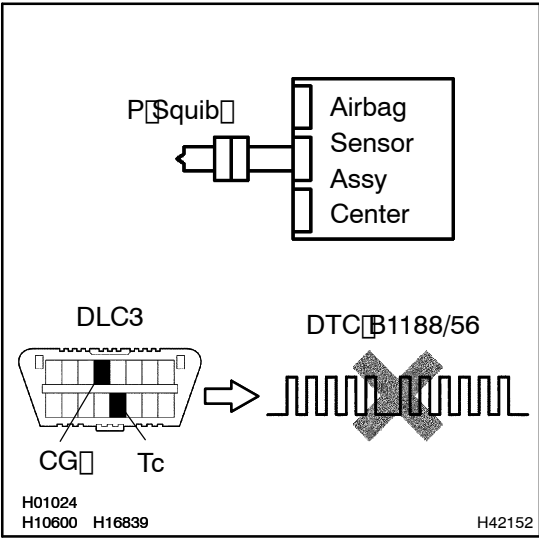

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Connect the instr pnl pass l/door air bag Assy connectors.
- (d) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- (e) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (f) Clear the DTC stored in memory (See page 05-758).
- (g) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- (h) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (i) Check the DTC (See page 05-758).

OK:

DTC B1188/56 is not output.

HINT:

Codes other than code B1188/56 may be output at this time, but they are not relevant to this check.

NG

REPLACE INSTR PNL PASS L/DOOR AIR BAG ASSY

OK

4 USE SIMULATION METHOD TO CHECK

NG

Go to step 1

OK

REPLACE ALL SRS COMPONENTS INCLUDING WIRE HARNESS