


## REPLACEMENT

### HINT:

Replacement procedure of the RH side is the same as that for the LH side.

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **REMOVE REAR SEAT CUSHION ASSY** (See page 72-32)
4. **REMOVE REAR SIDE SEAT BACK ASSY LH** (See page 72-32)

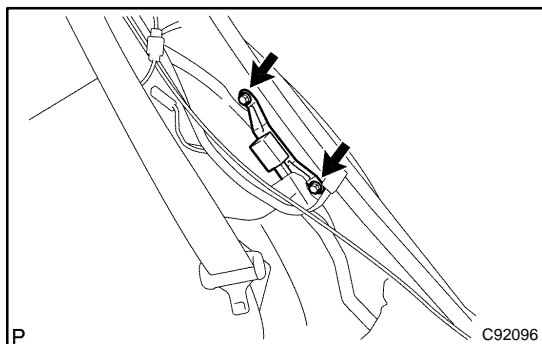

5. **REMOVE AIR BAG SENSOR REAR LH**
  - (a) Disconnect the connector from the airbag sensor rear LH.
  - (b) Remove the 2 bolts and the airbag sensor rear LH.

6. **INSTALL AIR BAG SENSOR REAR LH**

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

### NOTICE:

After removing the terminal wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor rear LH with the 2 bolts.

#### Torque:

Property class 6T: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

Property class 8T: 20 N·m (200 kgf·cm, 14 ft·lbf)

### HINT:

Select a suitable bolt (See page 03-2).

### NOTICE:

- If the airbag sensor rear LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace the airbag sensor rear LH with a new one.
  - When installing the airbag sensor rear LH, be careful that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (d) Connect the connector to the airbag sensor rear LH.
  - (e) Check that there is no looseness in the installation parts of the airbag sensor rear LH.
  7. **INSPECT AIR BAG SENSOR REAR LH** (See page 60-17)
  8. **INSTALL REAR SIDE SEAT BACK ASSY LH** (See page 72-32)
  9. **INSPECT SRS WARNING LIGHT** (See page 05-1456)