


## Position of Parts in Seat

**[RHD : w/o Power Seat]**

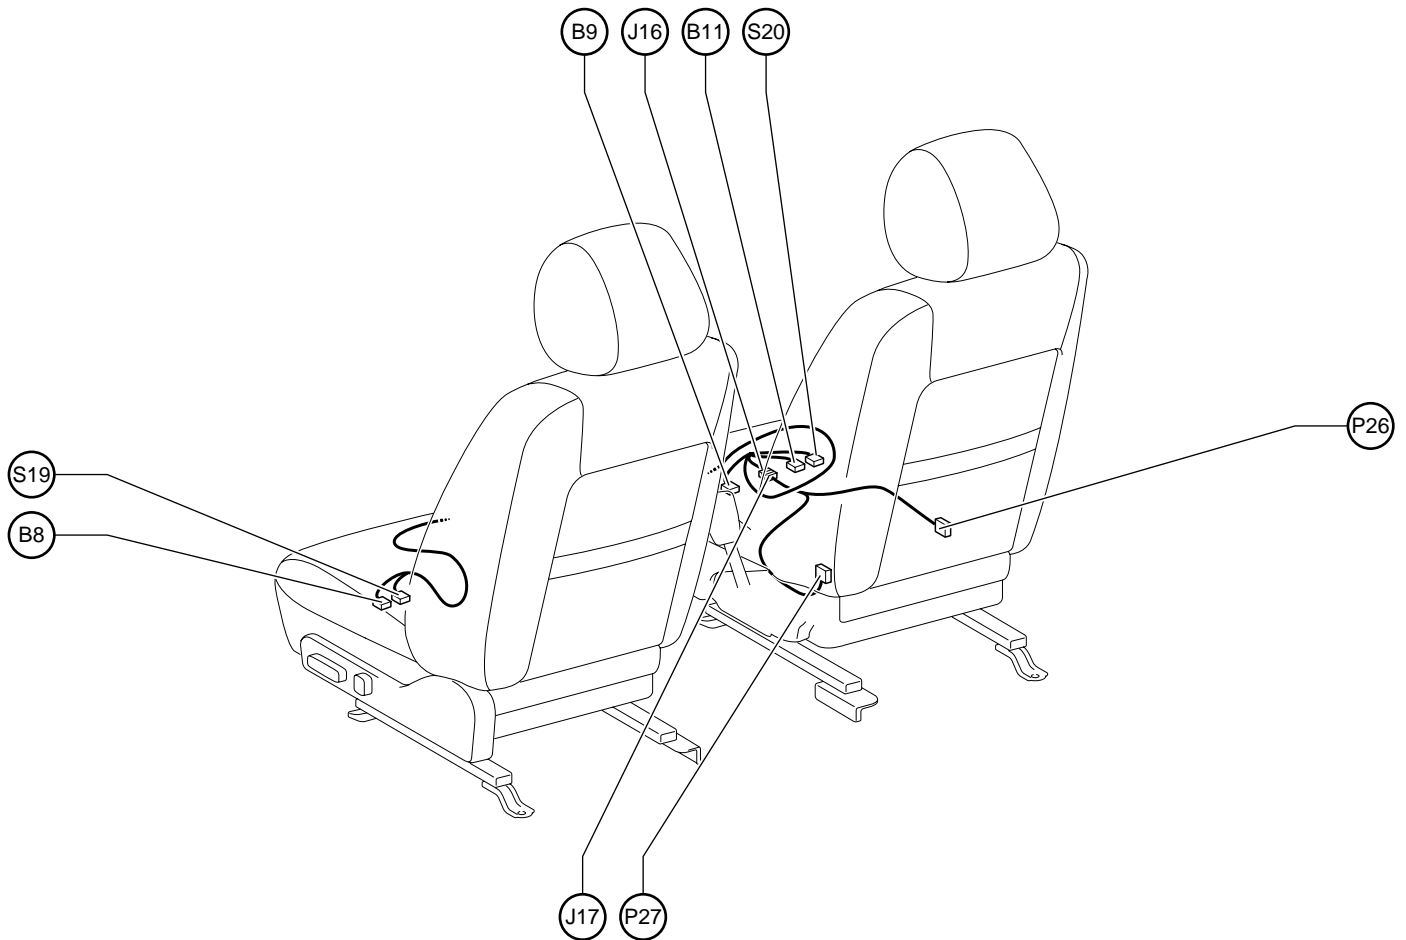

B 8 Buckle SW LH  
Occupant Detection Sensor  
B 9 Buckle SW RH  
B 11 Buckle SW RH  
Seat Position Airbag Sensor

J 16 Junction Connector  
J 17 Junction Connector

P 26 Power Seat Control SW  
(Driver's Seat Lumbar Support Control)  
P 27 Power Seat Motor  
(Driver's Seat Lumbar Support Control)

S 19 Side Airbag Squib LH  
S 20 Side Airbag Squib RH