


CD SOUND SKIPS

INSPECTION PROCEDURE

1 CHECK THE CD

- (a) Check for dirt on the CD surface.

Standard: The CD is clean.

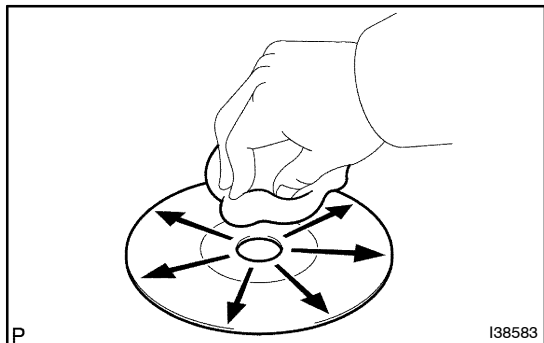

HINT:

If dirt is on the CD surface, wipe it with a soft cloth from inside to outside in a radial direction.

NOTICE:


Do not use conventional record cleaner or anti-static preservative.

NG

CLEAN THE CD

OK

2 CHECK THE CD

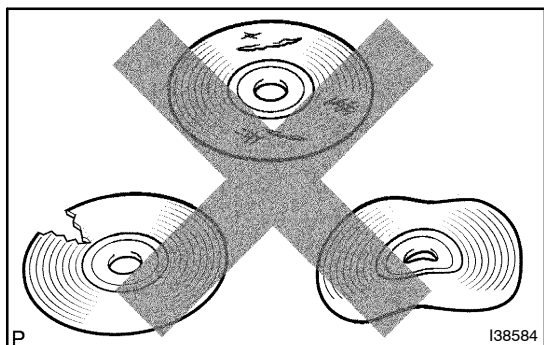

- (a) Check that the CD is not deformed or cracked.

Standard: No deformations or cracks appear on the CD.

NG

REPLACE THE CD

OK

3 CHECK USING ANOTHER CD

- (a) Check using another CD.

- (1) Check if the problem recurs using another CD.

Standard: The problem does not recur.

OK

REPLACE THE CD

NG

4 CHECK RADIO AND NAVIGATION ASSY

(a) Check the radio and navigation assy installation condition.

- (1) Check that the radio and navigation assy is properly installed (see pub. No. RM915E, page 67-4).

Standard: Radio and navigation assy is properly installed.

NG

REINSTALL THE RADIO AND NAVIGATION ASSY PROPERLY

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-46)**