


DISPLAY DOES NOT DIM (NIGHT SCREEN) WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 CHECK IMAGE QUALITY SETTING

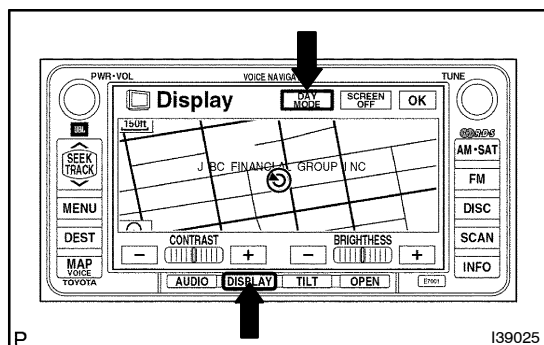

P

I39025

- (a) Enter the display adjustment screen by pressing the "DISPLAY" switch.
- (b) Turn the light control switch to TAIL.
- (c) Check if "DAY MODE" on the display adjustment is ON.
- Standard: "DAY MODE" is ON.**


OK

TURN FORCED "DAY MODE" SETTING OFF

NG

2 DISPLAY CHECK MODE (VEHICLE SIGNAL CHECK MODE)

- (a) Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05-54).

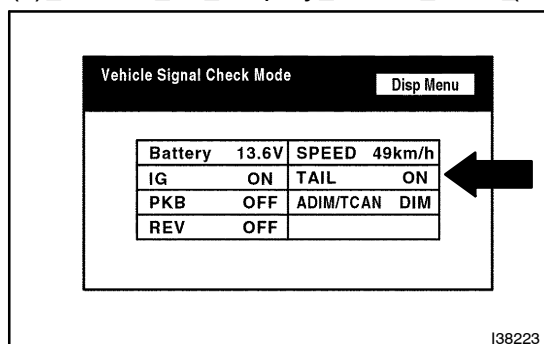

I38223

- (b) Turn the light control switch TAIL ON and OFF.
- Standard:**

TAIL switch	Display
ON	ON
OFF	OFF

HINT:

The display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK

REPLACE RADIO AND NAVIGATION ASSY
(SEE PUB. NO. RM915E, PAGE 67-4)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-46)