

ROCKER OUTER PANEL (CUT-P) REPLACEMENT


1. REMOVE ROCKER OUTER PANEL

- (a) Cut and join the parts at the locations as shown below.

HINT:

Take care not to damage the internal reinforcement.


mm	in.
525	20.67

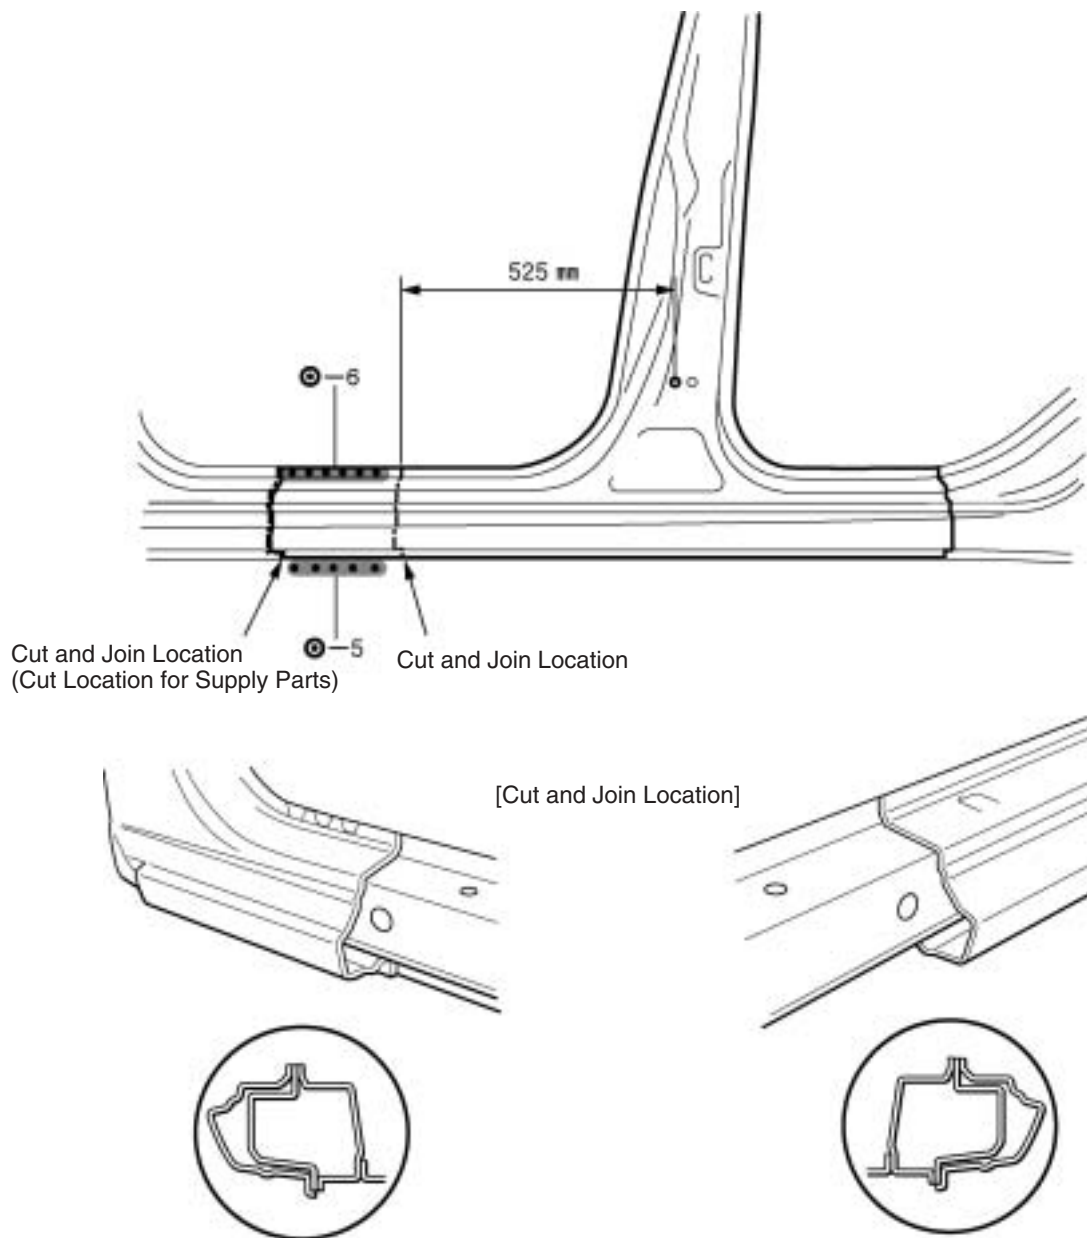

2. INSTALL ROCKER OUTER PANEL**HINT:**

Inspect the fitting of the front door, etc., before welding, since this affects the appearance of the finish.

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

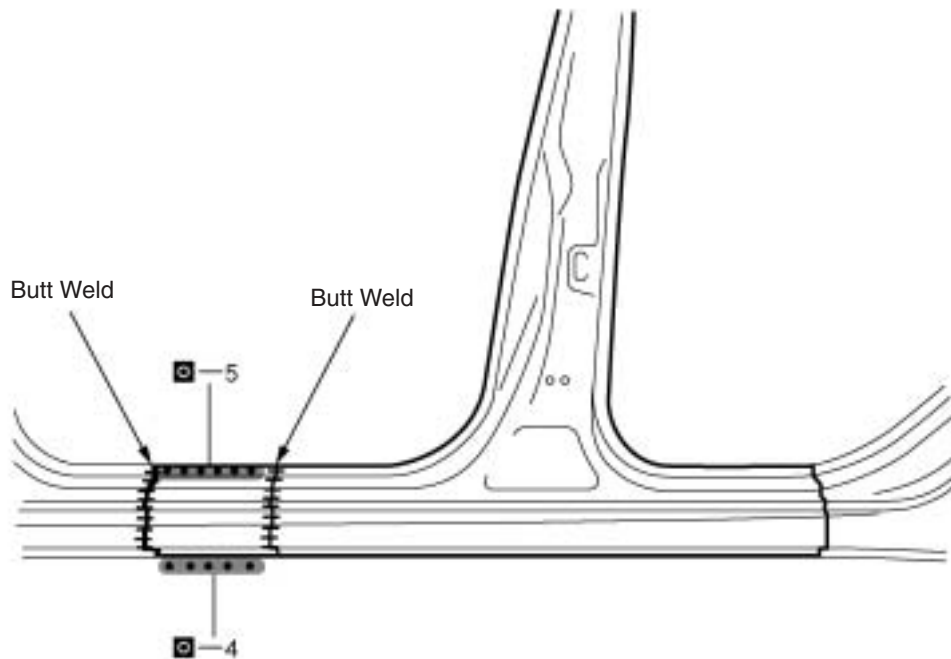

F12997A

3. MEASURING THE OPENING PORTION DIMENSIONS (See page BP-100)**4. APPLYING SEALER TO THE INSIDE OF THE VEHICLE (See page PC-1)****5. APPLYING UNDER COATING (See page PC-6)****6. APPLYING ANTI-RUST AGENT**

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.