


MAP DISC CANNOT BE INSERTED

INSPECTION PROCEDURE


1 CHECK MAP DISC

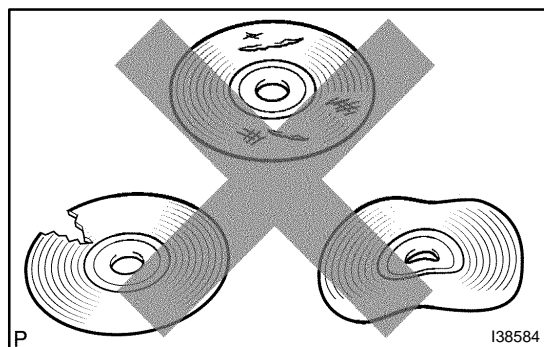

- (a) Check that the map disc is not deformed or cracked.
Standard: No deformations or cracks appear on the map disc.

NG**CHECK THE MAP DISC****OK**

2 CHECK RADIO AND NAVIGATION ASSY

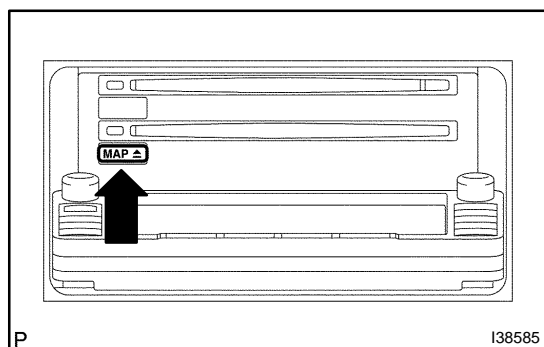

- (a) Check that the "MAP" indicator near the disc slot comes on.

Standard: It does not come on.**NG****PRESS THE EJECT SWITCH TO EJECT THE DISC****OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1914)**