

## REPLACEMENT

### HINT:

- Replacement procedure of the RH side is the same as that for the LH side.
- Installation is in the reverse order of removal.

1. **PRECAUTION** (See page 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**
3. **REMOVE ROOF HEADLINING ASSY** (See page 76-22)
4. **REMOVE CURTAIN SHIELD AIR BAG ASSY LH**

- (a) Disconnect the connector from the curtain shield airbag assy LH.


### NOTICE:

**When handling the airbag connector, take care not to damage the airbag wire harness.**

- (b) Remove the 9 bolts and curtain shield airbag assy LH.

### HINT:

Remove the bolts from front side of the vehicle in order.

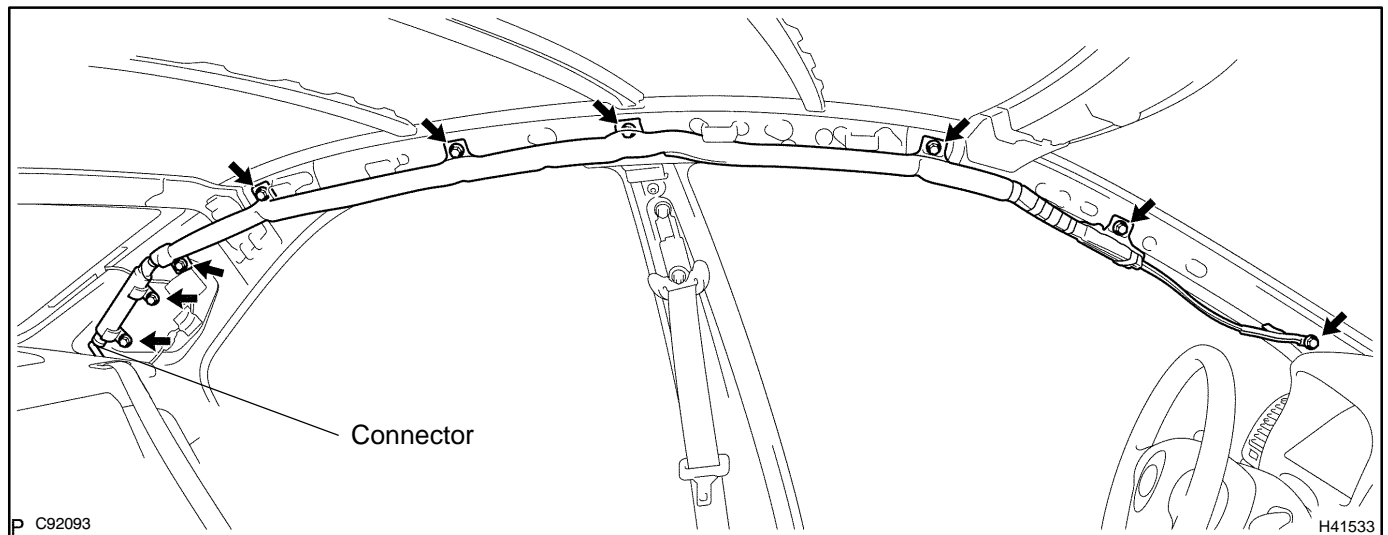

### 5. INSTALL CURTAIN SHIELD AIR BAG ASSY LH

- (a) Install the curtain shield airbag assy LH with the 9 bolts.

**Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)**

### HINT:

Install the bolts from rear side of the vehicle in order.

- (b) Connect the connector to the curtain shield airbag assy LH.

### NOTICE:

**When handling the airbag connector, take care not to damage the airbag wire harness.**

6. **INSPECT CURTAIN SHIELD AIR BAG ASSY LH** (See page 60-17)
7. **INSTALL ROOF HEADLINING ASSY** (See page 76-22)
8. **INSPECT SRS WARNING LIGHT** (See page 05-1456)