





Engine Control (1MZ-FE)

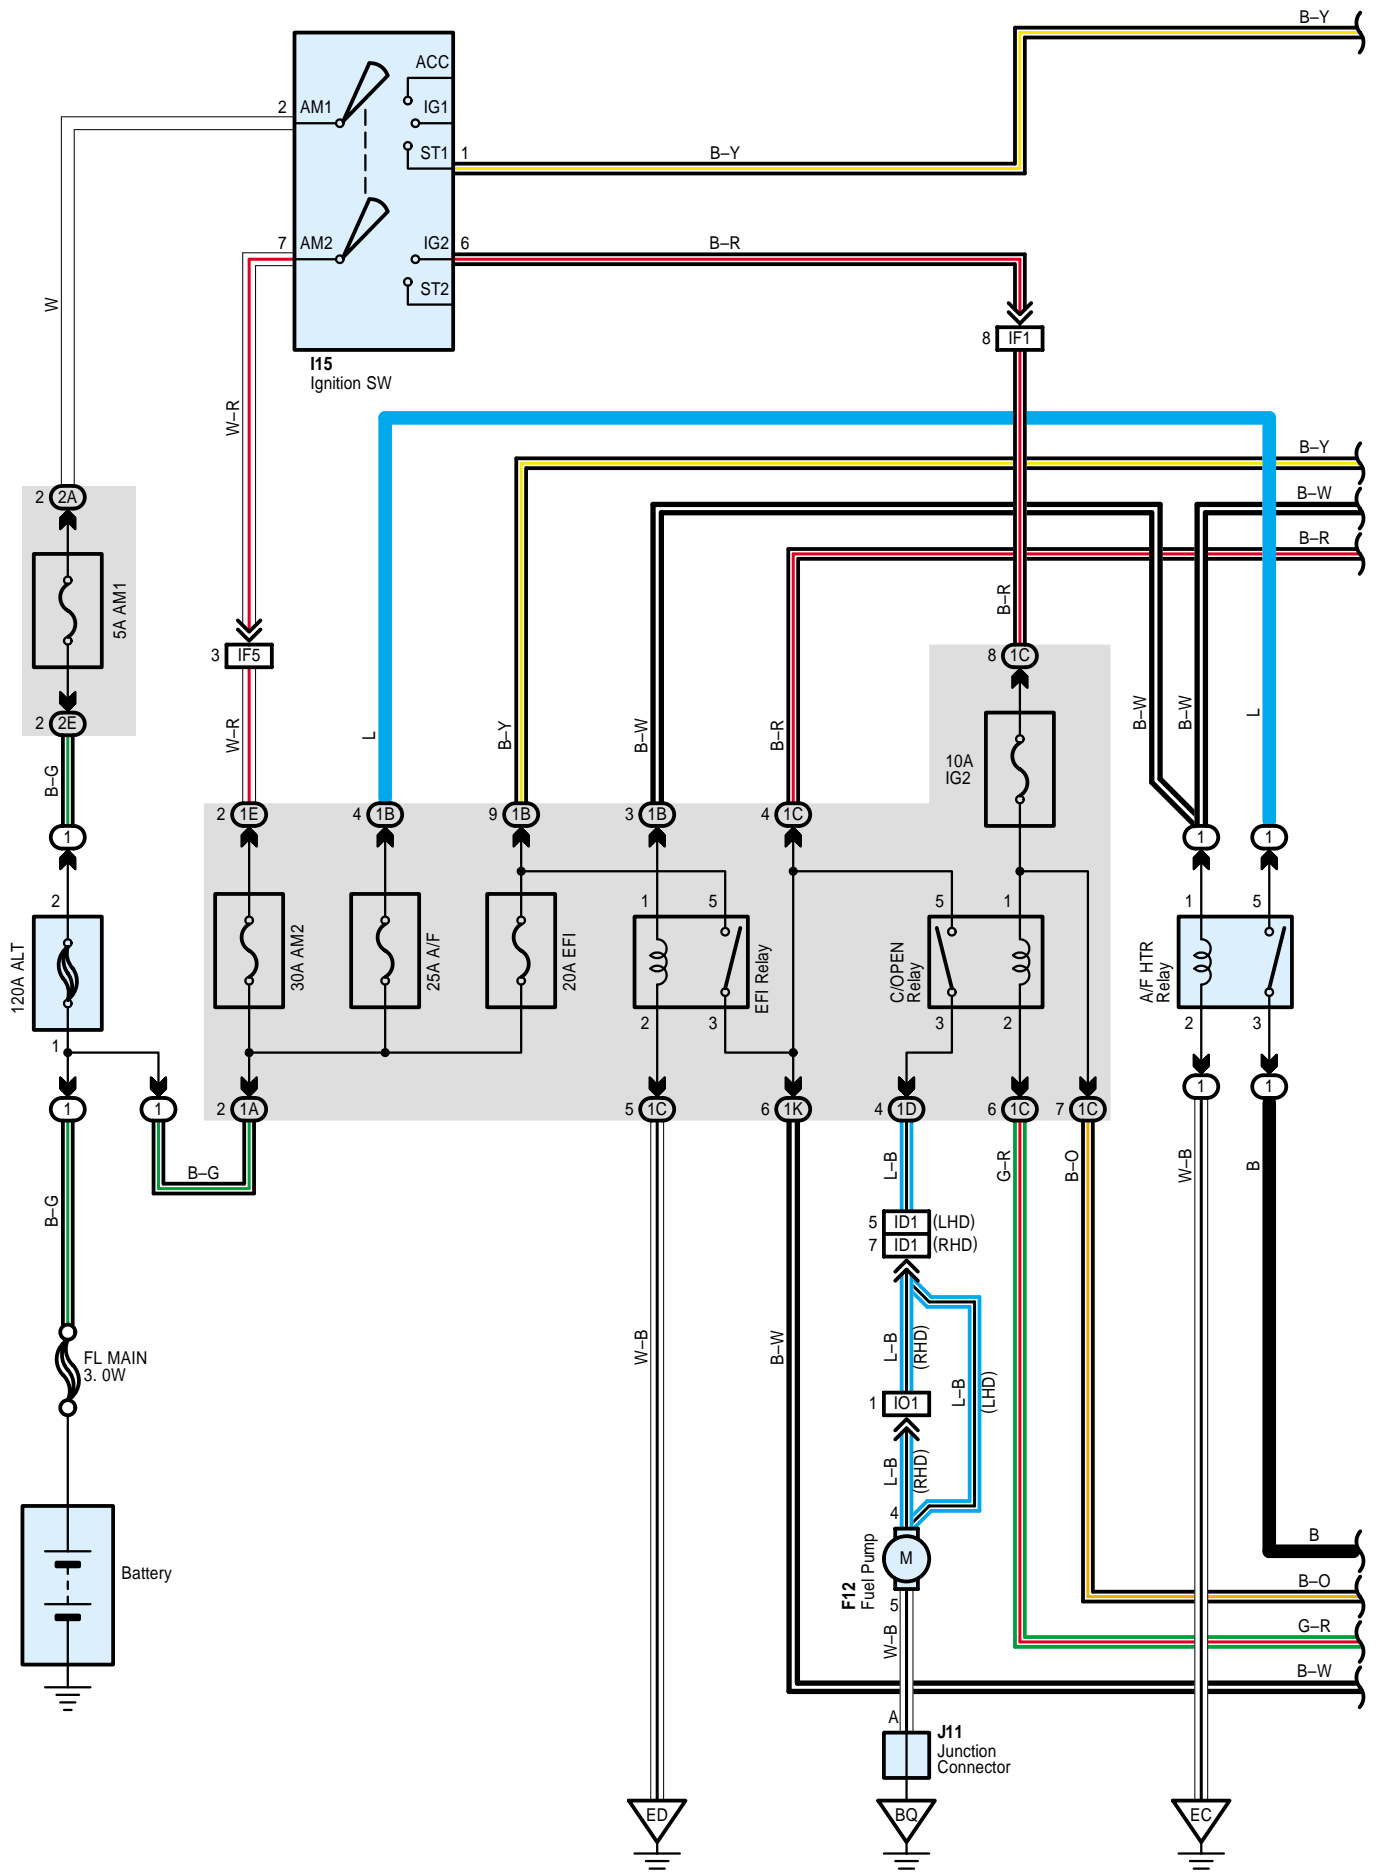

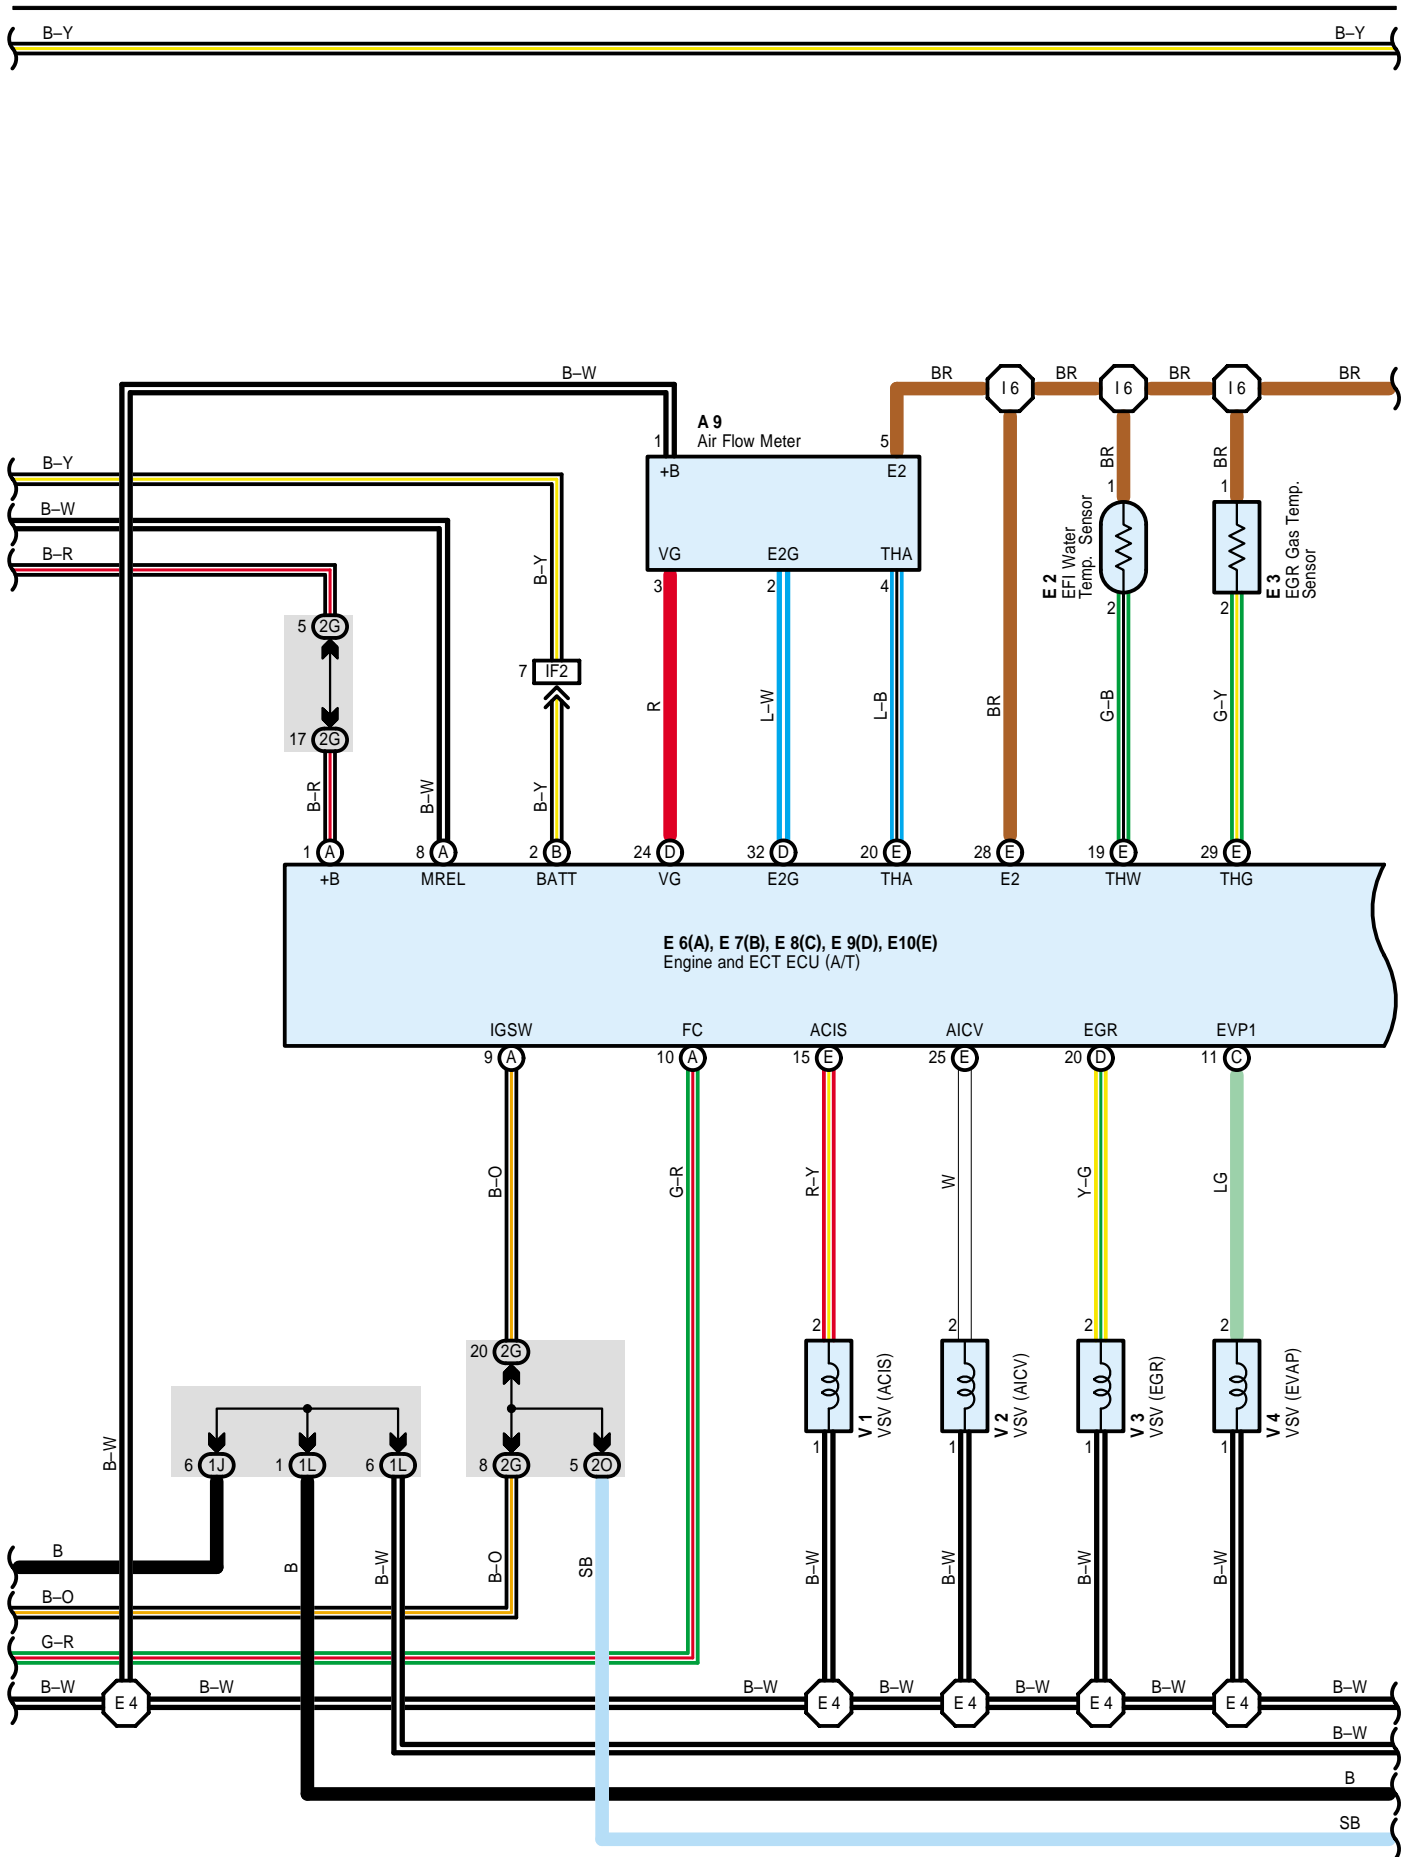


Engine Control (1MZ-FE)

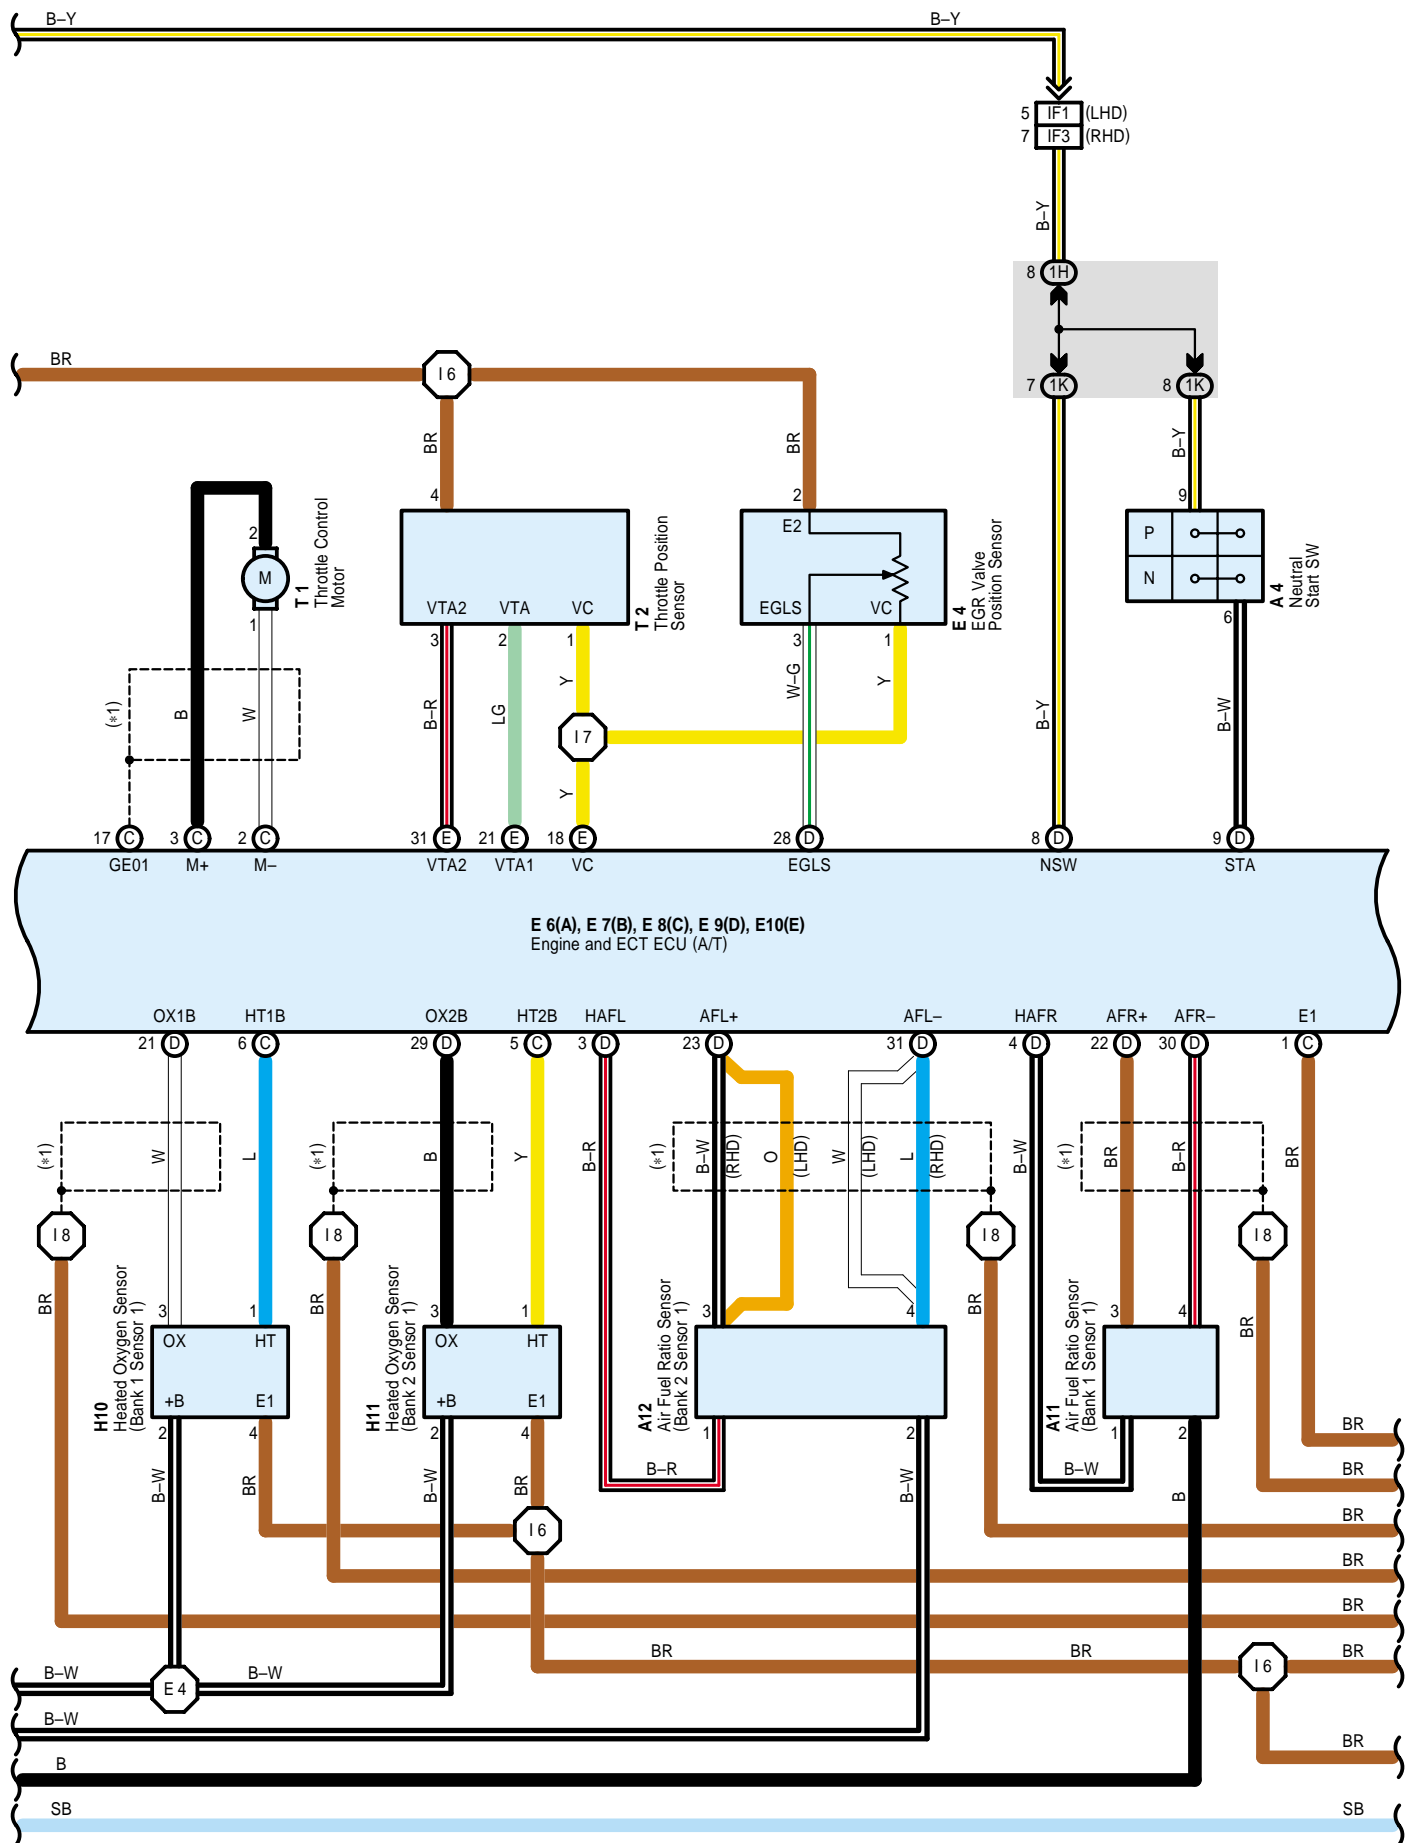


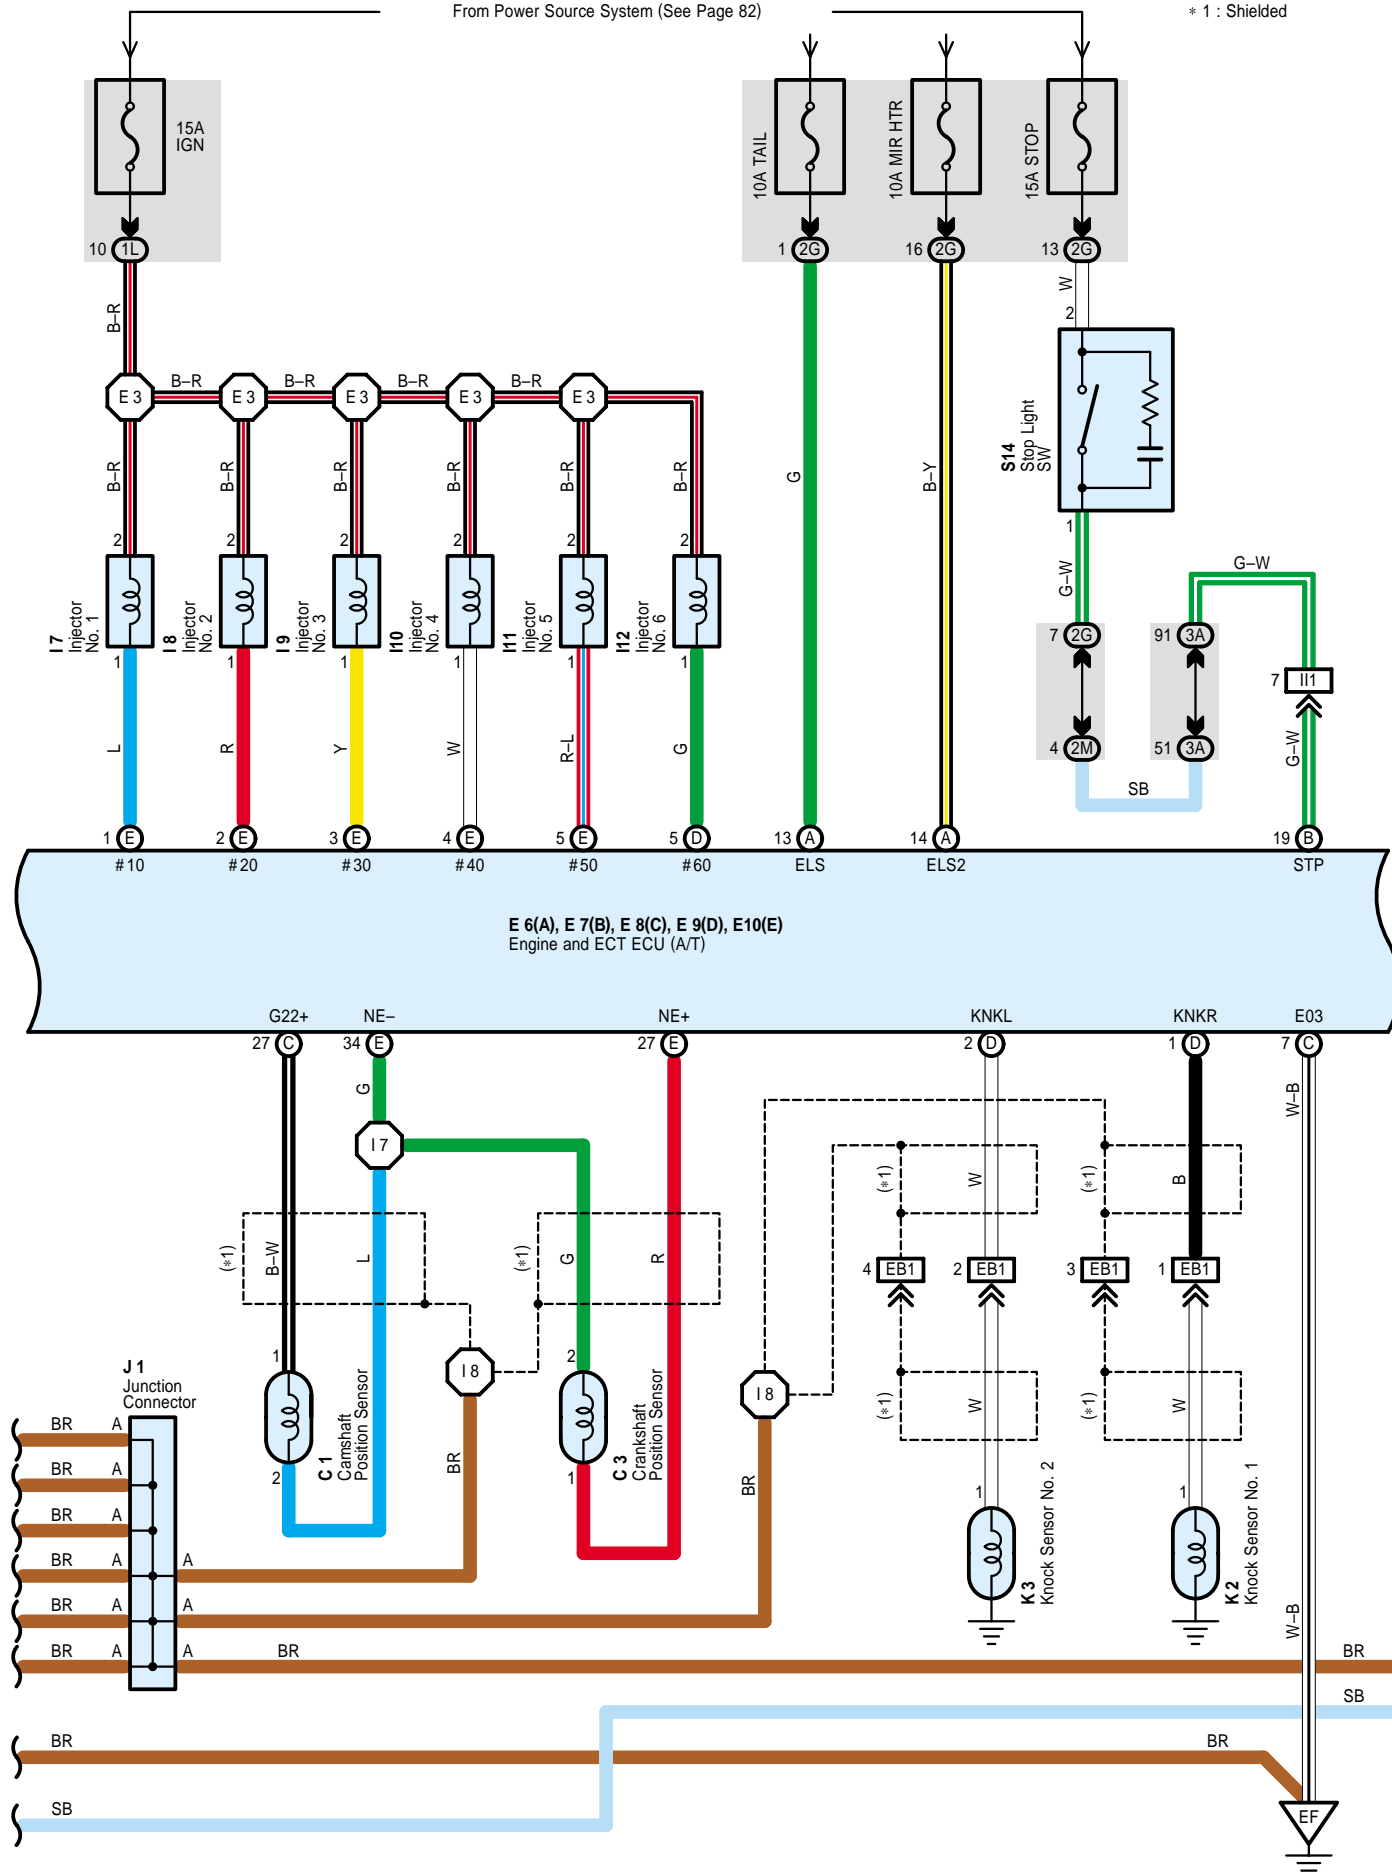

Engine Control (1MZ-FE)

From Power Source System (See Page 82)

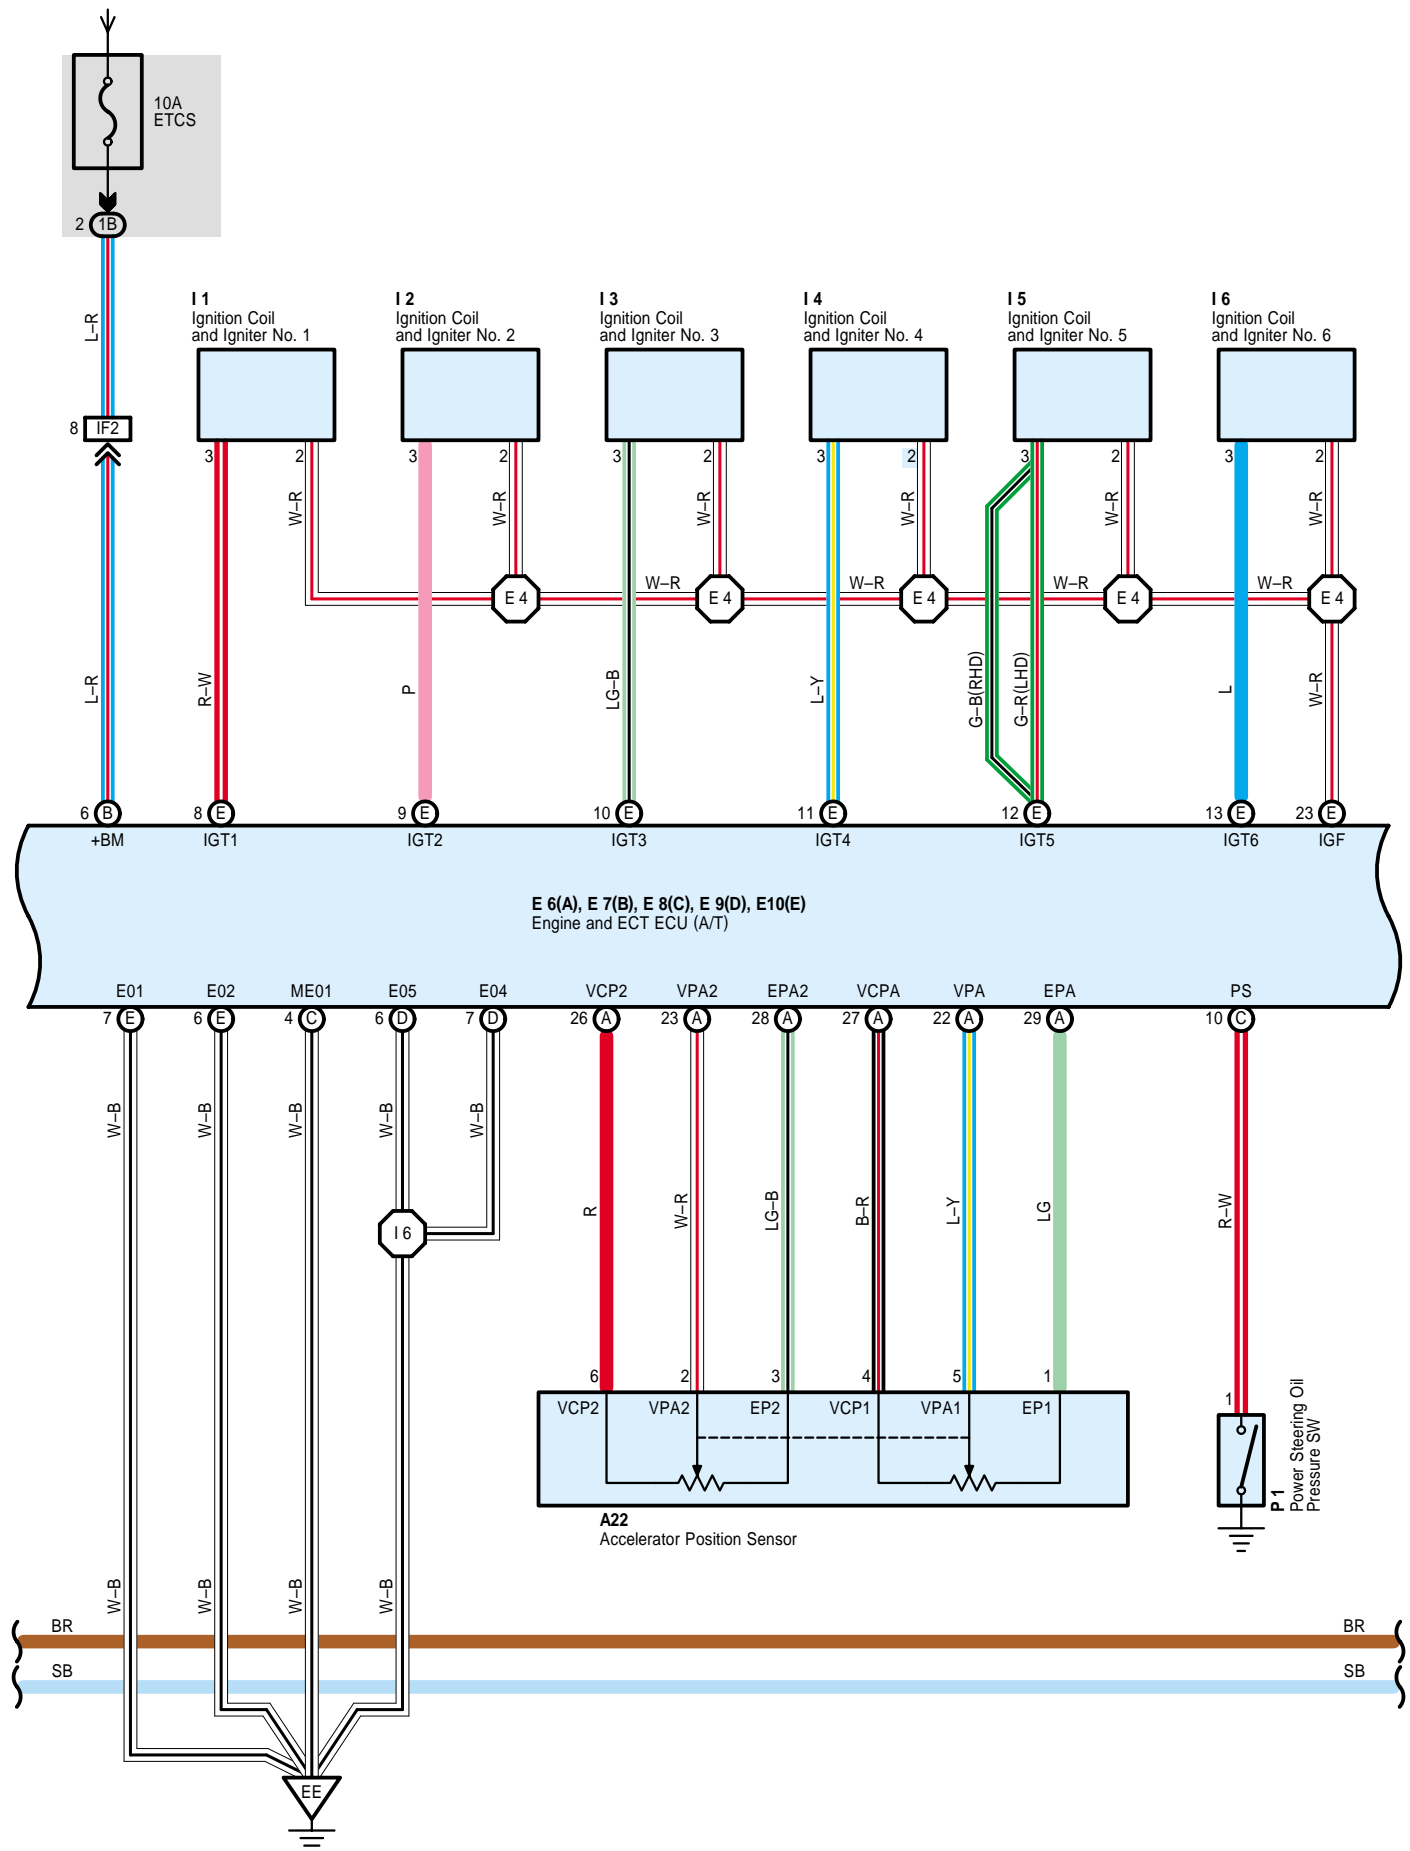

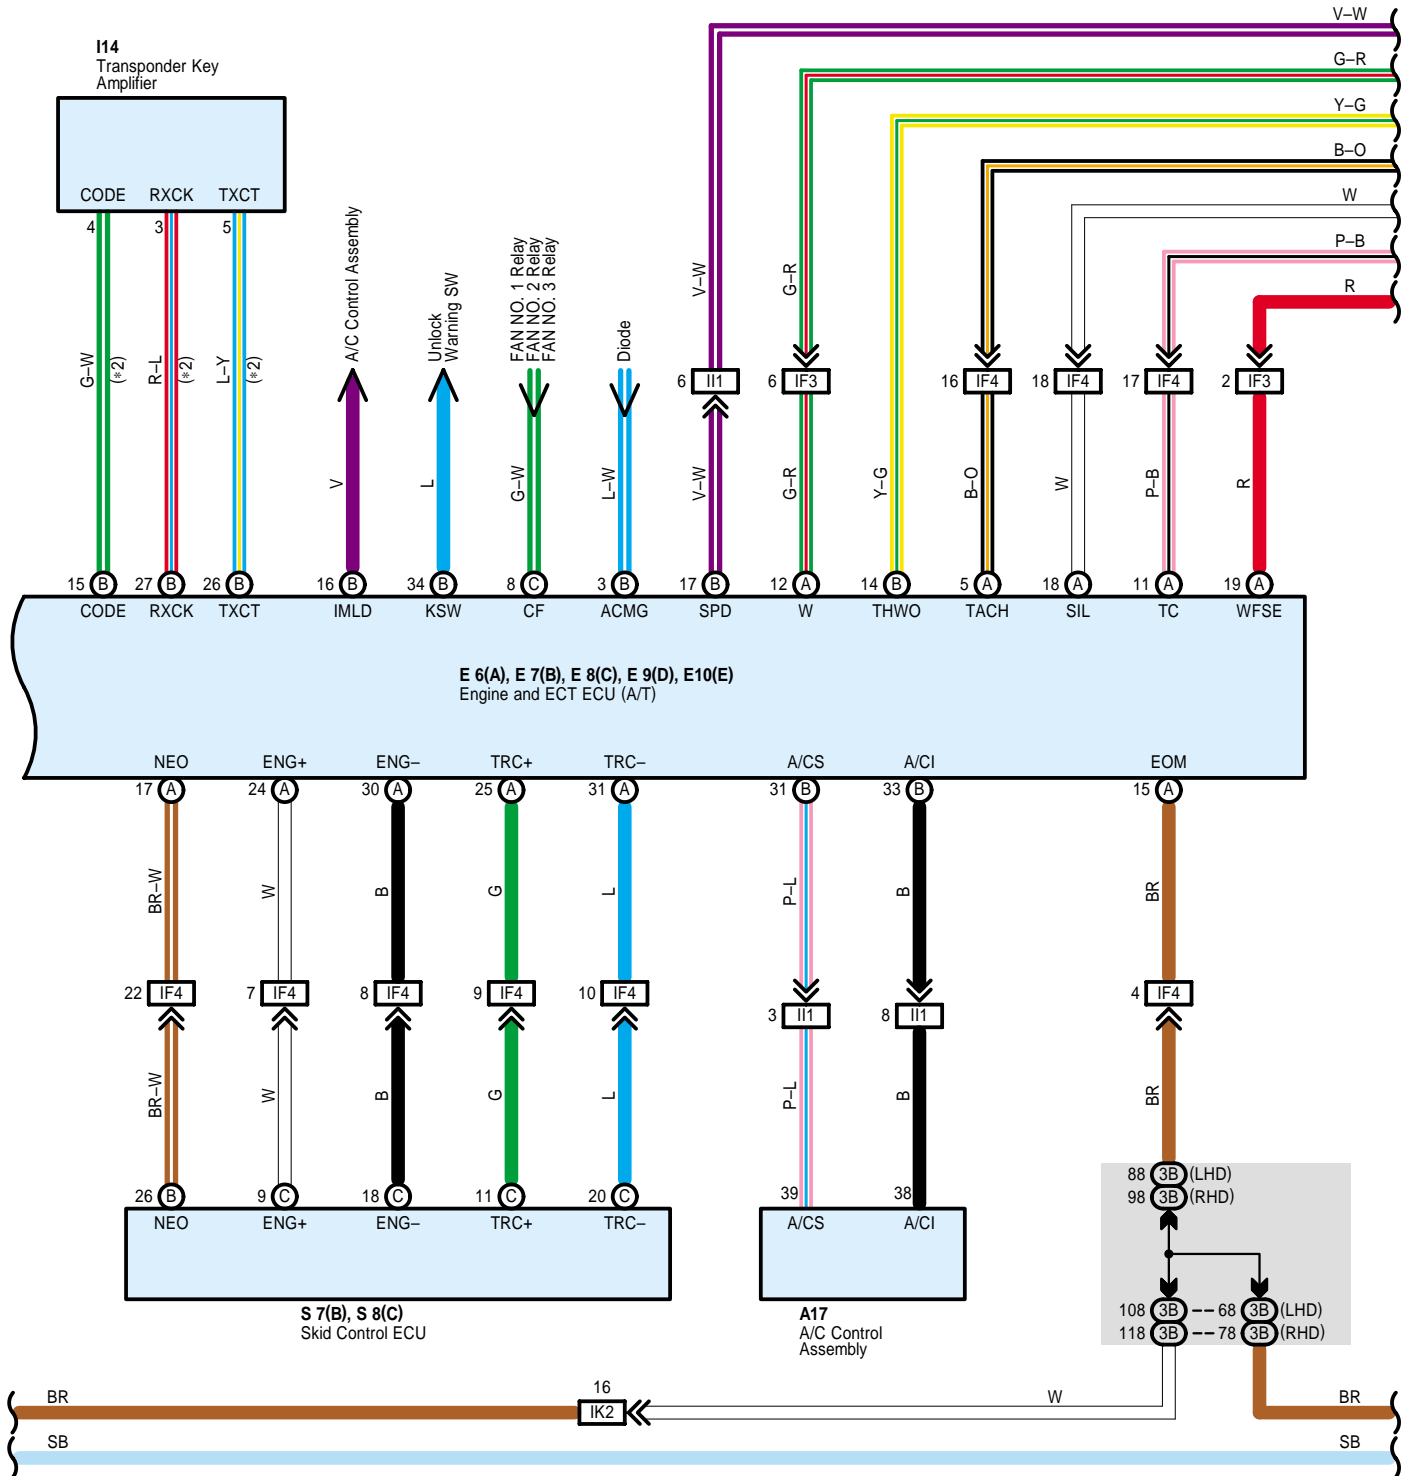

Engine Control (1MZ-FE)

From Power Source System (See Page 82)

