

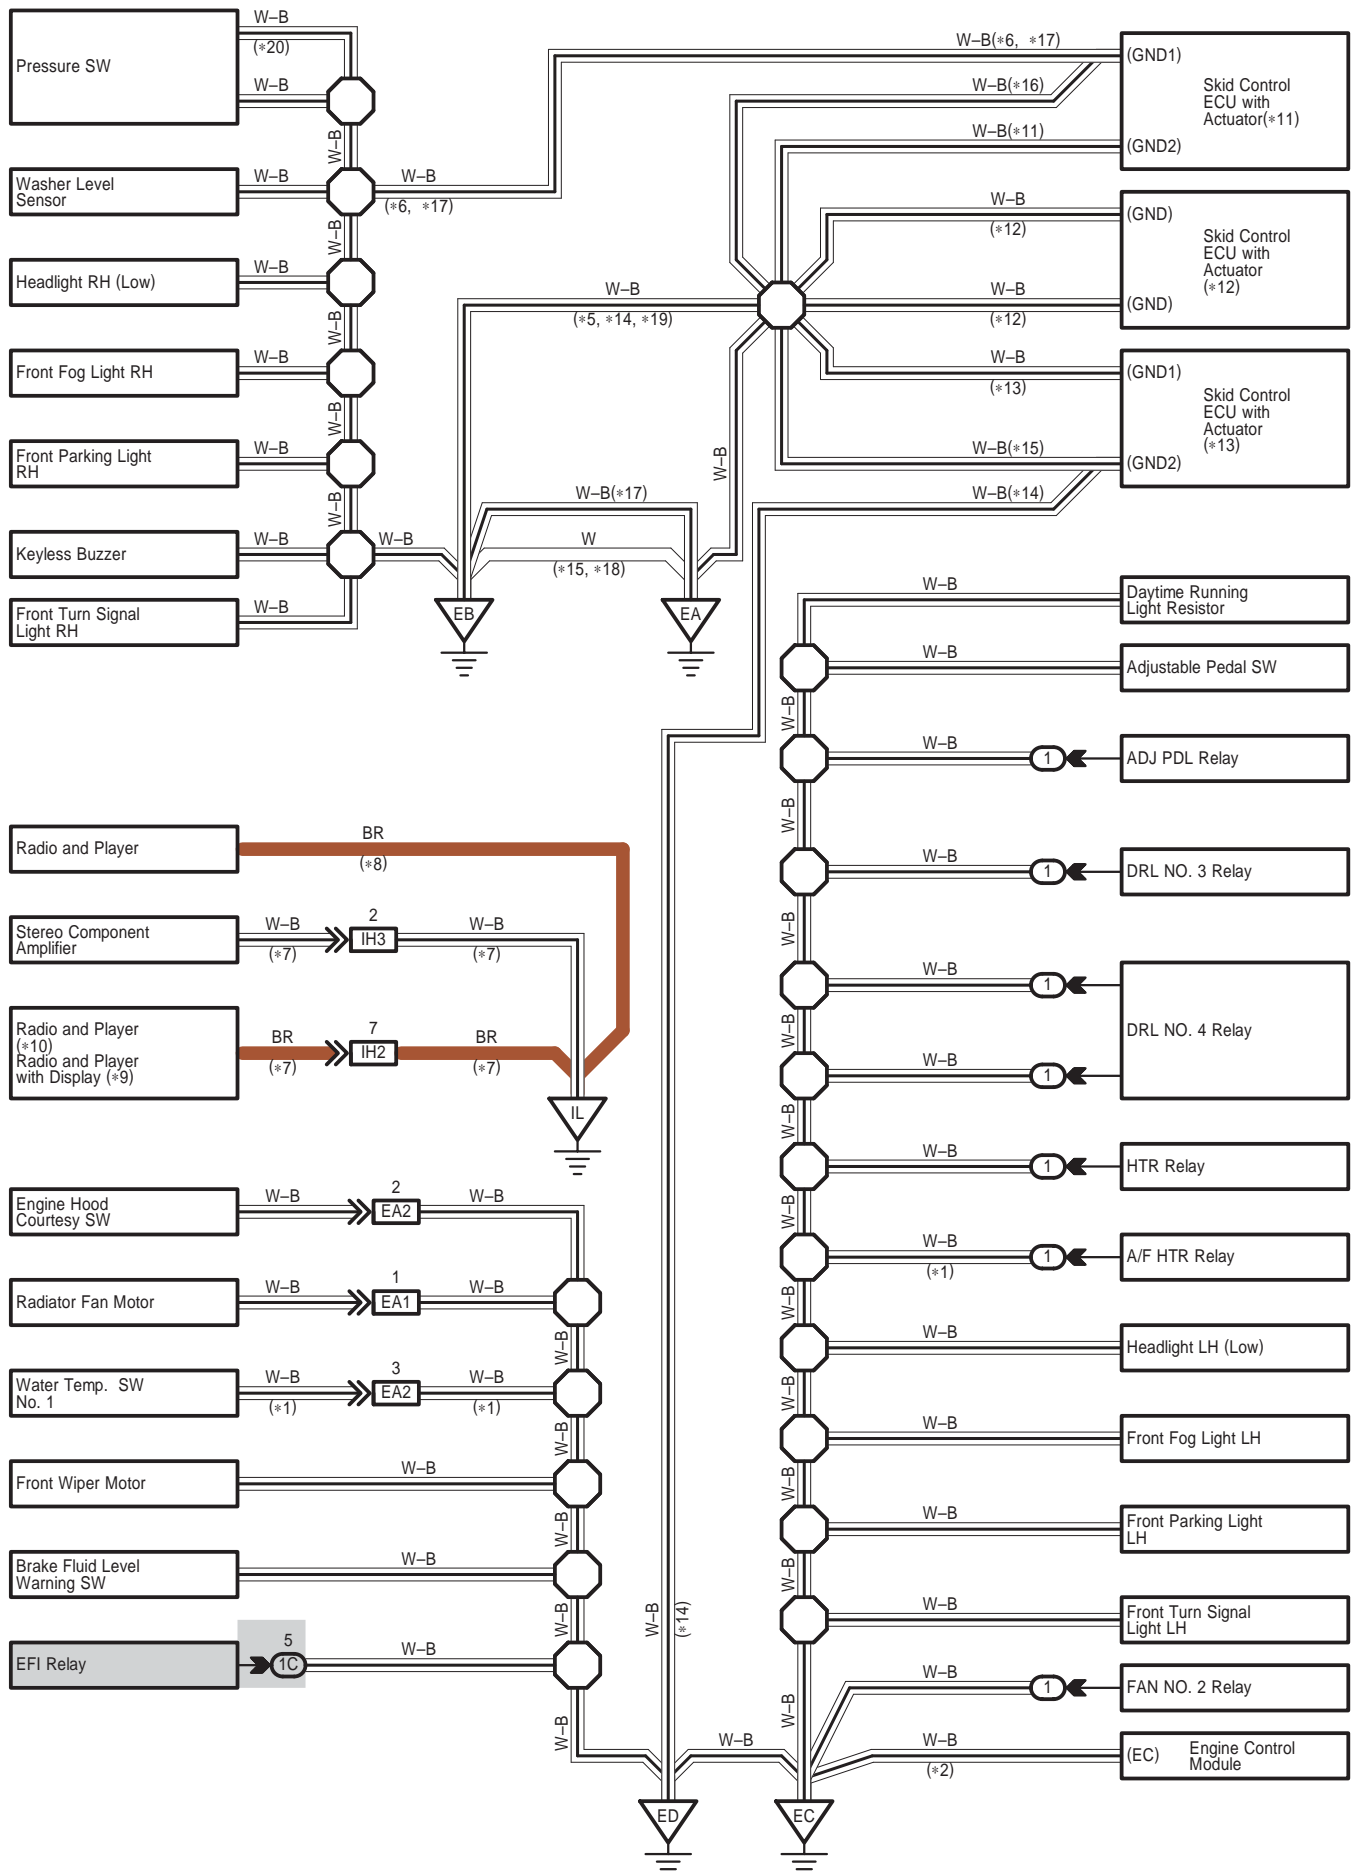



# I GROUND POINT

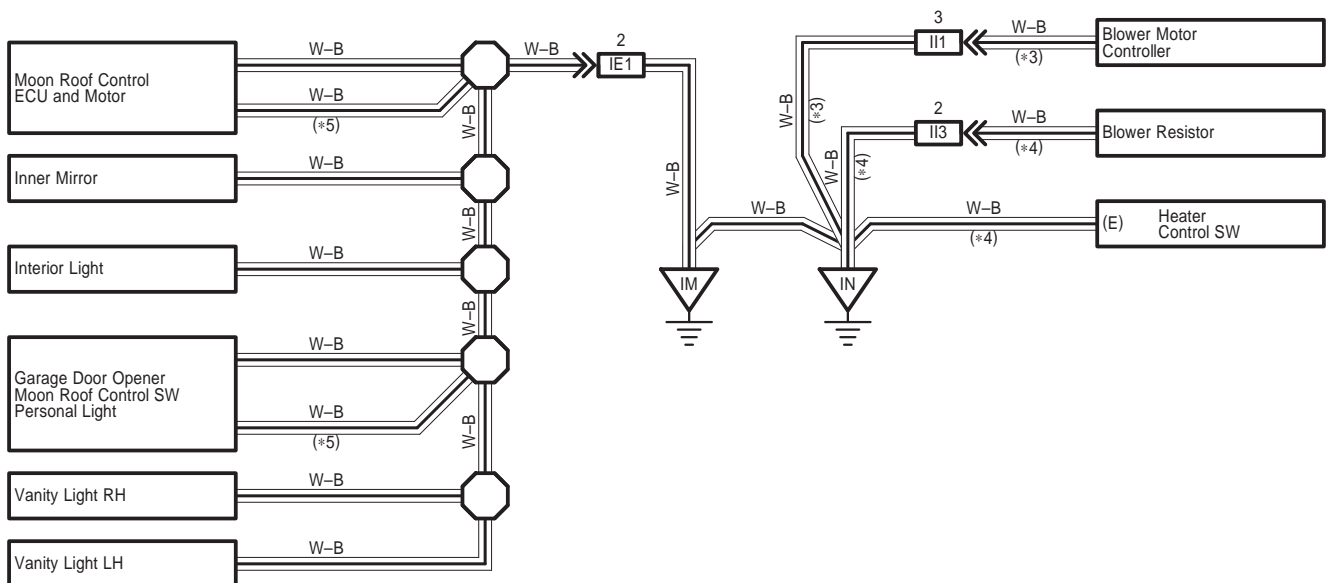


- \* 1 : 1MZ-FE, 3MZ-FE
- \* 2 : 2AZ-FE
- \* 3 : Automatic A/C
- \* 4 : Manual A/C
- \* 5 : TMC Made
- \* 6 : TMMK Made
- \* 7 : Separate Type Amplifier
- \* 8 : Built-in Type Amplifier
- \* 9 : w/ Navigation System
- \* 10 : w/o Navigation System
- \* 11 : w/ VSC
- \* 12 : TMC Made w/o VSC
- \* 13 : TMMK Made w/o VSC
- \* 14 : \*13 w/ Power Adjustable Pedals
- \* 15 : \*13 w/o Power Adjustable Pedals
- \* 16 : w/ VSC TMC Made 2AZ-FE
- \* 17 : w/ VSC TMC Made 1MZ-FE, w/ VSC TMC Made 3MZ-FE
- \* 18 : w/ VSC TMMK Made 2AZ-FE
- \* 19 : w/ VSC TMMK Made 1MZ-FE, w/ VSC TMMK Made 3MZ-FE
- \* 20 : Automatic A/C, Manual A/C 1MZ-FE, Manual A/C 3MZ-FE

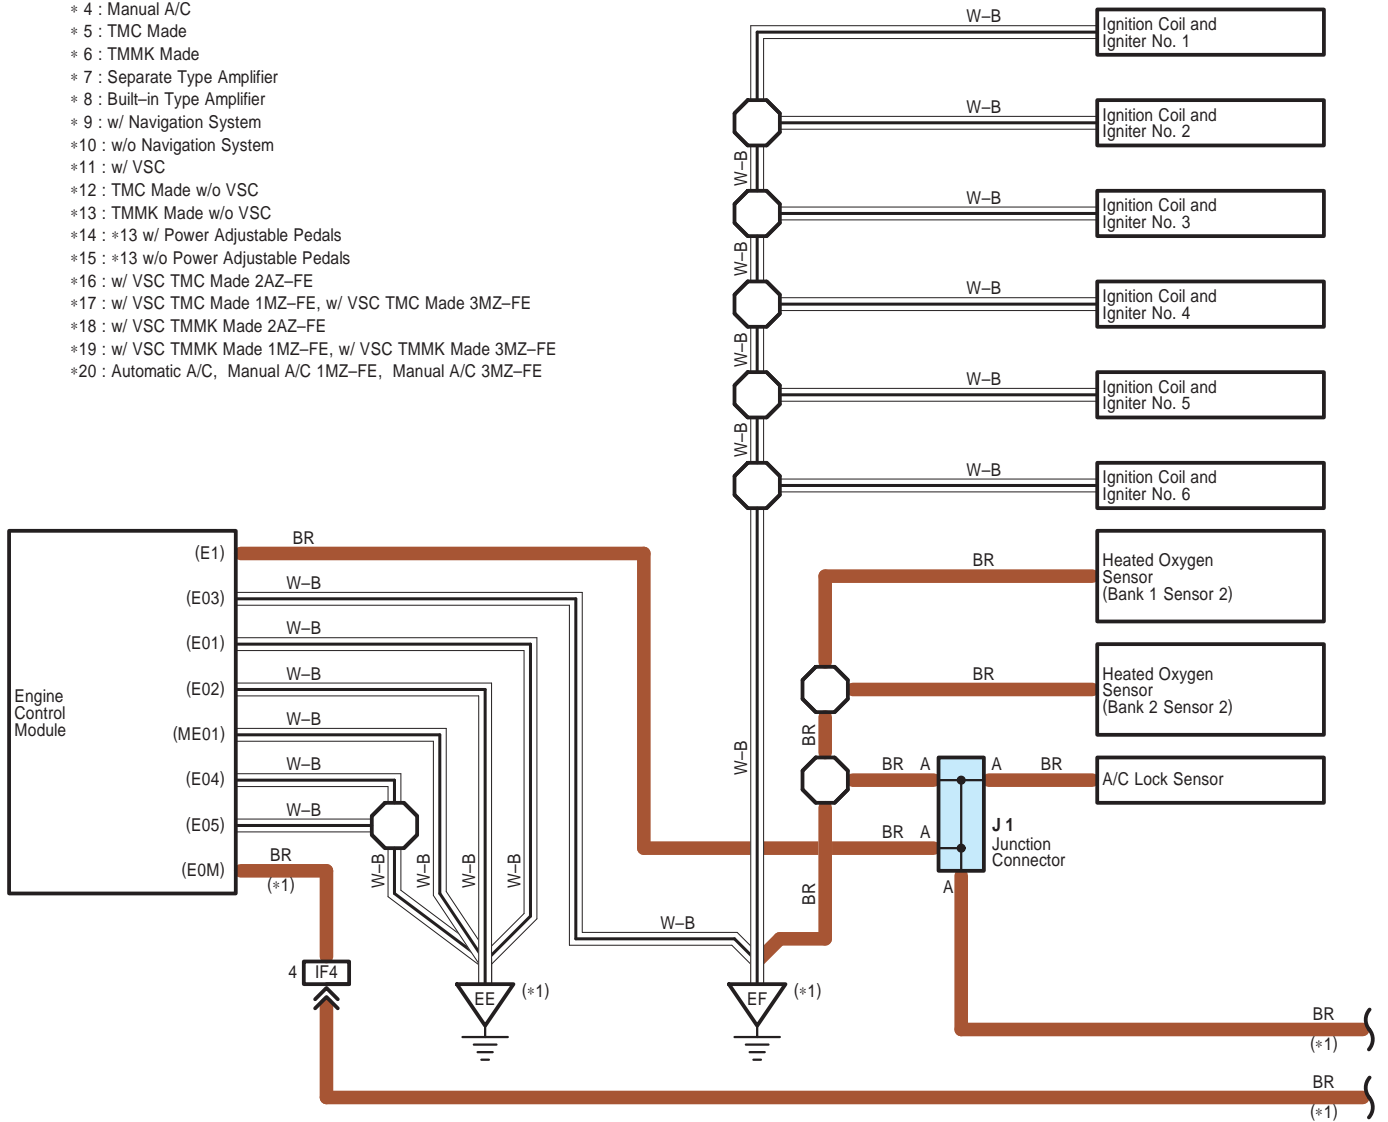


# I GROUND POINT

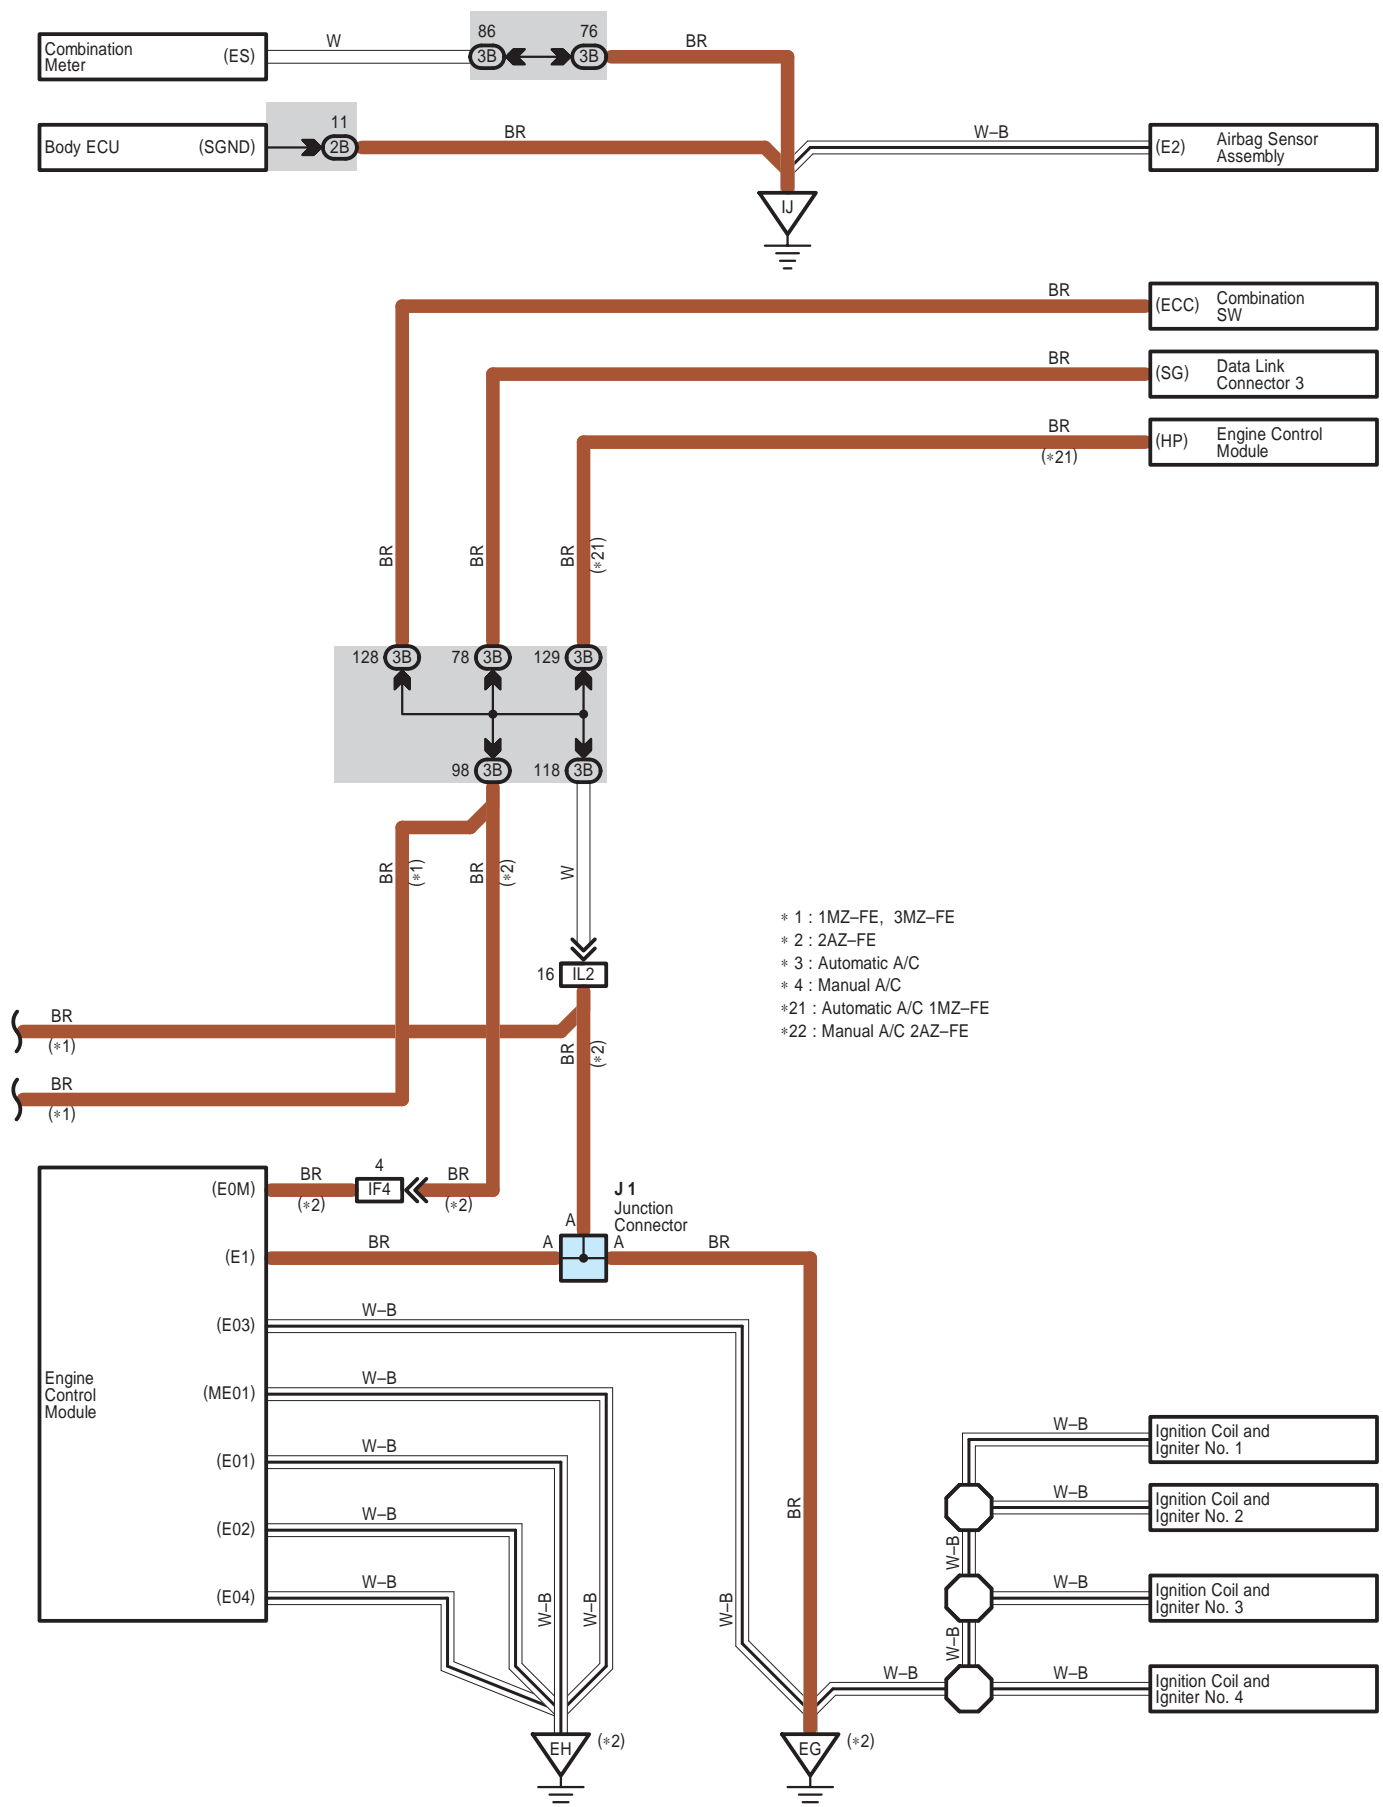


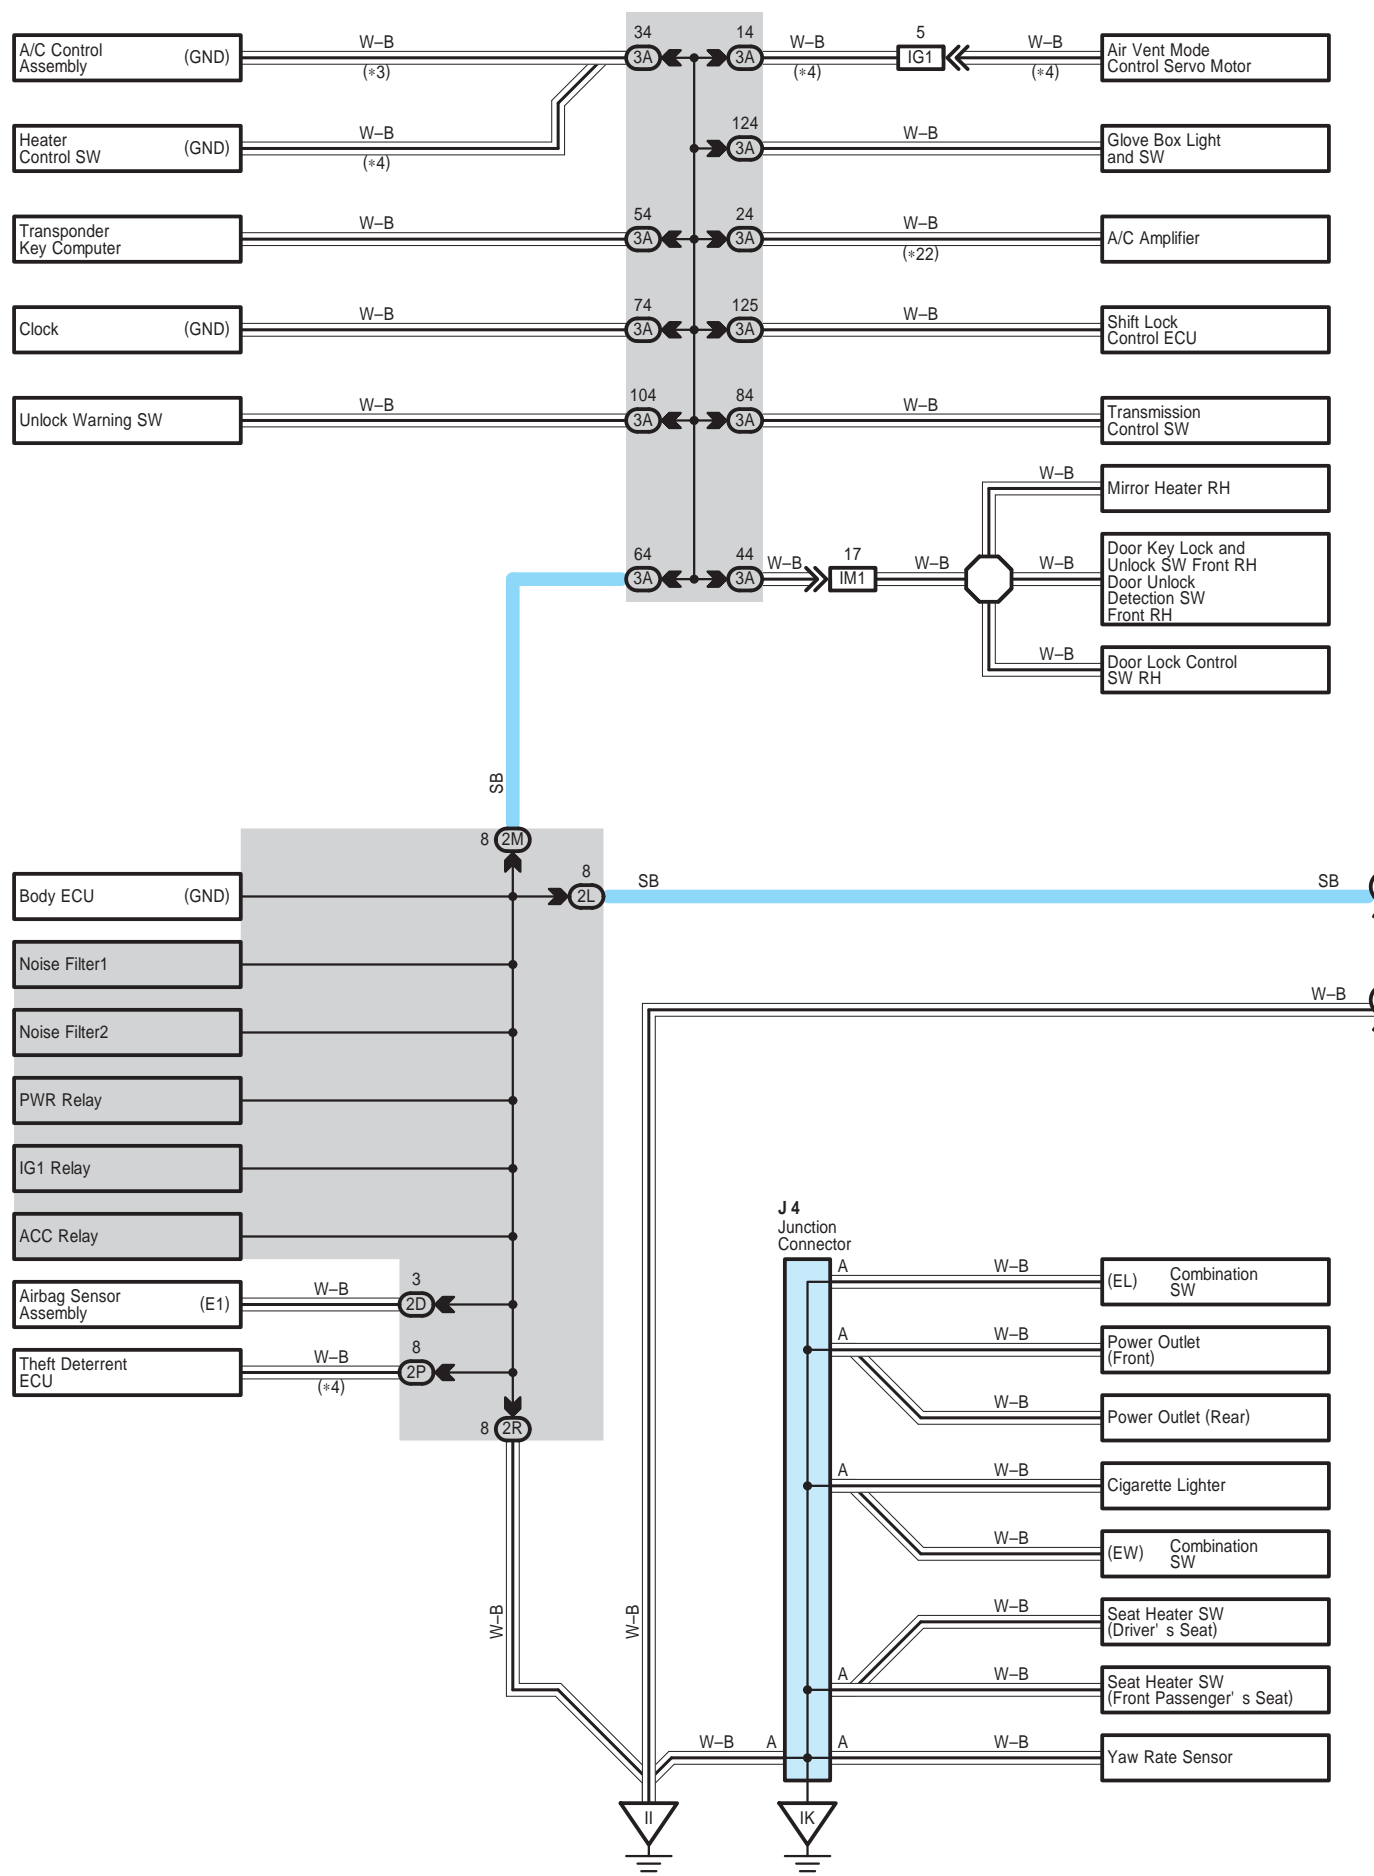

# I GROUND POINT

- \* 5 : TMC Made
- \* 6 : TMMK Made
- \*21 : Automatic A/C 1MZ-FE
- \*23 : w/ Power Seat
- \*24 : w/o Power Seat
- \*25 : w/ Rear Spoiler
- \*26 : w/o Rear Spoiler

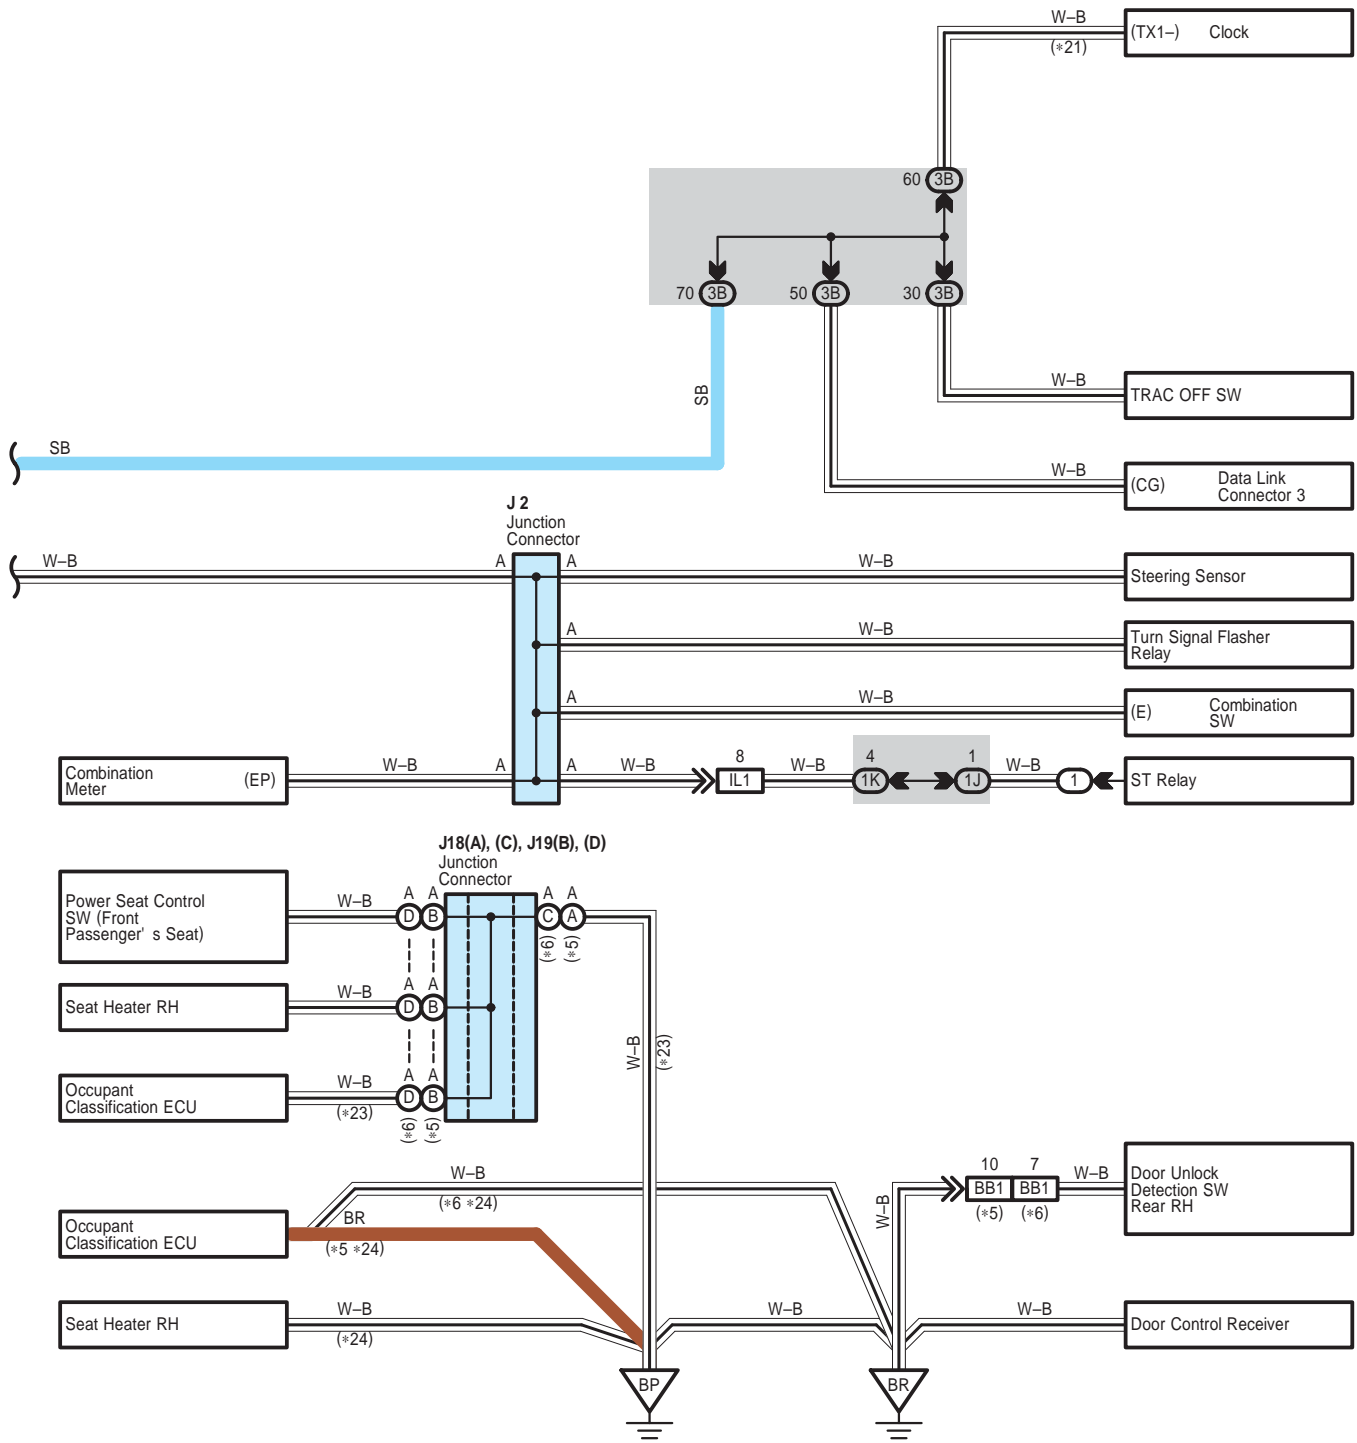

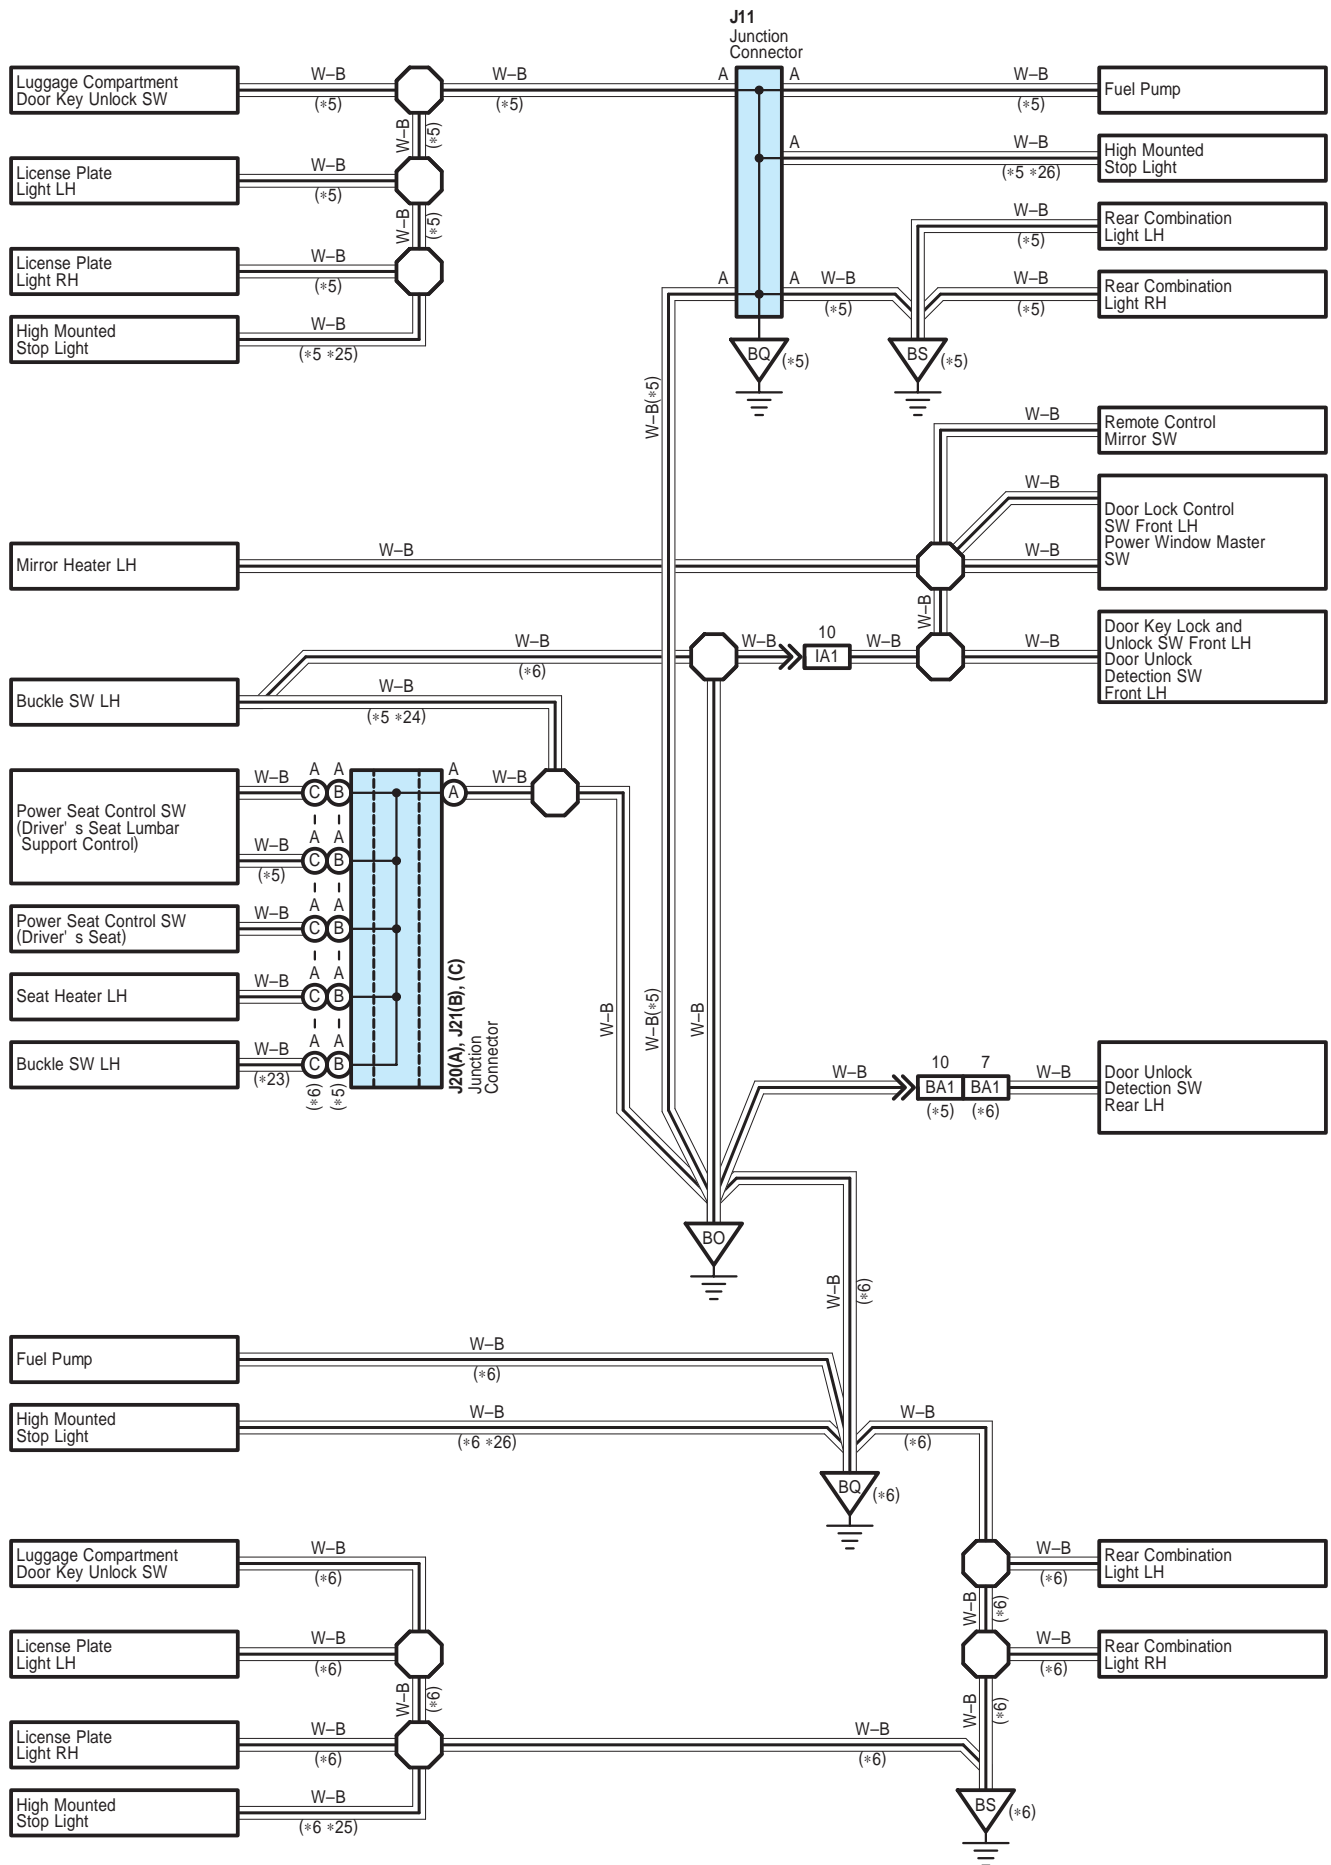

# I GROUND POINT

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
J1	43	J18	C	46 (*3)	
J2	43	J19	B	46 (*3)	
J4	43		D	46 (*3)	
J11	44	J20	A	46 (*3)	
J18	A			47 (*4)	

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
1K	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2D		
2L	29	
2M		
2P		
2R		
3A	34	
3B		

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	48 (*1)	Engine Room Main Wire and Engine Room No.2 Wire (Radiator Side Support LH)
	49 (*2)	
EA2	48 (*1)	
	49 (*2)	
IA1	50	Front Door LH Wire and Floor Wire (Left Kick Panel)
IE1	50	Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar)
IF4	50	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IG1	50	Instrument Panel Wire and Engine Room Main Wire (Instrument Panel Brace LH)
IH2	50	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IH3		
II1	51	Instrument Panel Wire and Instrument Panel No.3 Wire (Behind the Glove Box)
II3		
IL1	51	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL2		
IM1	51	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	52	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	52	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

\* 1 : 1MZ-FE, 3MZ-FE      \* 2 : 2AZ-FE      \* 3 : w/ Power Seat      \* 4 : w/o Power Seat



## : Ground Points

Code	See Page	Ground Points Location
EA	48 (*1)	Right Fender
	49 (*2)	
EB	48 (*1)	
	49 (*2)	
EC	48 (*1)	Left Fender
	49 (*2)	
ED	48 (*1)	
	49 (*2)	
EE	48 (*1)	Left Side of Cylinder Head
EF	48 (*1)	Right Side of Cylinder Head
EG	49 (*2)	Left Side of Cylinder Head
EH	49 (*2)	Intake Side of Cylinder Block
II	50	Cowl Side Panel LH
IJ	50	Instrument Panel Brace LH
IK		
IL	50	Instrument Panel Brace RH
IM	50	Instrument Panel Reinforcement RH
IN		
BO	52	Under the Driver's Seat
BP	52	Under the Front Passenger's Seat
BQ	52	Front Side of Rear Quarter Wheel House LH
BR	52	Front Side of Rear Quarter Wheel House RH
BS	52	Lower Back Panel Center

\* 1 : 1MZ-FE, 3MZ-FE      \* 2 : 2AZ-FE      \* 3 : w/ Power Seat      \* 4 : w/o Power Seat