



REAR FLOOR PAN (ASSY) REPLACEMENT

1. REMOVE BODY LOWER BACK PANEL ([See page BP-73](#))
2. REMOVE REAR FLOOR NO.3 CROSSMEMBER ([See page BP-79](#))
3. REMOVE REAR FLOOR PAN
 - (a) After removing the rear floor pan reinforcement, remove the rear floor pan.

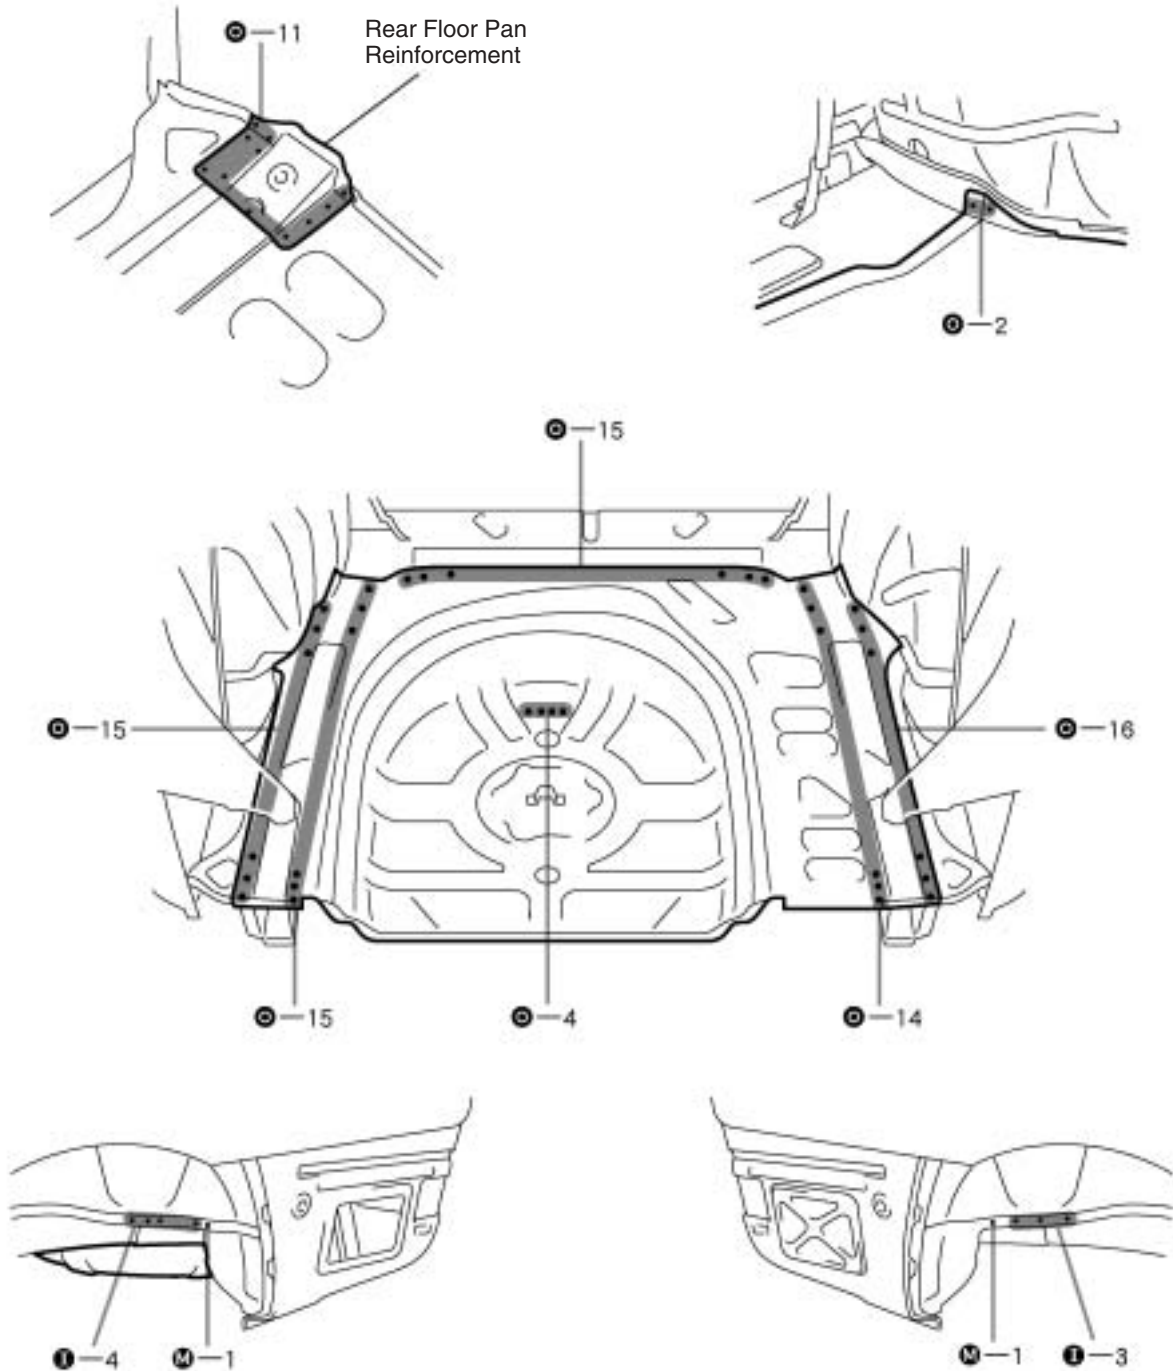

4. INSTALL REAR FLOOR PAN

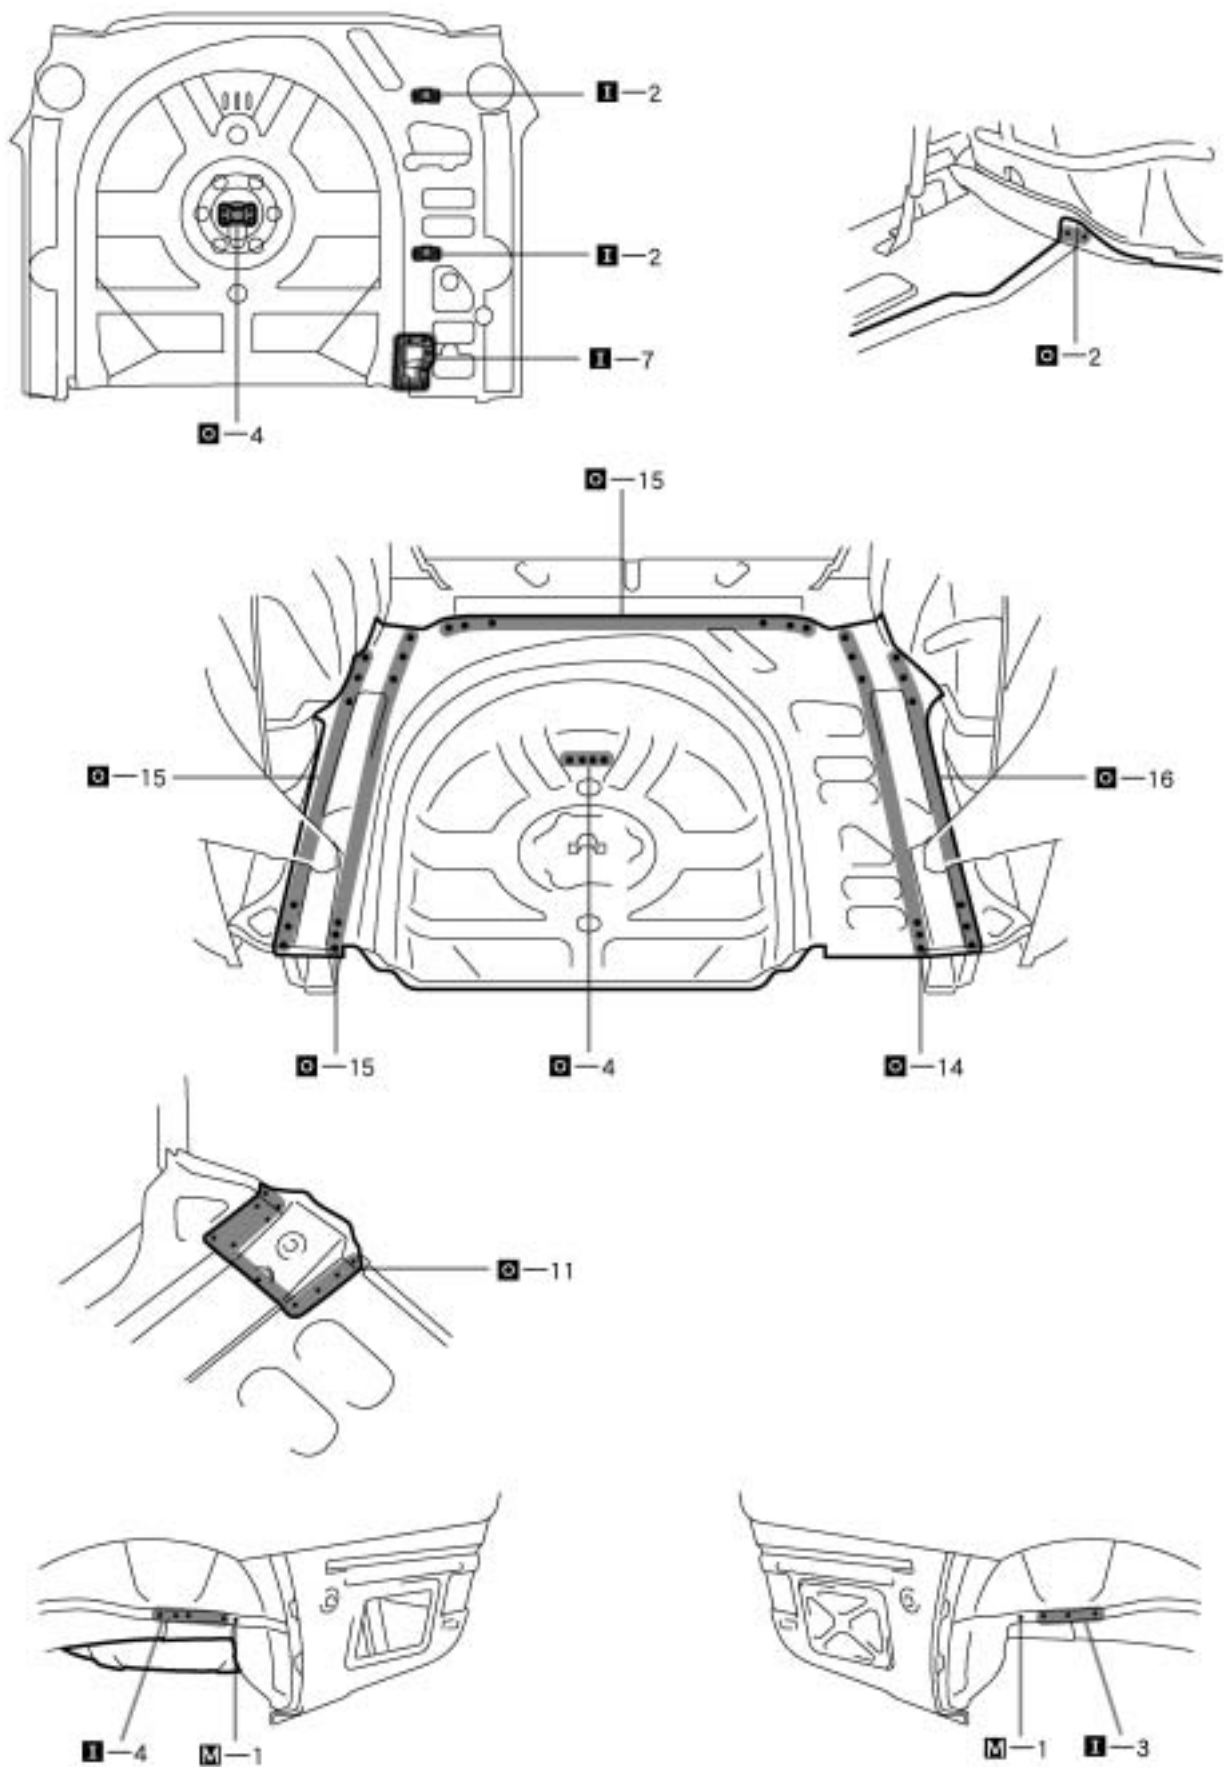

5. INSTALL REAR FLOOR NO.3 CROSSMEMBER ([See page BP-79](#))
6. INSTALL BODY LOWER BACK PANEL ([See page BP-73](#))
7. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT ([See page PC-1](#))
8. APPLYING UNDER COATING ([See page PC-6](#))
9. INSTALL SILENCER SHEET ([See page PC-11](#))
10. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.