


INSPECTION

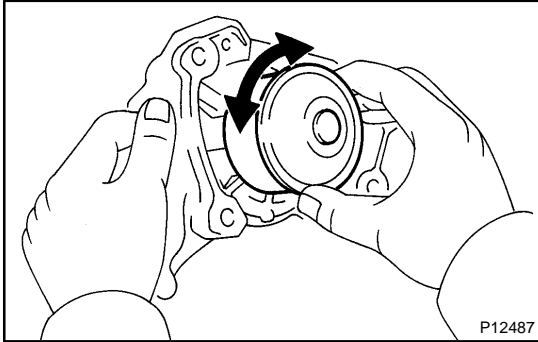

1. INSPECT WATER PUMP ASSY

- (a) Visually check the drain hole for coolant leakage.
- (b) Turn the pulley, and check that the water pump bearing moves smoothly and noiselessly.

If the bearing moves roughly or noisily, replace the water pump.